

IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

OPTIC REPLACEMENT

- A- UNFASTEN THE VISOR SET SCREW USING AN ALLEN KEY (**INCLUDED**) AND REMOVE THE VISOR. **DO NOT REMOVE THE SET SCREW.**
 - B- REMOVE THE PROTECTIVE FILM ON THE LENS AND SET THE LENS INTO THE OPTIC HOLDERS PINS THEN SCREW THE OPTIC HOLDER ON THE FIXTURE. *THE LENS GLOSSY SIDE MUST BE FACING OUTWARD.
 - C- SCREW THE OPTIC HOLDER BACK ON THE FIXTURE.
 - D- UNFASTEN THE OPTIC HOLDER (2) SET SCREWS. **DO NOT COMPLETELY REMOVE THE SET SCREW.**
 - E- ROTATE THE OPTIC HOLDER'S FRONT RING UNTIL THE NOTCH IS ALIGNED AND CENTERED WITH THE FIXTURE ARM. DO NOT ROTATE THE OPTIC HOLDER.
 - F- FASTEN THE OPTIC HOLDER (2) SET SCREWS.
 - G- SLIDE THE VISOR ON THE FIXTURE HOLDER AND FASTEN THE SET SCREW. DO NOT OVERTIGHTEN THE SET SCREW. IT MUST SLIGHTLY PRESS ON THE OPTIC HOLDER TO MAINTAIN THE VISOR IN PLACE.
- *MAKE SURE THE VISOR ALIGNMENT DETAIL IS ALIGNED WITH THE OPTIC HOLDER NOTCH BEFORE TIGHTENING.**

