


**IMPORTANT** - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

## INSTALLING PROJECTOR ON TWO CIRCUIT TRACK (120V OR 277V)


FOR USE WITH **TEK SERIES** (120V) TRACK SYSTEM - OR **HTEK SERIES** (277V) TRACK SYSTEM ONLY.

- A- INSERT THE PROJECTOR TRACK ADAPTOR WITH THE POLARITY GROOVE TOWARDS THE POLARITY RIDGE ON THE TRACK AND PUSH INTO THE TRACK UNTIL IT SNAPS INTO PLACE.
- B- TURN THE MECHANICAL FIXING LEVER TO **LOCK** THE PROJECTOR INTO THE TRACK.
- C- SELECT THE DESIRED CIRCUIT WITH THE CIRCUIT SELECTOR SWITCH.

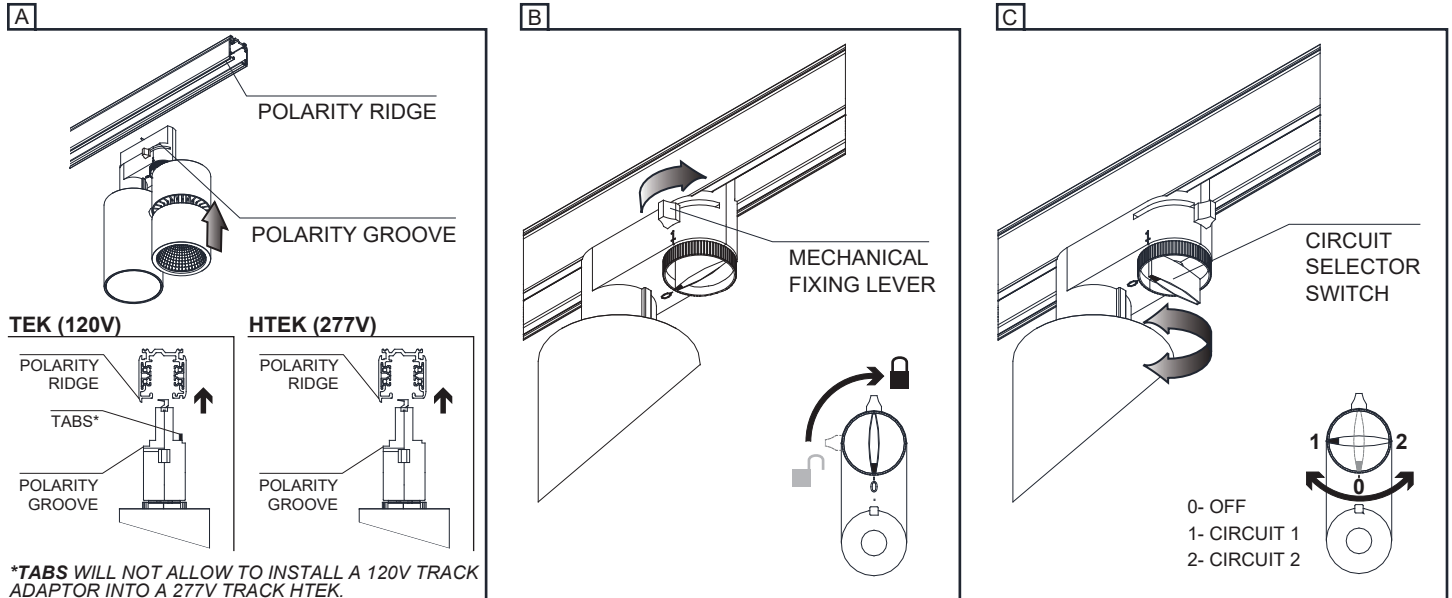


## REMOVING PROJECTOR FROM TRACK

- A- TO REMOVE THE PROJECTOR FROM TRACK, SELECT 0-POSITION (**OFF**) ON THE CIRCUIT SELECTOR SWITCH.
- B- TURN THE MECHANICAL FIXING LEVER AS SHOWN TO **UNLOCK** THE PROJECTOR FROM THE TRACK.
- C- PULL FIRST FROM THE FIXING LEVER END TO REMOVE THE PROJECTOR FROM THE TRACK.

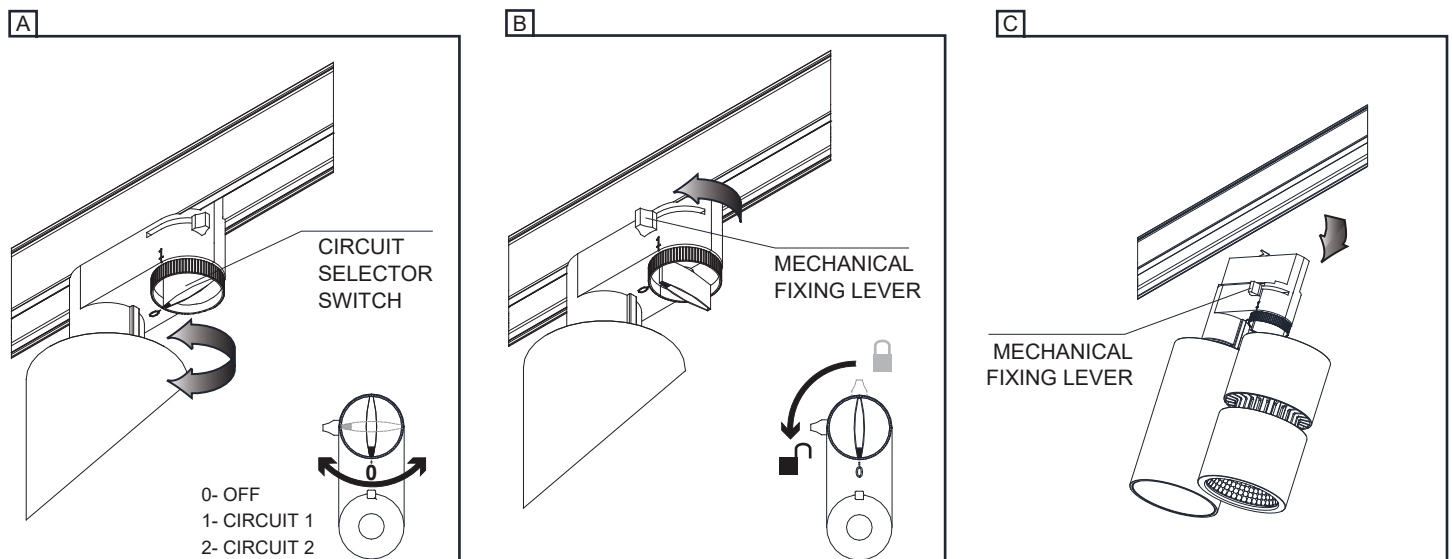


## PAN ANGLE POSITION

- A- SET THE DESIRED PAN POSITION (MAXIMUM OF 330° AXIAL ROTATION).  
B- LOCK THE POSITION WITH THE PAN ADJUSTMENT LOCKING SCREW

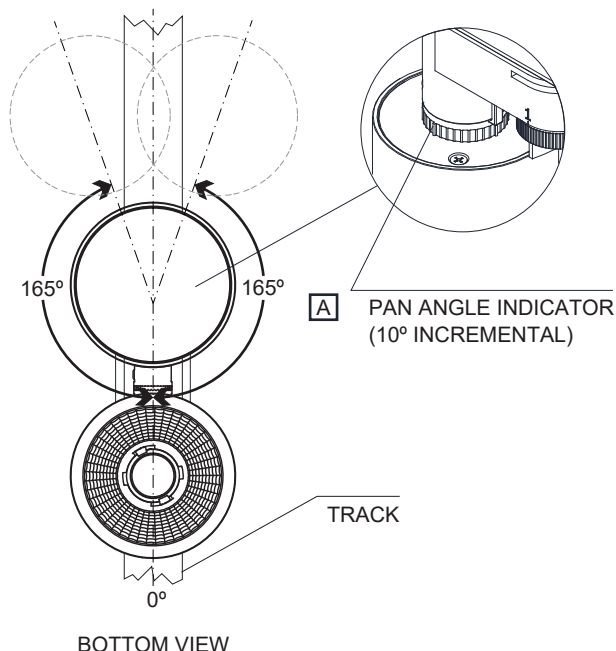


## TILT ANGLE POSITION

- A- SET THE DESIRED TILT POSITION (MAXIMUM OF 90° AXIAL ROTATION) AND LOCK THE POSITION WITH THE  
B- TILT ADJUSTMENT LOCKING SCREW, USING THE 5/64 ALLEN KEY PROVIDED.

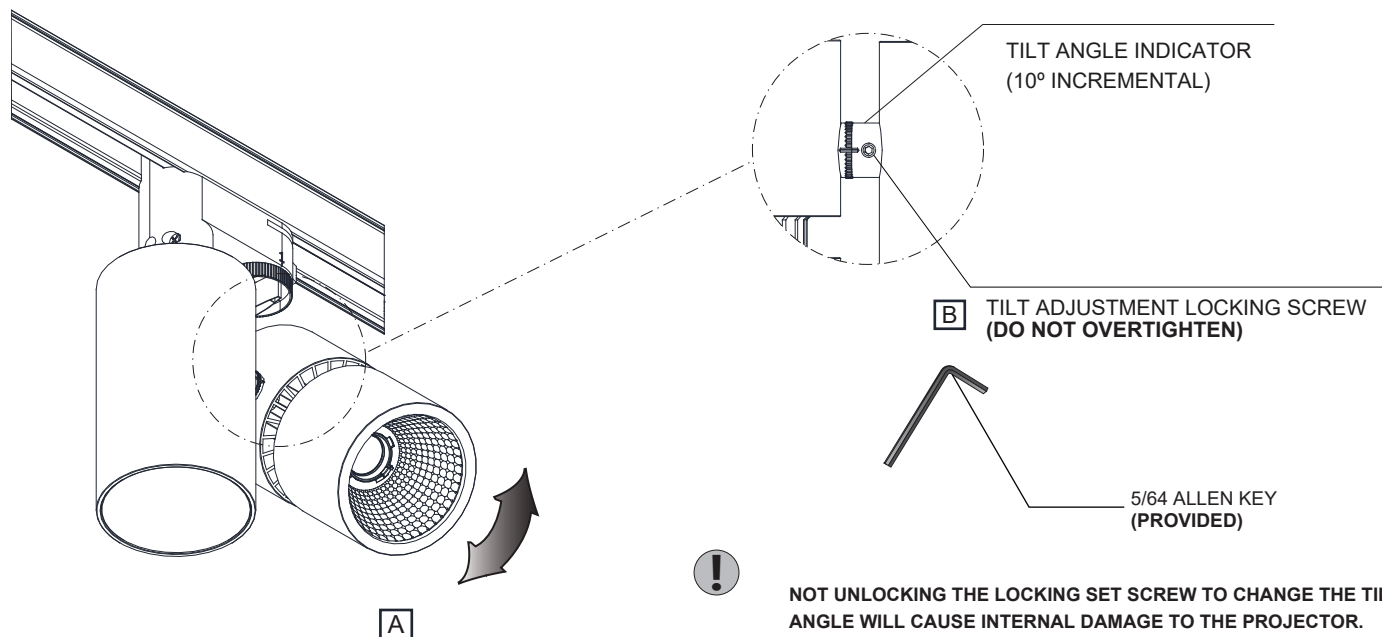

## REPLACING OPTIC FOR REFLECTOR MODELS

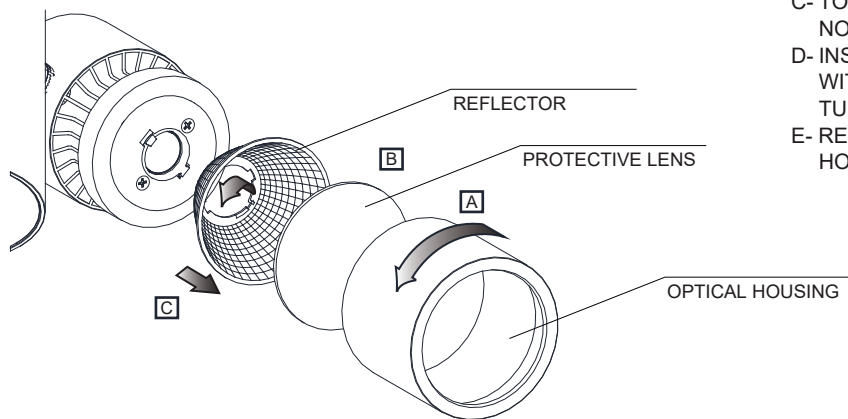

- A- REMOVE OPTICAL HOUSING BY ROTATING COUNTERCLOCKWISE.
- B- LEAVE THE PROTECTIVE LENS IN THE OPTICAL HOUSING.
- C- TO REMOVE THE REFLECTOR ROTATE TO ALIGN NOTCHES AND MOUNTING FINGERS AND PULL.
- D- INSTALL NEW REFLECTOR BY ALIGNING NOTCHES WITH MOUNTING FINGERS AND ROTATE A QUARTER TURN CLOCKWISE.
- E- RE-INSTALL THE PROTECTIVE LENS AND OPTICAL HOUSING TOGETHER BY ROTATING CLOCKWISE.

## ACCESSORIES

- A- TO REPLACE OR ADD AN ACCESSORY, REMOVE OPTICAL HOUSING BY ROTATING IT COUNTERCLOCKWISE.
- B- INSERT ONE OR MORE ACCESSORIES INTO THE OPTIC HOUSING.
- C- RE-INSTALL THE ACCESSORIES AND OPTICAL HOUSING TOGETHER BY ROTATING CLOCKWISE.  
(A MAXIMUM OF 3 ACCESSORIES IN COMBINATION)

