#### POCKET REMOTE MODEL: \$1850, \$1851, \$1880, \$1881


**IMPORTANT -** READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED.

#### ▲ DISCONNECT THE MAIN LINE BEFORE WIRING SECONDARY CONNECTORS.

### SURFACE INSTALLATION WITH FIXTURE WHIP TO REMOTE DRIVER (FW-REM)

- A- PREPARE INSTALLATION SURFACE (SEE DIMENSIONS BELOW). DRILL HOLES FOR TO THE FIXTURE BASE AND CABLE.
- B- UNCLIP THE BASE FROM THE FIXTURE WITH A FLAT SCREWDRIVER.
- C- SECURE THE BASE TO THE SURFACE USING APPROPRIATE ANCHORS AND SCREWS (2 X #8, NOT INCLUDED).
- D- PASS THE WIRE TO THE REMOTE POWER CLASS 2 (NOT INCLUDED). CLIP THE FIXTURE TO THE BASE.
- E- MAKE WIRE CONNECTIONS, RED (+), BLACK (-), TO THE REMOTE POWER CLASS 2 USING TWIST CONNECTORS (NOT INCLUDED).

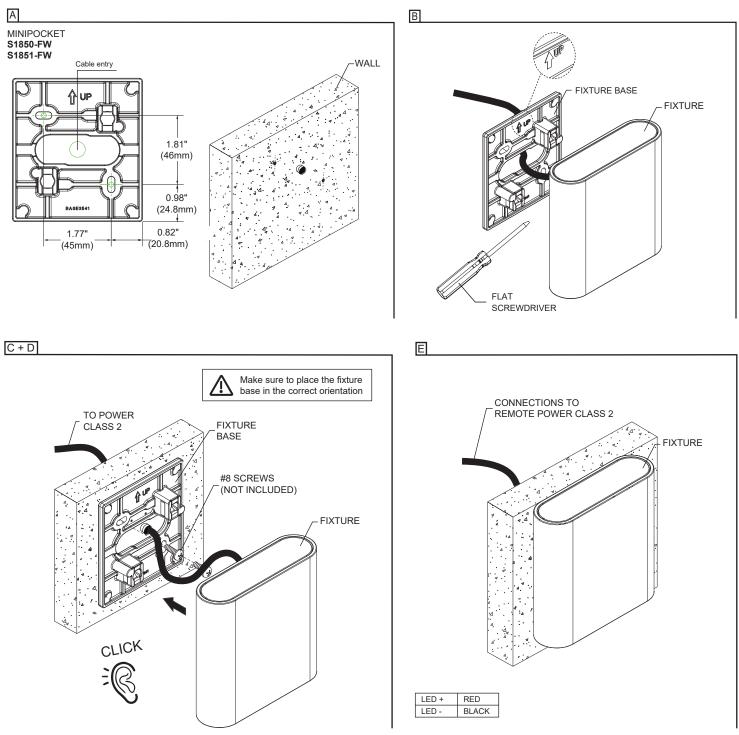


INS-825-REM SISTEMALUX

Last update: February 17, 2025 CG - R2 9320 Boul. St-Laurent, suite 100, Montréal (Québec) Canada H2N 1N7 P.: 514.523.1339 F.: 514.525.6107 www.sistemalux.com

# POCKET REMOTE

## 4" JUNCTION BOX INSTALLATION WITH REMOTE DRIVER (JB-REM)


- A- INSTALL THE MOUNTING PLATE ON THE JUNCTION BOX USING 2 PAN SCREWS #8-32 (NOT INCLUDED)
- B- UNCLIP THE BASE FROM THE FIXTURE WITH A FLAT SCREWDRIVER.
- C- FASTEN THE BASE ON THE MOUNTING PLATE USING 2 PHILLIPS SCREWS (INCLUDED).
- D- MAKE WIRE CONNECTIONS, RED (+), BLACK (-), USING WATERTIGHT TWIST CONNECTORS (NOT INCLUDED).
- ONCE CONNECTED, PUSH THE WIRES BACK INTO THE JUNCTION BOX.
- E- CLIP THE FIXTURE TO THE BASE.

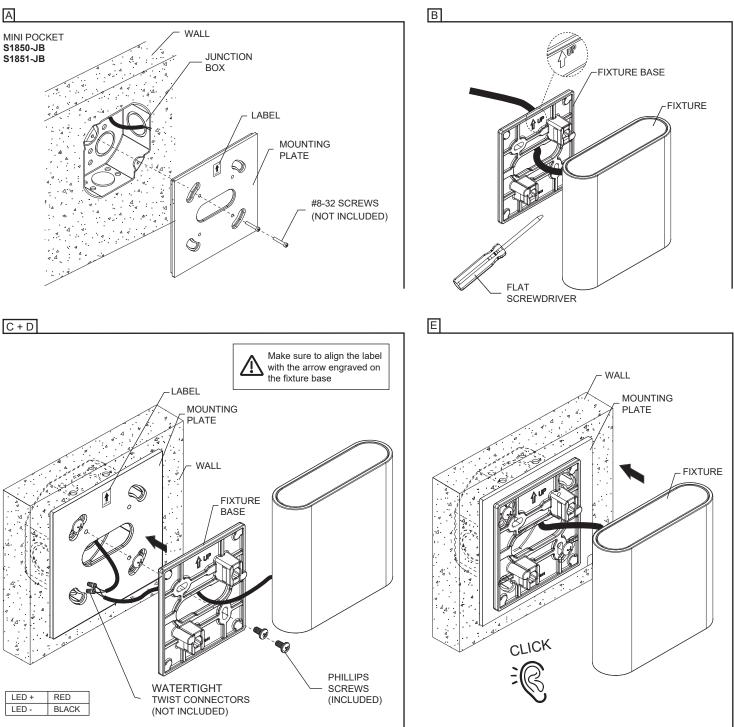

# POCKET REMOTE

### SURFACE INSTALLATION WITH FIXTURE WHIP TO REMOTE DRIVER (FW-REM)

- A- PREPARE INSTALLATION SURFACE (SEE DIMENSIONS BELOW). DRILL HOLES FOR TO FIXTURE BASE AND CABLE.
- B- UNCLIP THE BASE FROM THE FIXTURE WITH A FLAT SCREWDRIVER.
- C- SECURE THE BASE TO THE SURFACE USING APPROPRIATE ANCHORS AND SCREWS (3 X #8, NOT INCLUDED).
- D- PASS THE WIRE TO THE REMOTE POWER CLASS 2 (NOT INCLUDED). CLIP THE FIXTURE TO THE BASE.
- E- MAKE WIRE CONNECTIONS, RED (+), BLACK (-), TO THE REMOTE POWER CLASS 2 USING TWIST CONNECTORS (NOT INCLUDED).

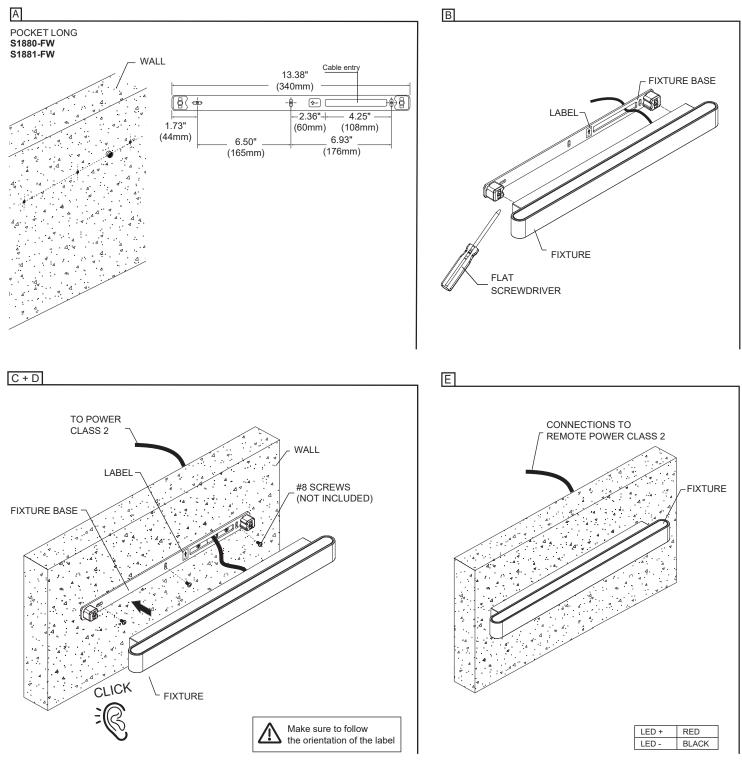


INS-825-REM **SISTEMALUX** 


#### **POCKET REMOTE** MODEL: S1850, S1851, S1880, S1881

PAGE: 4 of 7

## 4" JUNCTION BOX INSTALLATION WITH REMOTE DRIVER (JB-REM)

- A- INSTALL THE CROSSBAR ON THE JUNCTION BOX USING 2 PAN SCREWS #8-32. (NOT INCLUDED)
- B- INSTALL THE MOUNTING PLATE ON THE CROSSBAR USING 2 PHILLIPS SCREWS. (INCLUDED).
- USE 2 REINFORCEMENT SCREWS IF NECESSARY.
- C- UNCLIP THE BASE FROM THE FIXTURE WITH A FLAT SCREWDRIVER.

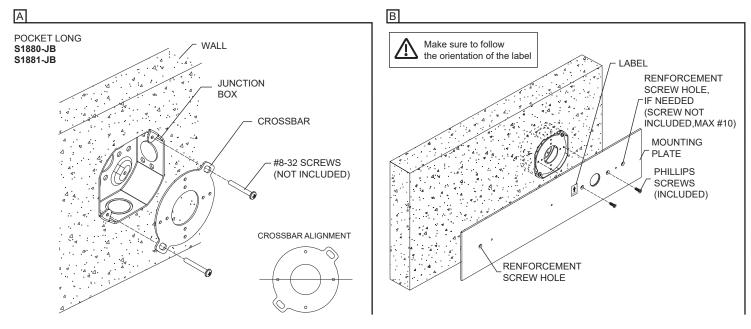

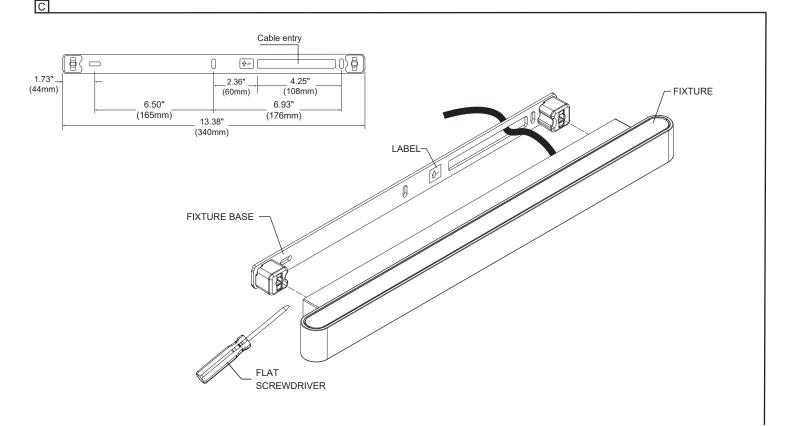



#### POCKET REMOTE MODEL: S1850, S1851, S1880, S1881

## 4" JUNCTION BOX INSTALLATION WITH REMOTE DRIVER (JB-REM)

D- FIX THE BASE ON THE MOUNTING PLATE USING 3 PHILLIPS SCREWS (INCLUDED) AND MAKE WIRES CONNECTIONS, RED (+), BLACK (-), USING WATERTIGHT TWIST CONNECTORS (NOT INCLUDED), ONCE CONNECTED, PUSH THE WIRES BACK INTO THE JUNCTION BOX.
E- CLIP THE FIXTURE TO THE BASE.



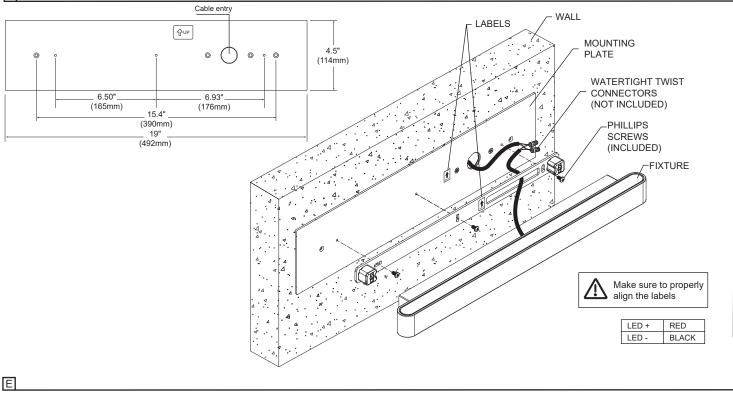


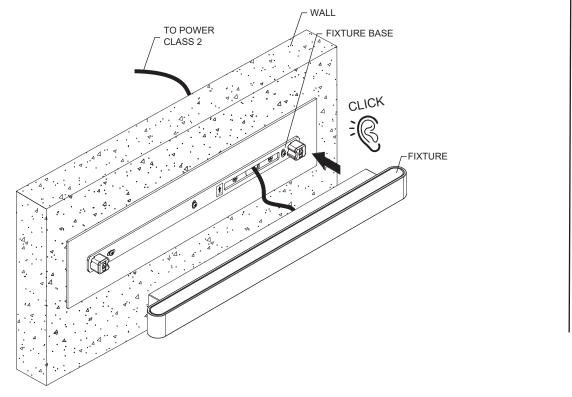

#### **POCKET REMOTE** MODEL: S1850, S1851, S1880, S1881

## J2 JUNCTION BOX INSTALLATION WITH REMOTE DRIVER (J2-REM)

- A- INSTALL THE MOUNTING PLATE ON THE JUNCTION BOX USING 2 X #6-32 PHILLIPS SCREWS (INCLUDED).
- USE 2 REINFORCEMENT SCREWS IF NECESSARY.
- B- UNCLIP THE BASE FROM THE FIXTURE WITH A FLAT SCREWDRIVER.

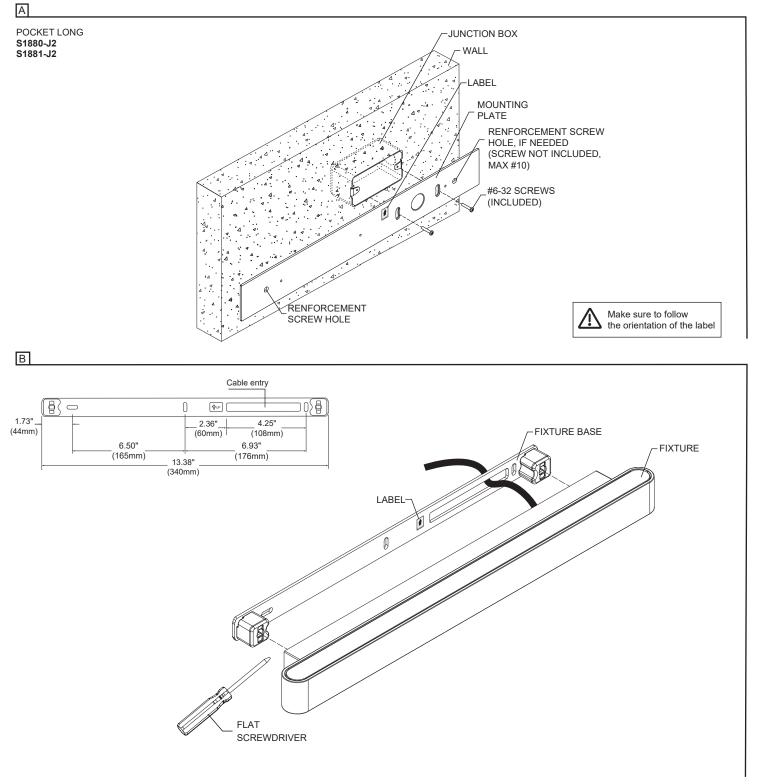

**SISTEMALUX** 

9320 Boul. St-Laurent, suite 100, Montréal (Québec) Canada H2N 1N7 P.: 514.523.1339 F.: 514.525.6107 www.sistemalux.com

## J2 JUNCTION BOX INSTALLATION WITH REMOTE DRIVER (J2-REM)

C- FIX THE BASE ON THE MOUNTING PLATE USING 3 PHILLIPS SCREWS (INCLUDED) AND MAKE WIRES CONNECTIONS, RED (+), BLACK (-), USING WATERTIGHT TWIST CONNECTORS (NOT INCLUDED), ONCE CONNECTED, PUSH THE WIRES BACK INTO THE JUNCTION BOX.
D- CLIP THE FIXTURE TO THE BASE.

