



IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY. CABLE LENGTH IS NOT FIELD ADJUSTABLE, CONTACT FACTORY TO SPECIFY CABLE LENGTH.

INSTALLING PENDANT ON ONE CIRCUIT TRACK (1770SP)

FOR USE WITH **8000 SERIES** TRACK SYSTEM ONLY (120V).

A - PULL THE ADAPTOR HOUSING DOWN TO INSERT IN THE TRACK FOLLOWING INITIAL POSITION SHOWN BELOW.

B - PUSH THE PROJECTOR INTO TRACK AND ROTATE THE TRACK ADAPTOR A QUARTER TURN IN THE PROPER DIRECTION IN ORDER TO ALLOW ELECTRICAL BOUNDING. MAKE SURE THE ADAPTOR IS LOCKED IN PLACE, FOLLOWING FINAL POSITION SHOWN BELOW.

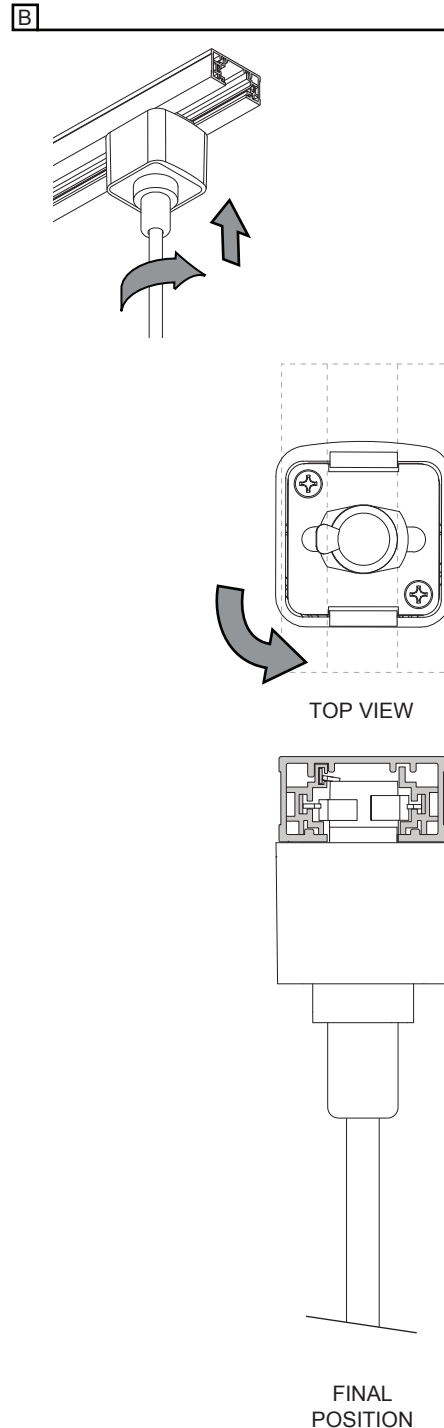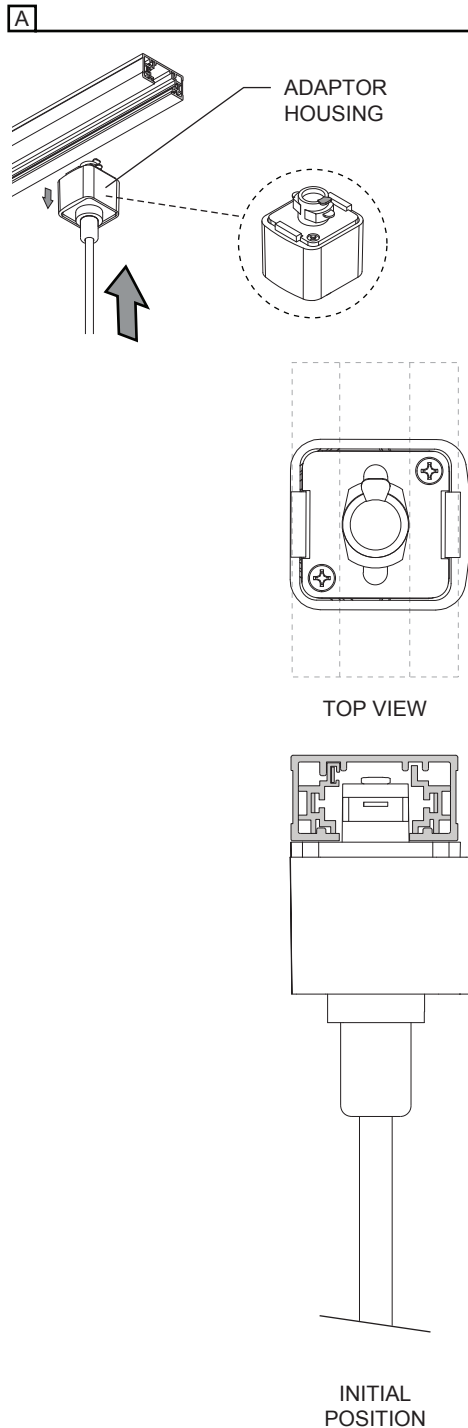


INSTALLING PENDANT ON ONE CIRCUIT TRACK (1780SP, 1790SP)

FOR USE WITH **8000 SERIES** TRACK SYSTEM ONLY (120V).

A - INSERT THE TRACK ADAPTOR IN THE TRACK RESPECTING THE SAME DIRECTION AS SHOWN BELOW.



B - LOCATE THE GROUND CONDUCTOR OF THE TRACK. PUSH THE ADAPTOR INTO TRACK AND ROTATE THE TRACK ADAPTOR A QUARTER TURN IN THE PROPER DIRECTION IN ORDER TO MAKE CONTACT WITH THE GROUND CONTACT TAB OF THE TRACK ADAPTOR. SPRING CLIP HAVE TO BE IN THE TRACK SLOT FOR FINAL POSITION.

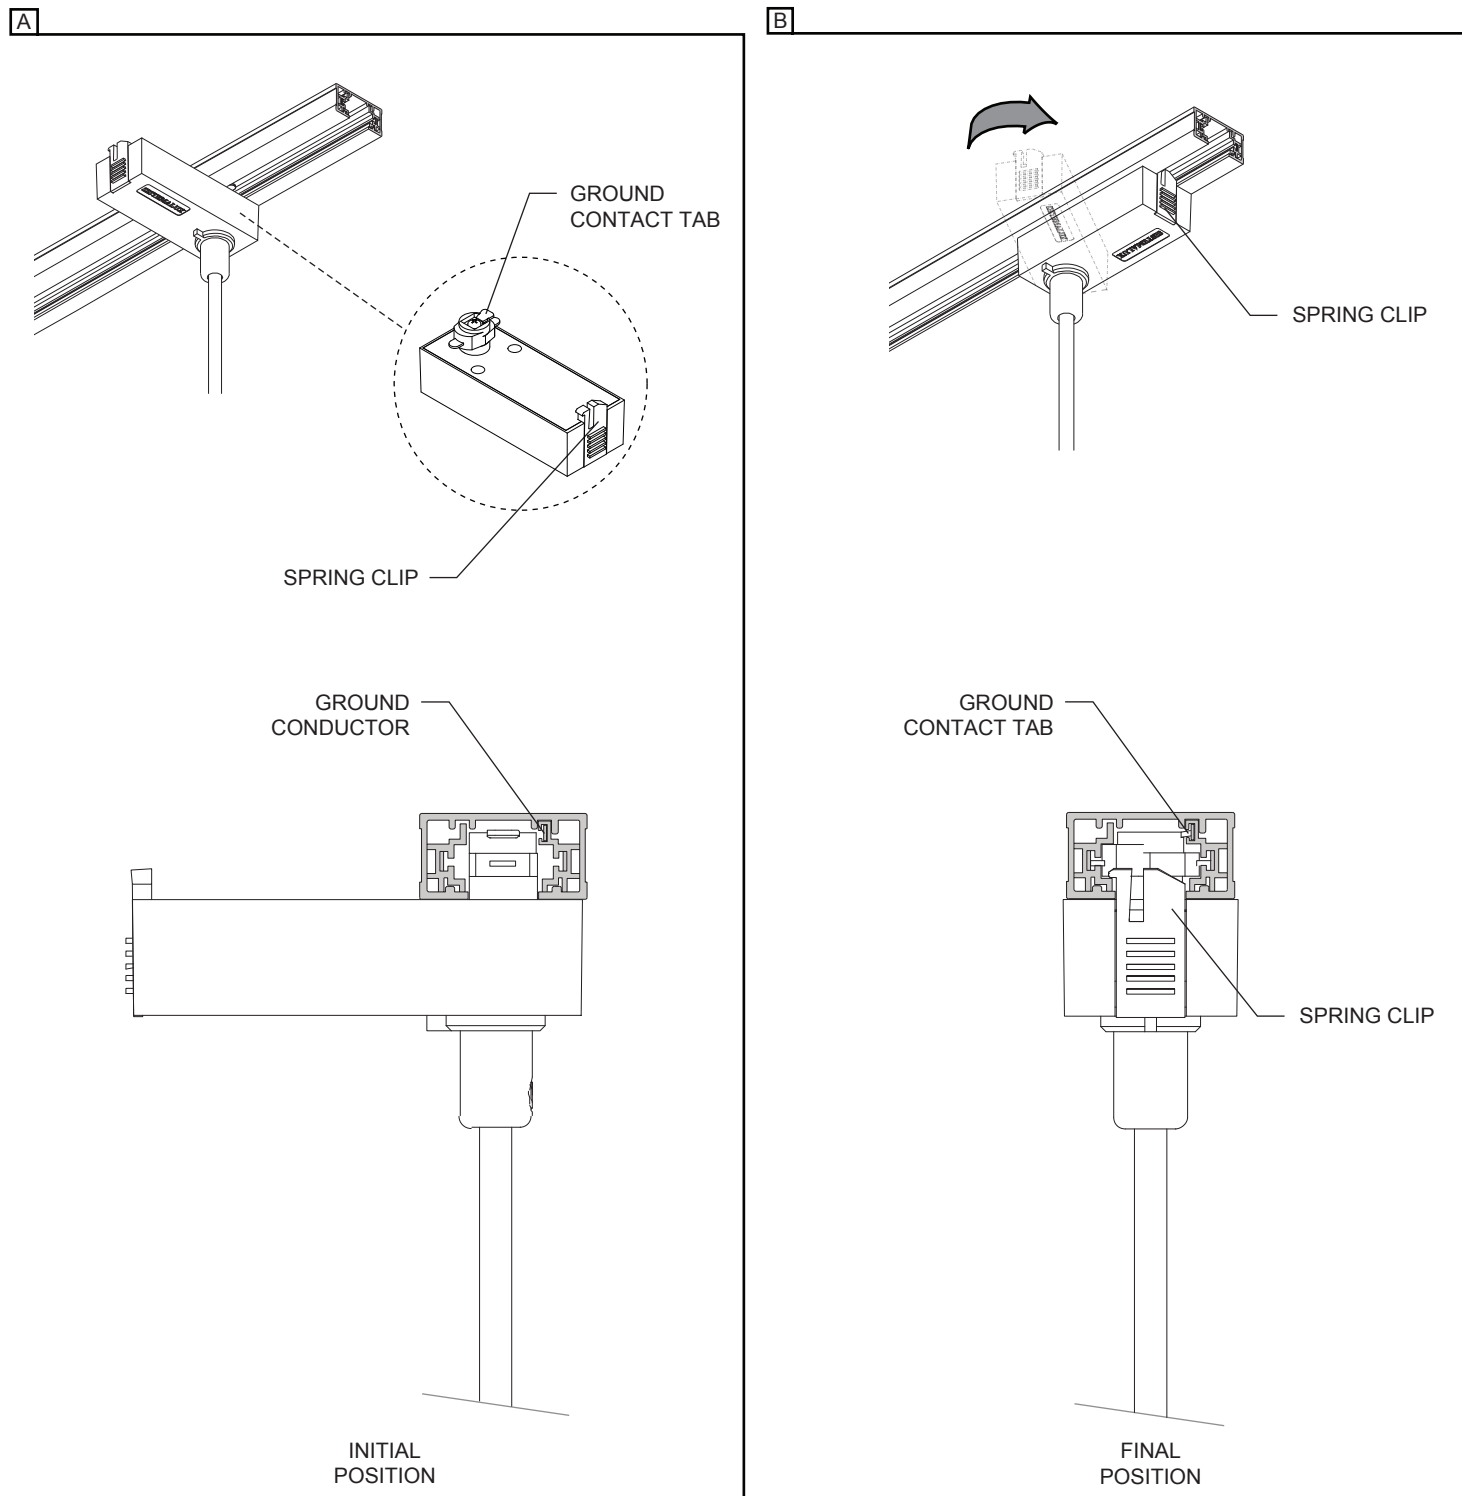

REMOVING PENDANT FROM TRACK (1770SP)

A - PULL DOWN THE TRACK ADAPTOR HOUSING TO UNLOCK IT FROM THE TRACK SLOT.



B - HOLDING THE TRACK ADAPTOR HOUSING DOWN, ROTATE A QUARTER TURN IN ANY DIRECTION AND PULL DOWN THE PROJECTOR TO REMOVE IT FROM THE TRACK.

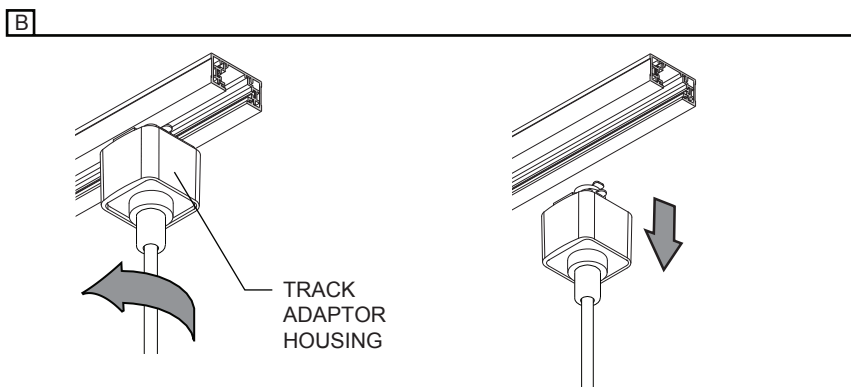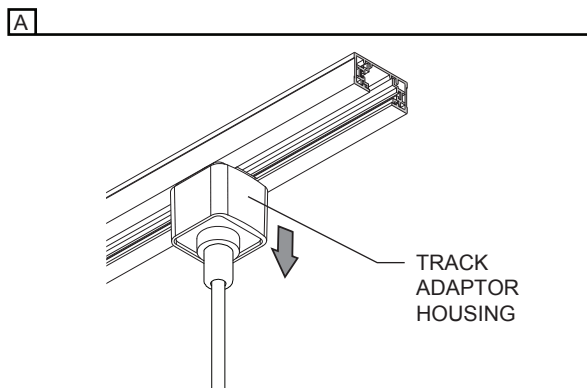

REMOVING PENDANT FROM TRACK (1780SP, 1790SP)


A - TO REMOVE THE PROJECTOR FROM THE TRACK, PULL THE SPRING CLIP UNTIL THE CLIP IS OUTSIDE THE TRACK SLOT

B - WHILE PULLING THE SPRING CLIP, ROTATE A QUARTER TURN IN ANY DIRECTION AND PULL THE ADAPTOR TO REMOVE IT FROM THE TRACK

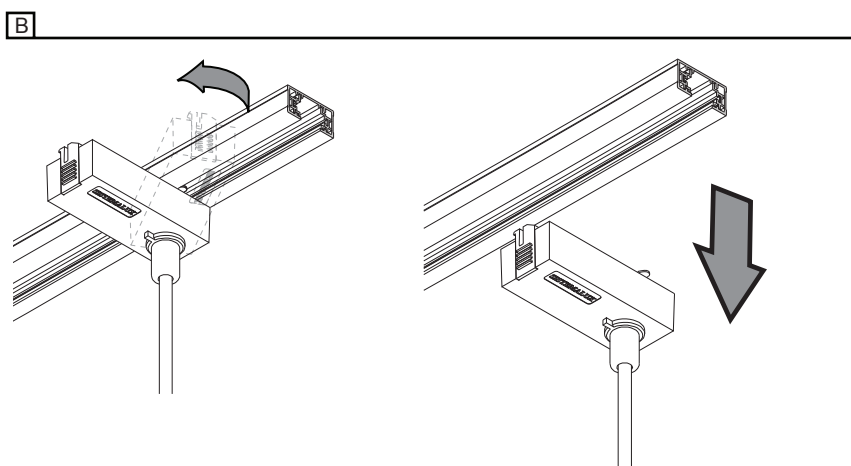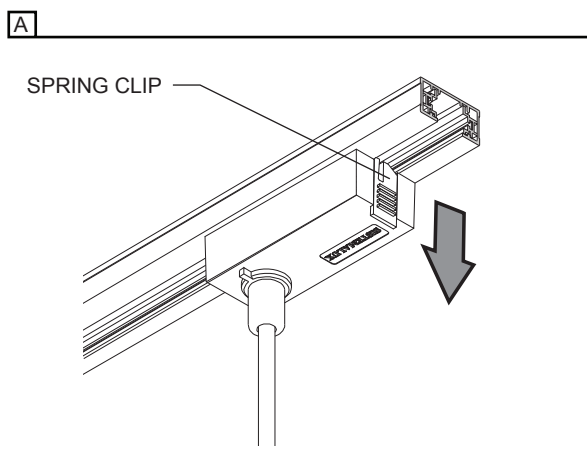

A - UNSCREW THE OPTIC HOLDER TO ACCESS THE REFLECTOR.
B - REPLACE THE REFLECTOR AND RE-INSTALL THE OPTIC HOLDER BACK IN PLACE.


A + B

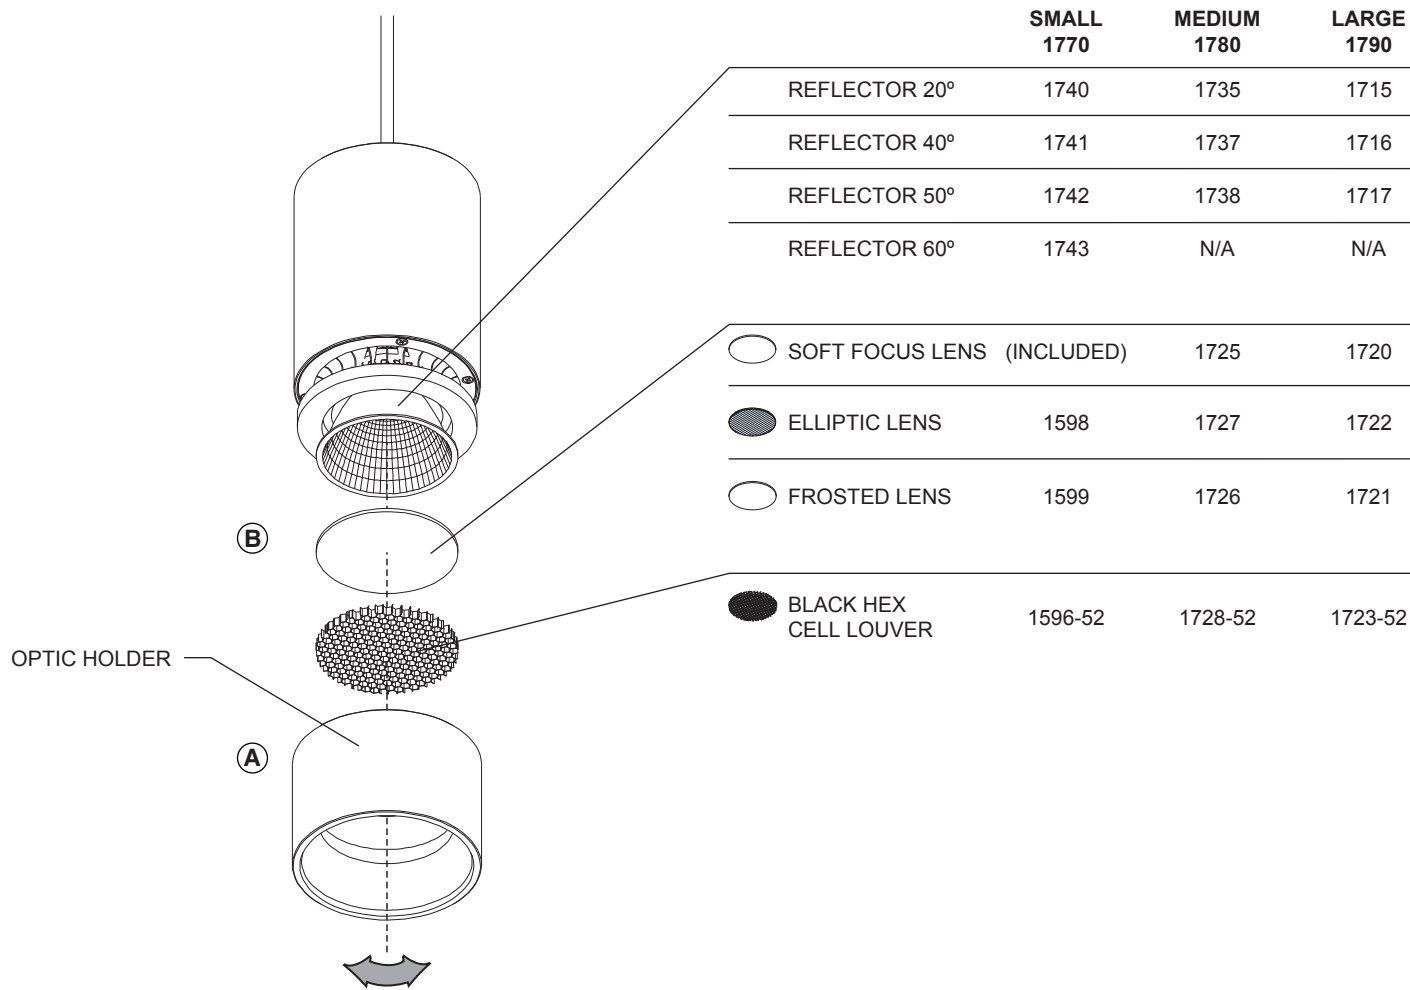





ACCESSORIES

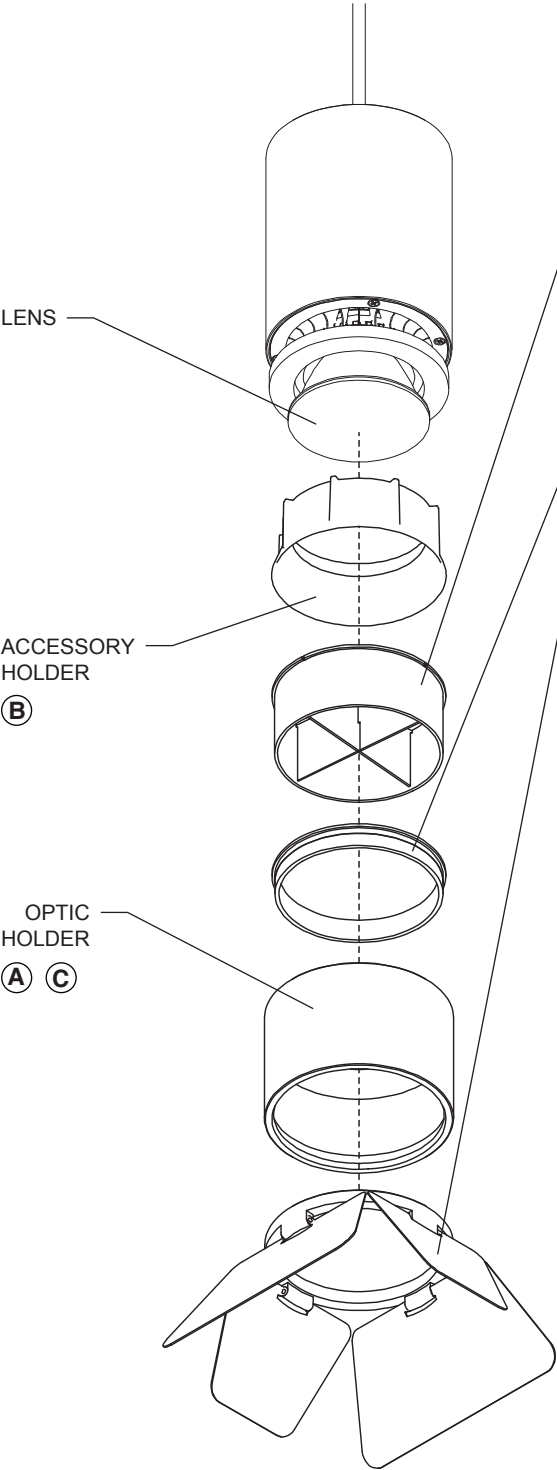- A - UNSCREW THE OPTIC HOLDER.
B - PLACE ACCESSORY BETWEEN THE OPTIC HOLDER AND THE ACCESSORY HOLDER.
C - RE-INSTALL THE OPTIC HOLDER BACK IN PLACE.

A + B + C



	SMALL 1770	MEDIUM 1780	LARGE 1790
 BLACK CROSS BAFFLE	1694-52	1730-52	1724-52
 BLACK SNOOT	1697-52	1729-52	1732-52
 BLACK VISOR - WALL WASHER	1700-52	1731-52	1733-52
 BLACK BARN DOORS	N/A	1739-52	1734-52