


IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

INSTALLING PROJECTOR WITH CANOPY INTEGRAL DRIVER (120V / 120-277V) DIMMING TRIAC/ELV OR 0-10V (15%)

FOR USE WITH STANDARD 4" OCTOGONAL JUNCTION BOX (120V / 120-277V).


- A- MAKE ALL NECESSARY CONNECTIONS (**FOLLOWING WIRING DIAGRAM**) INSIDE THE JUNCTION BOX USING TWIST CONNECTORS (**NOT INCLUDED**).
*FOR OPTIONAL DIMMING 0-10V: WIRES MUST BE RUN THROUGH A SEPARATE KNOCK OUT HOLE.
B- FASTEN THE CANOPY TO THE JUNCTION BOX USING THE (2) PHILLIPS HEAD SCREWS (**INCLUDED**).

A + B

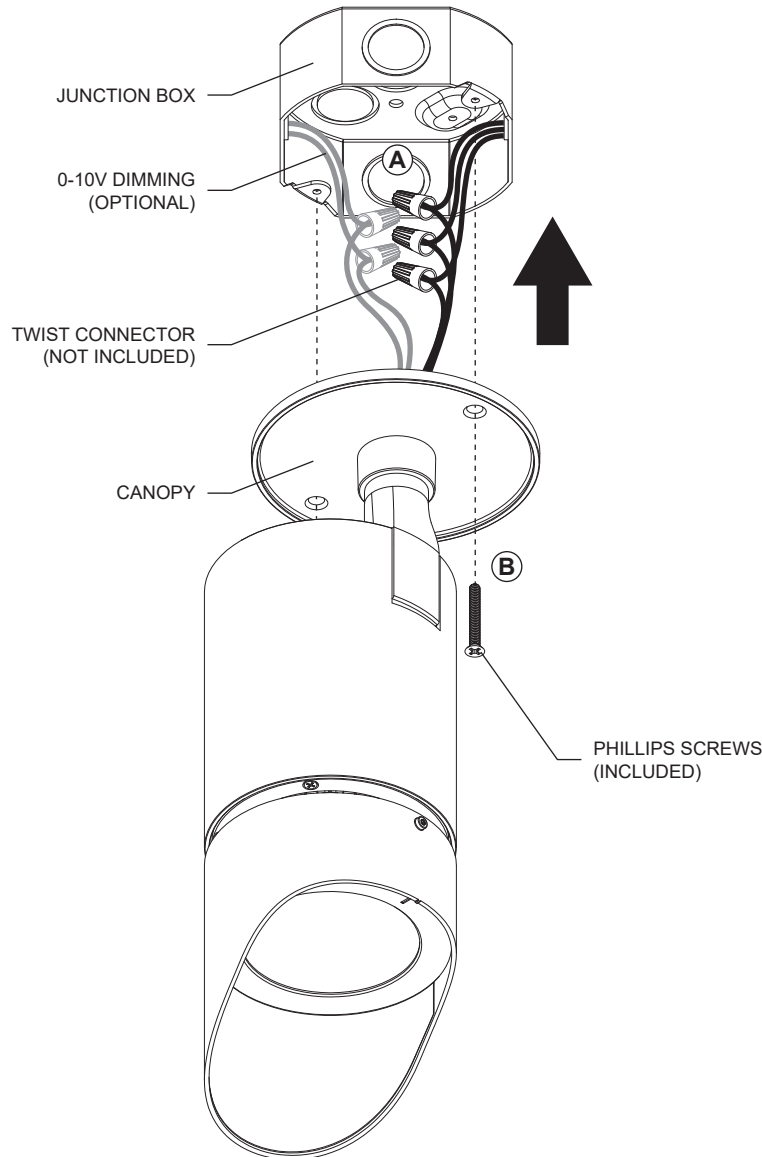


WIRING DIAGRAM

DIMMING TRIAC/ELV (LTE)
120V ONLY

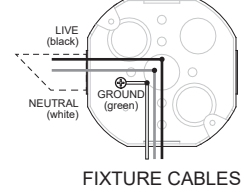

DIMMING 0-10V (D10)
120-277V

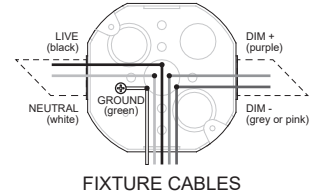


*for reference only

PAN ANGLE POSITION (1780C)

A- LOOSEN THE PAN ADJUSTMENT LOCKING SCREW USING A SLOTTED SCREWDRIVER.

B- SET TO THE DESIRED PAN POSITION (**MAXIMUM OF 330° AXIAL ROTATION**) AND FASTEN THE SCREW (**DO NOT OVERTIGHTEN**).


A + B

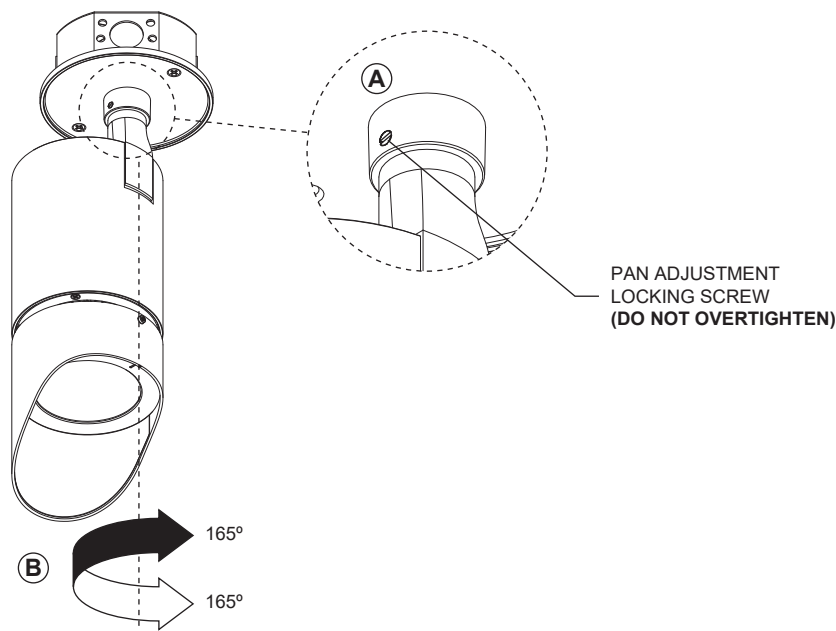**TILT ANGLE POSITION (1780C)**

A- LOOSEN THE TILT ADJUSTMENT LOCKING SCREW USING A SLOTTED SCREWDRIVER..


B- SET TO THE DESIRED TILT POSITION (**MAXIMUM OF 90° AXIAL ROTATION**) AND FASTEN THE SCREW (**DO NOT OVERTIGHTEN**).

A

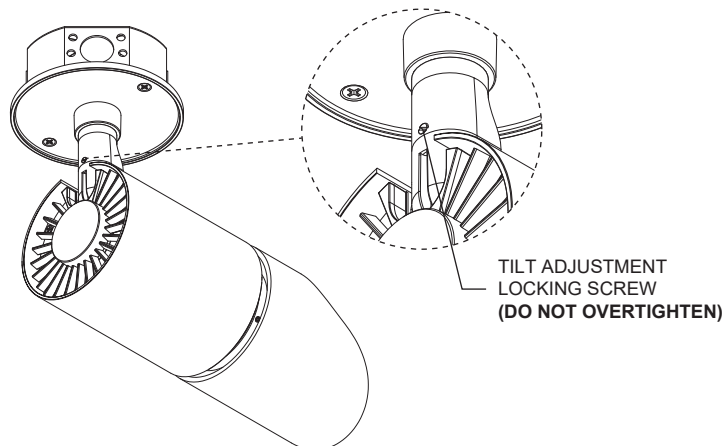

⚠ NOT UNLOCKING THE LOCKING SET SCREW TO CHANGE THE TILT ANGLE WILL CAUSE INTERNAL DAMAGE TO THE PROJECTOR.

B

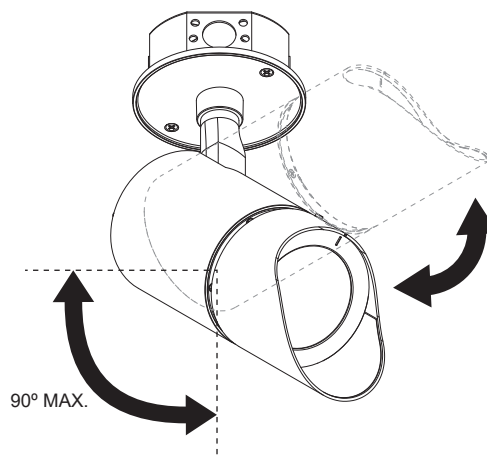

REPLACING OPTIC

A- UNFASTEN THE VISOR SET SCREW USING AN ALLEN KEY (**INCLUDED**) AND REMOVE THE VISOR. **DO NOT REMOVE THE SET SCREW.**

B- UNSCREW THE OPTIC HOLDER FROM THE FIXTURE.

C- REPLACE THE LENS AND SET THE LENS INTO THE OPTIC HOLDER PINS. ***THE LENS GLOSSY SIDE MUST BE FACING OUTWARD.**

D- SCREW THE OPTIC HOLDER BACK ON THE FIXTURE.

E- UNFASTEN THE OPTIC HOLDER (2) SET SCREWS. **DO NOT COMPLETELY REMOVE THE SET SCREW.**

F- ROTATE THE OPTIC HOLDER'S FRONT RING UNTIL THE NOTCH IS ALIGNED AND CENTERED WITH THE FIXTURE ARM.

DO NOT ROTATE THE OPTIC HOLDER.

G- FASTEN THE OPTIC HOLDER (2) SET SCREWS.

H- SLIDE THE VISOR BACK ON THE FIXTURE HOLDER AND FASTEN THE SET SCREW.

***MAKE SURE THE VISOR ALIGNMENT DETAIL IS ALIGNED WITH THE OPTIC HOLDER NOTCH BEFORE TIGHTENING.**

