




IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

INSTALLING PROJECTOR WITH CANOPY (120-277V)

FOR USE WITH STANDARD 4" JUNCTION BOX (120-277V)

- A- RAISE PROJECTOR TO CEILING AND MAKE ALL NECESSARY CONNECTIONS. ***FOR OPTIONAL DIMMING 0-10V: WIRES MUST BE RUN THROUGH A SEPARATE KNOCK OUT HOLE WHEN CONNECTING DIMMING CONTROLLER.**
B- SCREW CANOPY PROJECTOR IN JUNCTION BOX USING THE TWO PHILLIPS HEAD SCREWS PROVIDED.

A + B

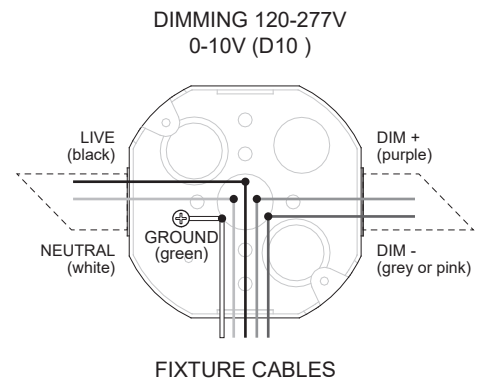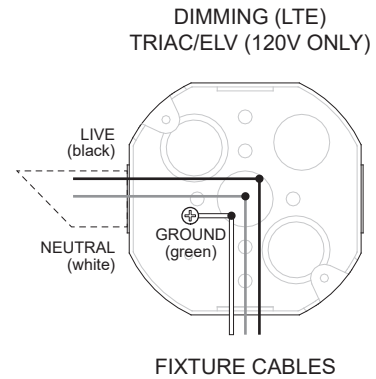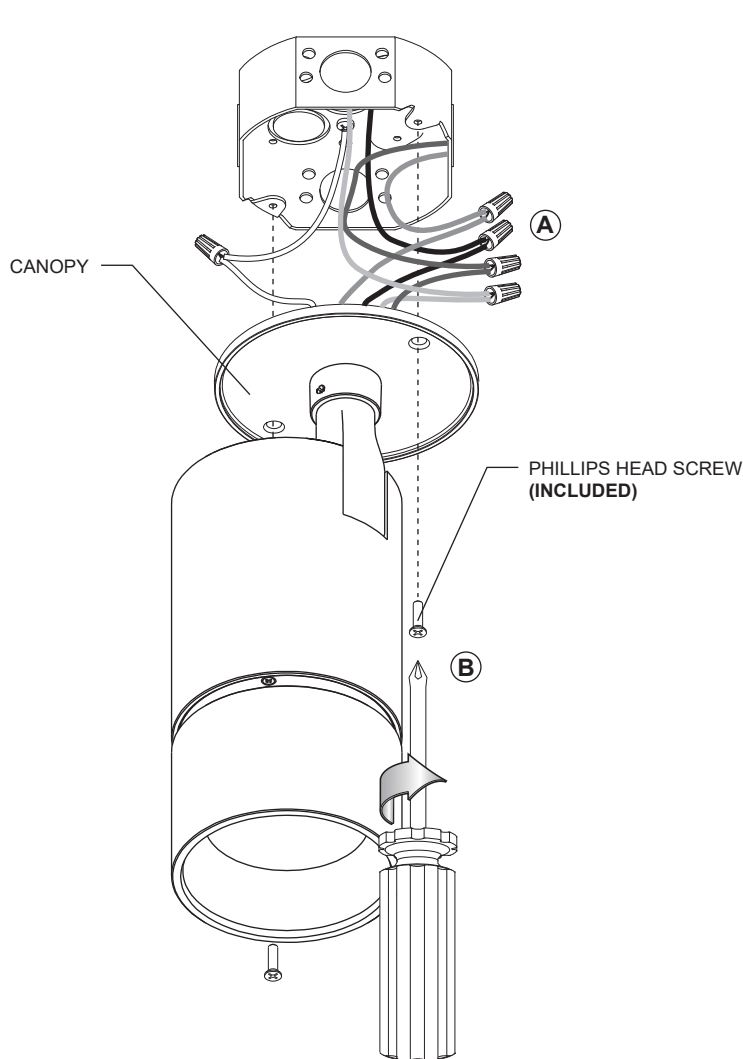


*for reference only

PAN ANGLE POSITION (1780C)

- A- ADJUST THE DESIRED PAN POSITION. (MAXIMUM OF 330° AXIAL ROTATION).
B- LOCK THE POSITION WITH THE PAN ADJUSTMENT LOCKING SCREW.

A + B

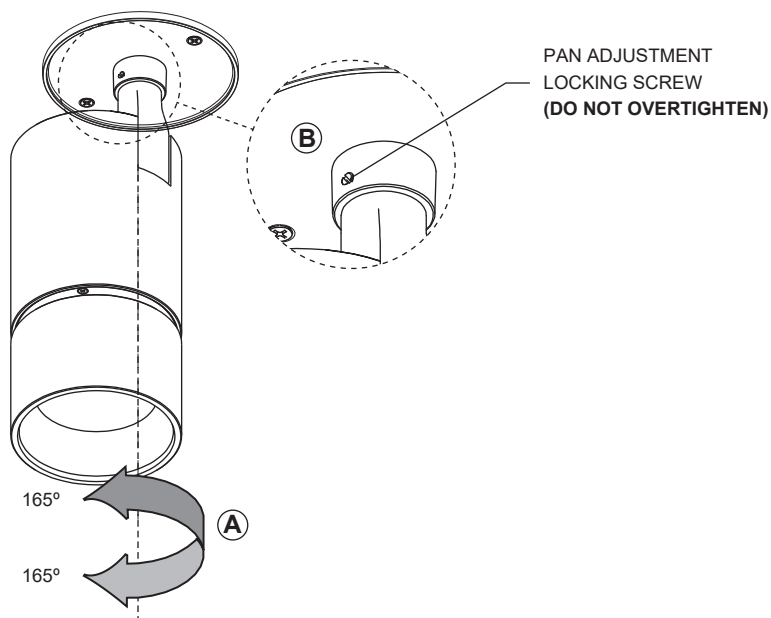


TILT ANGLE POSITION (1780C)

- A- ADJUST THE DESIRED POSITION AND LOCK WITH THE LOCKING SET SCREW USING A SLOT SCREW DRIVER. (MAXIMUM OF 90° AXIAL ROTATION)

A


*WARNING: NOT UNLOCKING THE LOCKING SET SCREW TO CHANGE THE TILT ANGLE WILL CAUSE INTERNAL DAMAGE TO THE PROJECTOR.

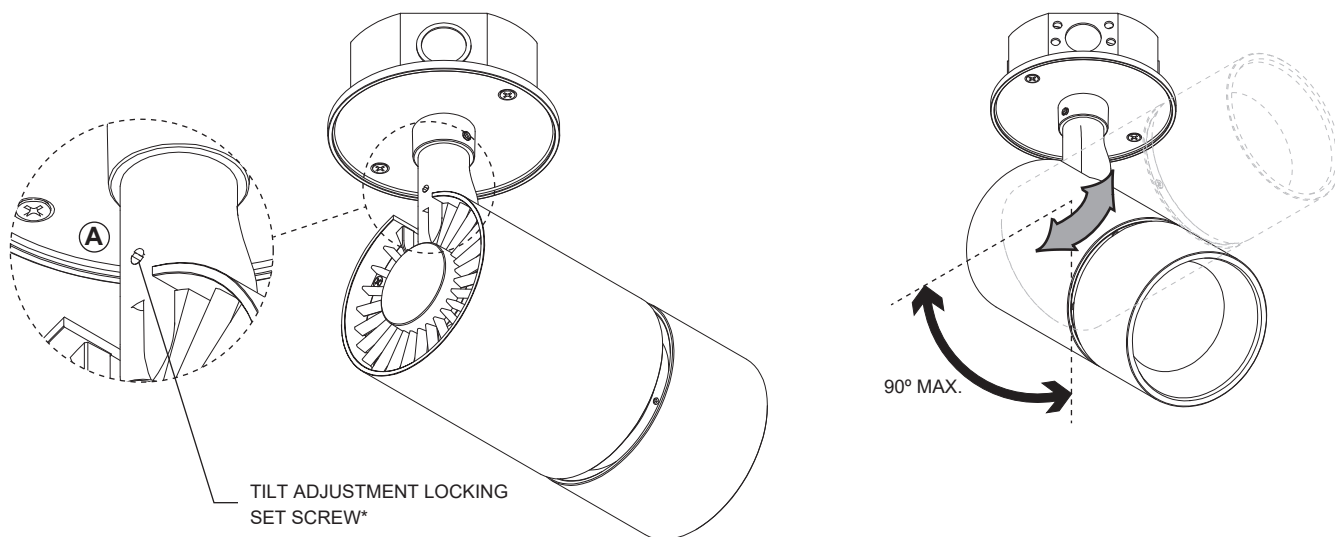

REPLACING OPTIC FOR REFLECTOR MODELS

- A- UNSCREW THE OPTIC HOLDER TO ACCESS THE REFLECTOR.
B- REPLACE THE REFLECTOR AND RE-INSTALL THE OPTIC HOLDER BACK IN PLACE.

A + B

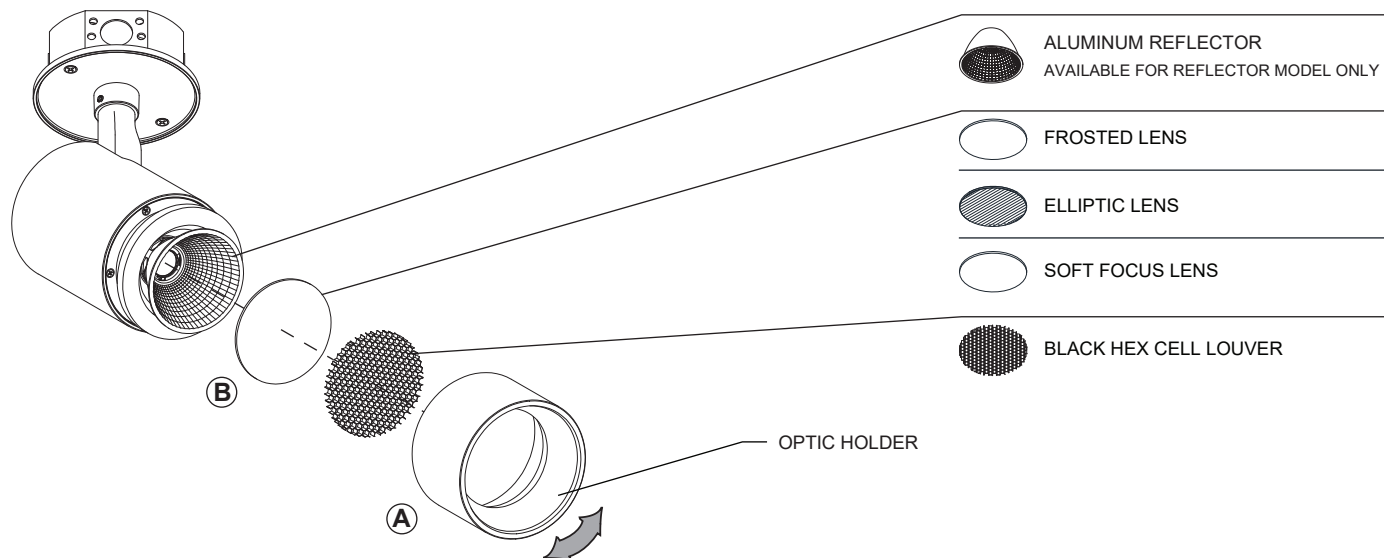

ACCESSORIES

- A- UNSCREW THE OPTIC HOLDER
B- PLACE ACCESSORY BETWEEN THE OPTIC HOLDER AND THE ACCESSORY HOLDER
C- RE-INSTALL THE OPTIC HOLDER BACK IN PLACE.

A + B + C

