
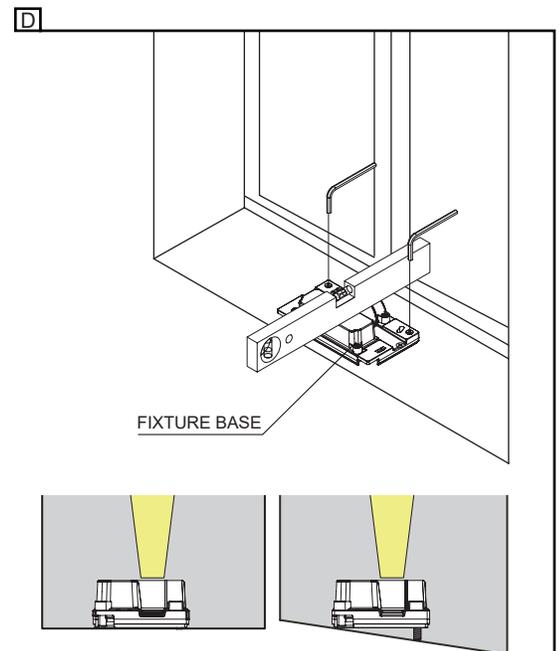
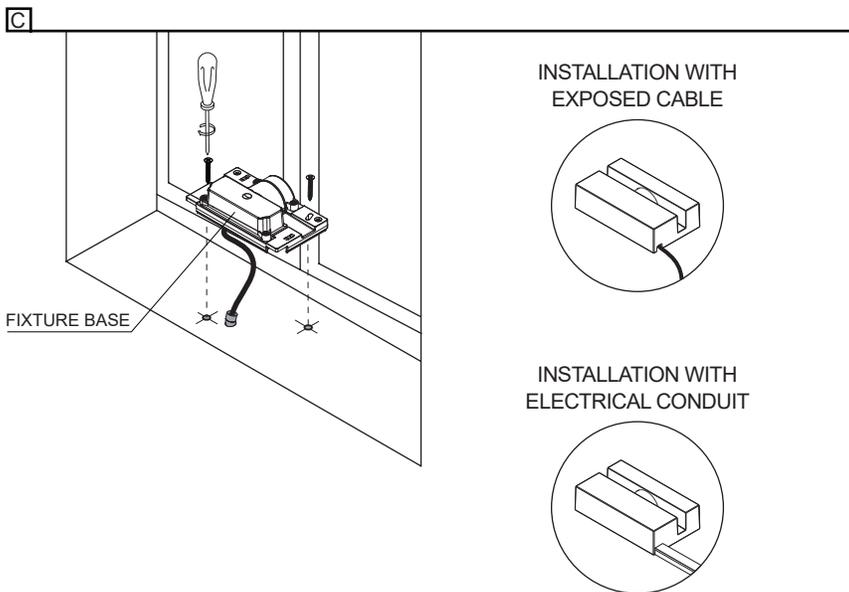
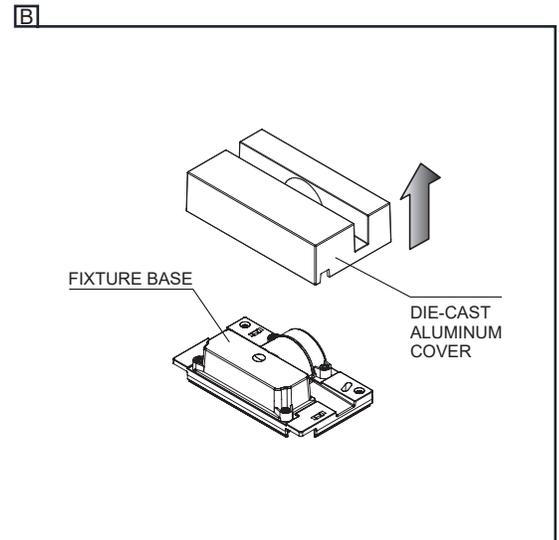


IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.


⚠ DISCONNECT THE MAIN LINE BEFORE WIRING SECONDARY CONNECTORS.

INSTALLATION FOR FIXTURE WHIP TO REMOTE DRIVER (TO BE INSTALLED ON A WINDOW FRAME)

- A- PREPARE SURFACE FOR INSTALLATION USING DIMENSIONS BELOW.
- B- REMOVE THE DIE-CAST ALUMINUM COVER FROM THE FIXTURE BASE.
- C- SCREW THE FIXTURE BASE LOOSE USING APPROPRIATE ANCHORS (NOT INCLUDED).
- D- USE THE (2) SET SCREWS TO LEVEL THE FIXTURE AND CONTINUE TO SCREW IT FIRMLY TO THE SURFACE TO FIX IT IN PLACE.


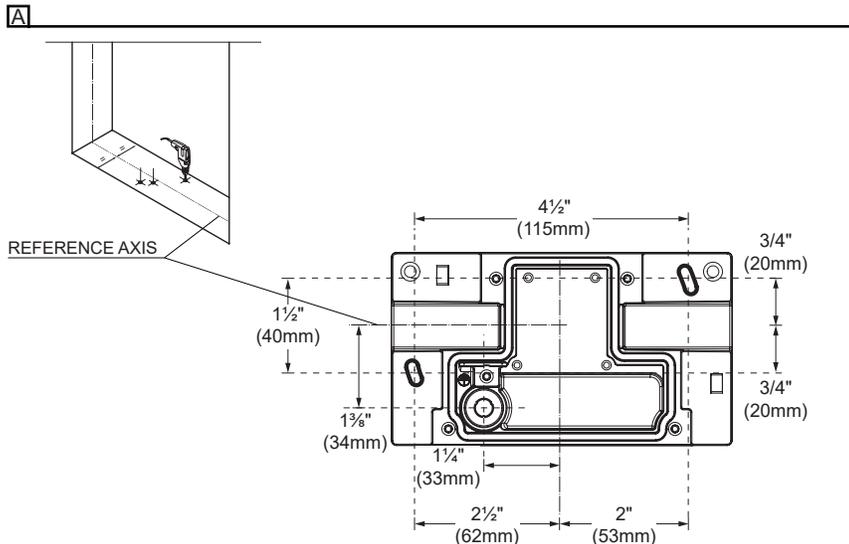


E- MAKE ALL NECESSARY WIRE CONNECTIONS (SEE WIRING DIAGRAM ON PAGE 3).
F- RE-INSTALL THE DIE-CAST ALUMINUM COVER AND PRESS DOWN UNTIL IT CLICKS IN PLACE.



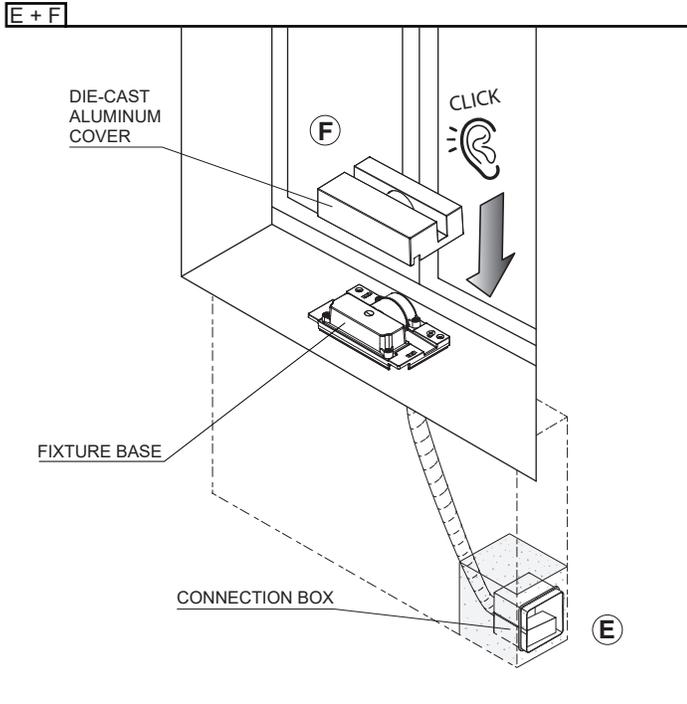


INSTALLATION FOR 2" OR 4" JUNCTION BOX TO REMOTE DRIVER

A- PREPARE SURFACE FOR INSTALLATION USING 2" OR 4" JUNCTION BOX. FEED WIRES FROM A 1200mA SOURCE.
B- REMOVE THE DIE-CAST ALUMINUM COVER FROM THE FIXTURE BASE.

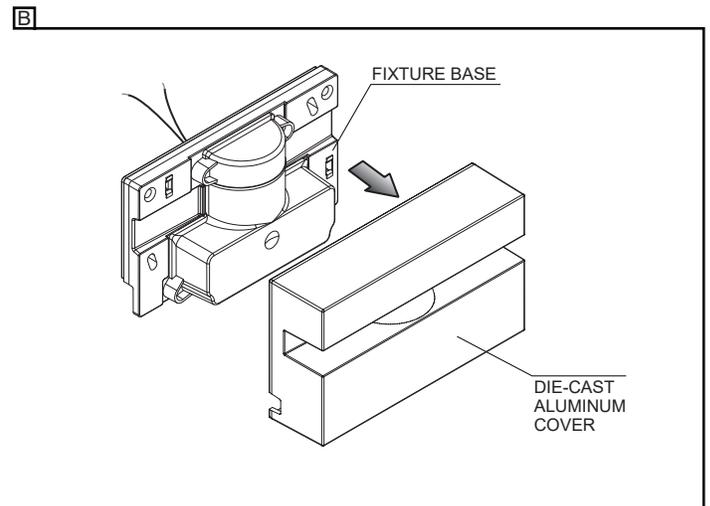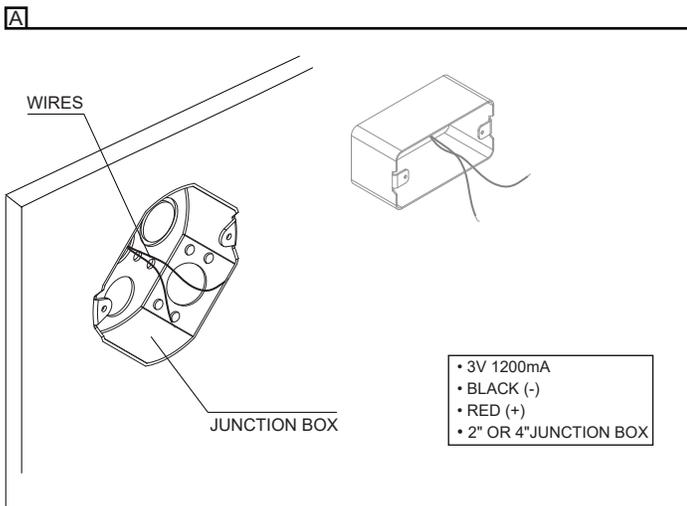

- C- PASS THE FIXTURE BASE CABLE THROUGH THE MOUNTING PLATE HOLE.
- D- MAKE ALL NECESSARY WIRE CONNECTIONS (SEE WIRING DIAGRAM ON PAGE 3).
- E- INSTALL MOUNTING PLATE ON JUNCTION BOX USING (2) SCREWS (**NOT INCLUDED**).
- F- INSTALL THE FIXTURE BASE ON MOUNTING PLATE USING (2) SCREWS (**INCLUDED**).
- G- RE-INSTALL THE DIE-CAST ALUMINUM COVER AND PRESS DOWN UNTIL IT CLICKS IN PLACE.

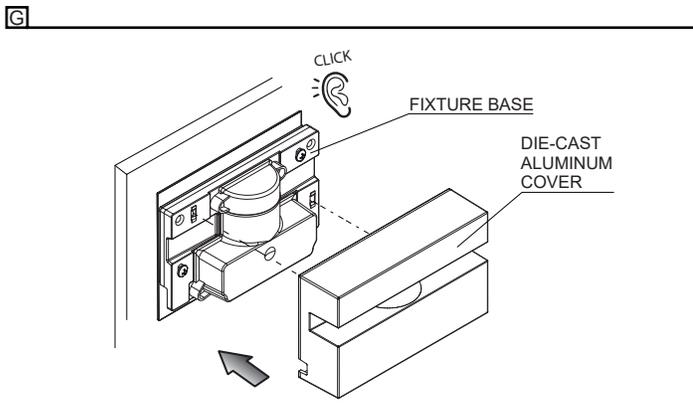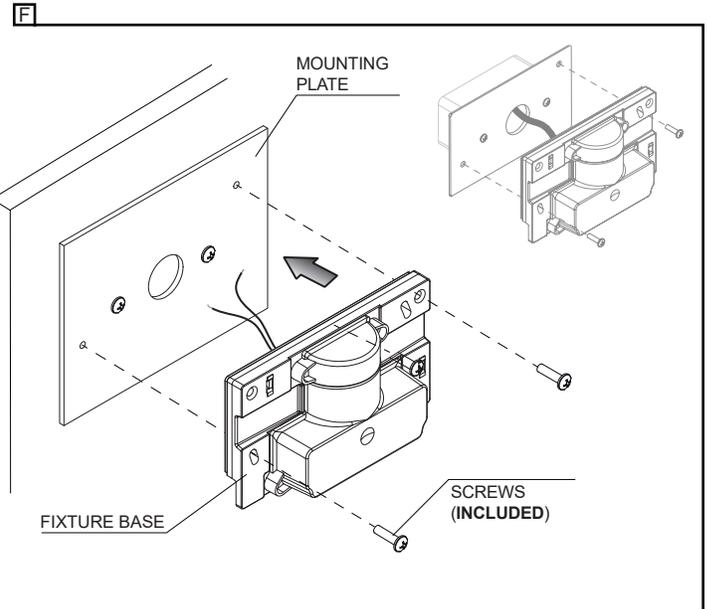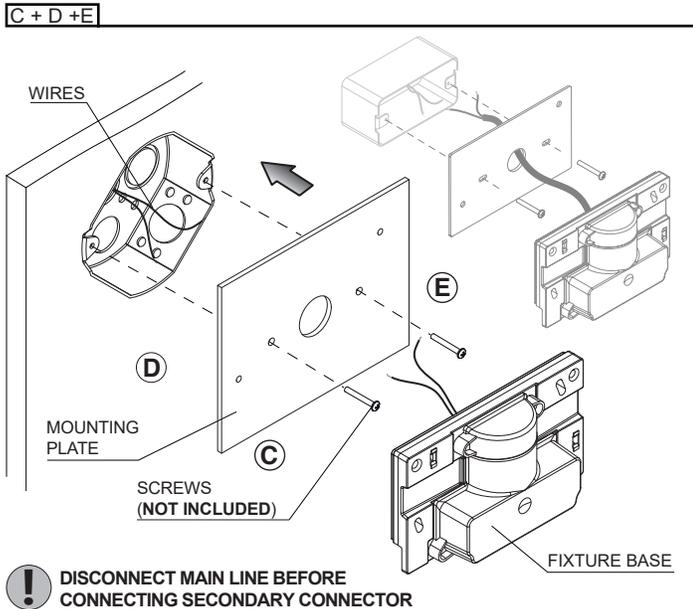

WIRING DIAGRAMS

Multiple luminaires must be connected in series (home run or fixture chain). Connections to be made in remote connection box

