


IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

SINGLE UNIT INSTALLATION (LENGTHS FROM 2' TO 8') (50.8mm TO 203mm)

- A- MAKE CEILING CUT-OUT.
- B- REMOVE DIFFUSER.
- C- LOOSEN DOWNLIGHT LED MODULE SCREWS FROM THE UNIT. DISCONNECT AND REMOVE LED MODULE.
- DO NOT COMPLETELY REMOVE THE SCREWS FROM THE LED ASSEMBLY.**
- D- INSTALL BX CABLE (NOT INCLUDED) USING BX CONNECTOR (INCLUDED). FEED AT LEAST 6" (152.4mm) OF BRANCH CIRCUIT INSIDE THE HOUSING.
- E- WITH MOUNTING BRACKET IN NARROW POSITION, GENTLY INSERT THE FIXTURE INTO THE CEILING CUT-OUT.
- F- TURN MOUNTING BRACKET SCREWS CLOCKWISE TO WIDEN AND LOWER THE MOUNTING BRACKETS OVER THE CEILING.
- FOR SINGLE MODULE GO DIRECTLY TO STEP M (page 2), FOR FIXTURES GREATER THAN 8' APPLY STEPS G TO L.**
- G- RECONNECT THE LED MODULE QUICK CONNECTOR. REINSTALL THE LED MODULE USING MOUNTING SCREWS.
- * IF THE FIXTURE IS LESS THAN 8' FEET, REINSTALL THE DIFFUSER, OTHERWISE CONTINUE THE STEPS.

A - B - C - D - E - F - G

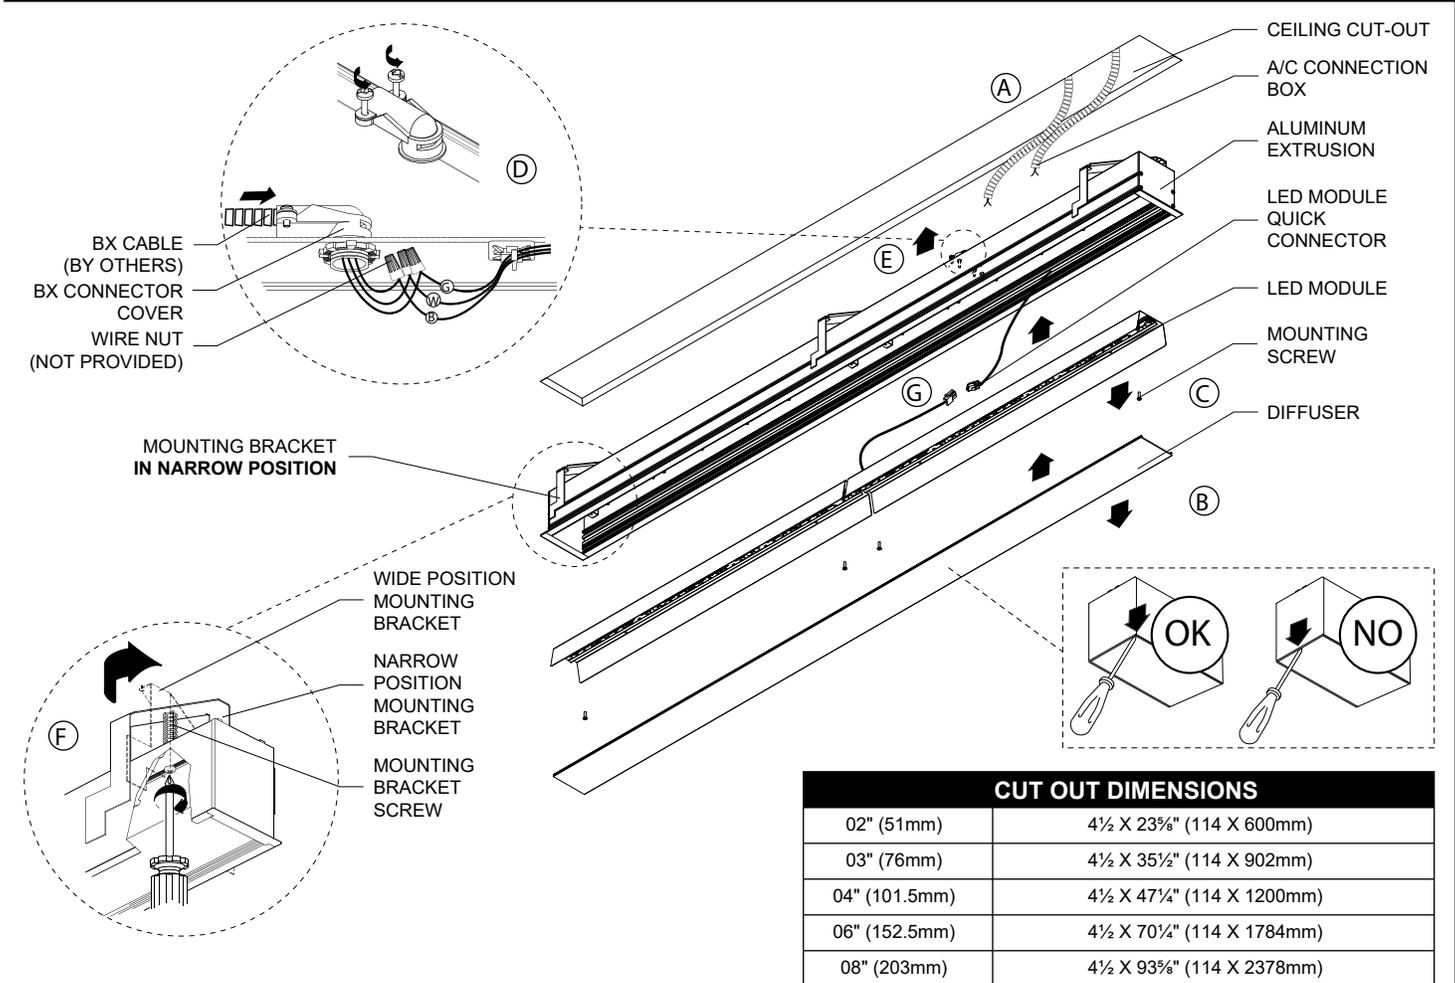

CUT OUT DIMENSIONS	
02" (51mm)	4½ X 23¾" (114 X 600mm)
03" (76mm)	4½ X 35½" (114 X 902mm)
04" (101.5mm)	4½ X 47¼" (114 X 1200mm)
06" (152.5mm)	4½ X 70¼" (114 X 1784mm)
08" (203mm)	4½ X 93¾" (114 X 2378mm)

FEED INFORMATION

Maximum fixture length per single feed (nominal length):

BO - MO - HO: 64' (19½m)
VHO: 32' (9¾m)

Main feed is located at the beginning of the first section. For longer fixtures subsequent feeds are needed. The feeds are located at the beginning of the next following section, except for the last feed which is located at the end of the last section of the fixture.

WIRING DIAGRAM

DIMMING 120V ONLY
 TRIAC/ELV (LTE) or TRIAC (D3)

FIXTURE CABLES

DIMMING 120-277V
 0-10V (D10 / D01) or EcoSystem™ (D2B)

FIXTURE CABLES

*for reference only

IN-LINE UNITS INSTALLATION

- H- WITH MOUNTING BRACKETS IN A NARROW POSITION, GENTLY INSERT NEXT FIXTURE MODULE IN-LINE INTO CEILING CUT-OUT AND SLIDE IT AGAINST PREVIOUS UNIT.
***MAKE SURE NOT TO PINCH ANY WIRES.**
- I- SCREW MOUNTING BRACKET SCREWS CLOCKWISE TO SECURE FIXTURE MODULE. BEFORE ANCHORING, MAKE SURE THERE IS NO GAP BETWEEN FIXTURE MODULES.
- J- FREE JOINER FROM ALUMINUM PROFILE BY UNSCREWING THE TWO SET SCREWS WITH THE ALLEN KEY(**INCLUDED**).
- K- SLIDE AND PLACE JOINERS AT MODULE JUNCTION, TIGHTEN JOINER SET SCREWS UNTIL A TIGHT FITTING IS ACHIEVED BETWEEN BOTH MODULES. REPEAT THIS OPERATION WITH ALL JOINERS (x3 PER JUNCTION).
- L- IDENTIFY AND PLUG TOGETHER BOTH QUICK CONNECTOR HALVES PLACED ON FIXTURE ENDS TO CONNECT EACH MODULE TOGETHER. REPEAT STEP G TO L UNTIL FOR ALL THE SUBSEQUENT MODULE.
- M- RAISE THE REFLECTOR ASSEMBLY, RECONNECT THE QUICK CONNECTOR, REINSTALL THE REFLECTOR ASSEMBLY AND SNAP BACK ON THE DIFFUSOR ON THE FIXTURE.

