


NANOLED
WALK OVER

S.3330, S.3340, S.3364

LAST UPDATE : JANUARY 07, 2021

FIXTURE INSTALLATION


⚠ DISCONNECT THE MAIN LINE BEFORE WIRING SECONDARY CONNECTORS.

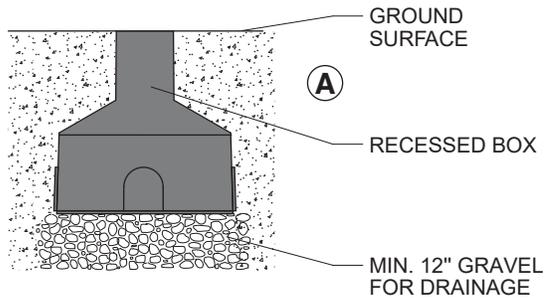

A - INSTALL RECESSED BOX OPENING FLUSH WITH SURFACE. **ALLOW 12" OF GRAVEL BELOW FOR DRAINAGE.**

B - MAKE ALL NECESSARY WIRE CONNECTIONS.

C - INSERT FIXTURE INTO RECESSED BOX ASSURING TRIM IS FLUSH WITH THE GROUND SURFACE.

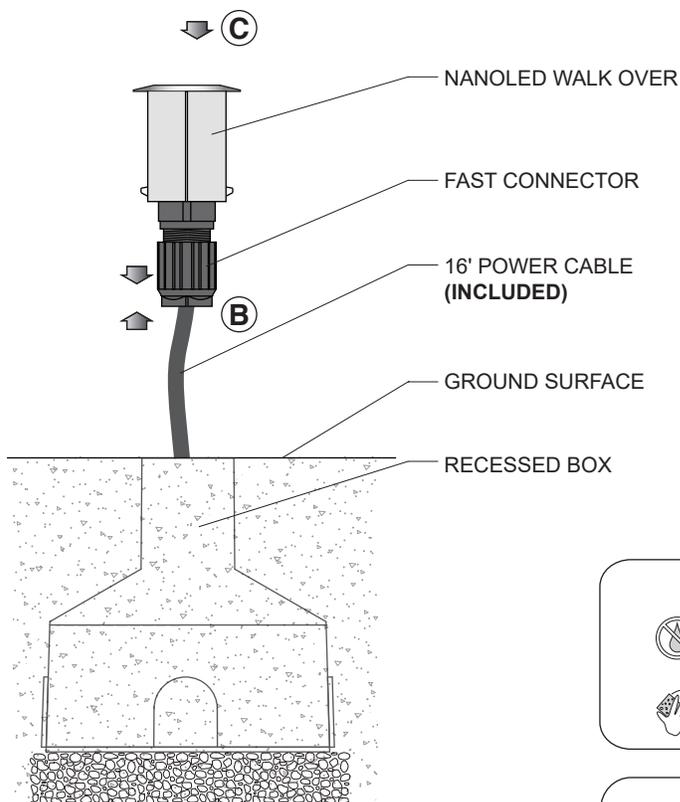

WARNING



NEVER INSTALL PRODUCTS IN FOGGY, RAINY OR HIGHLY HUMID WEATHER CONDITIONS.



CLEAN REGULARLY THE FIXTURE TO PREVENT SOIL FROM ACCUMULATING ON COVER.

NOTICE

THE LIFE OF THE PRODUCT CAN BE COMPROMIZED IF PRODUCT IS INSTALLED IN WET OR HUMID WEATHER CONDITIONS.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

JP - R4

APP. BY :