
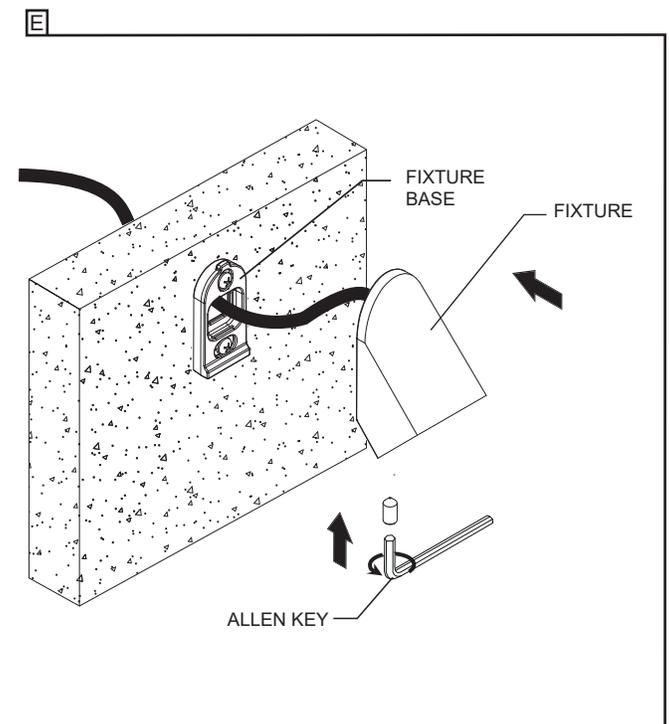
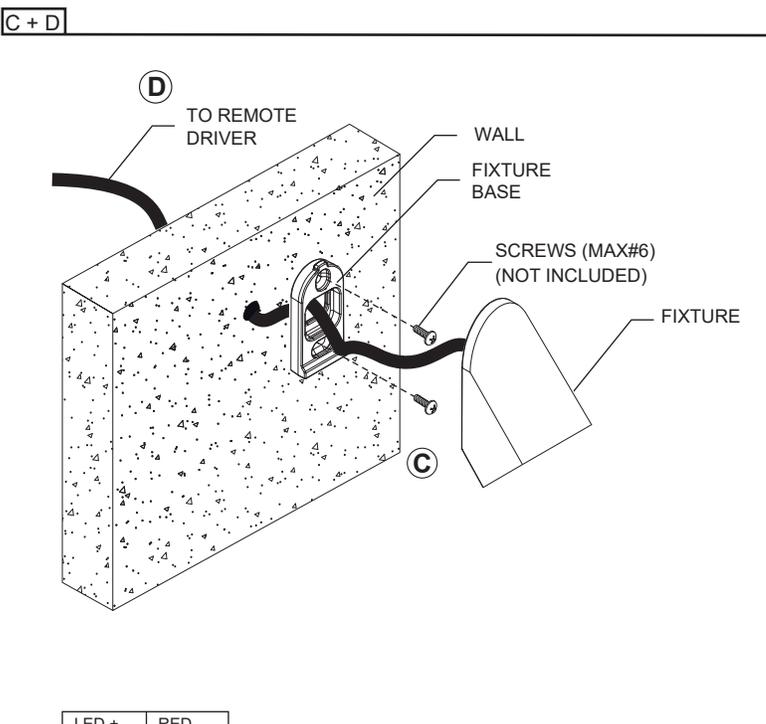
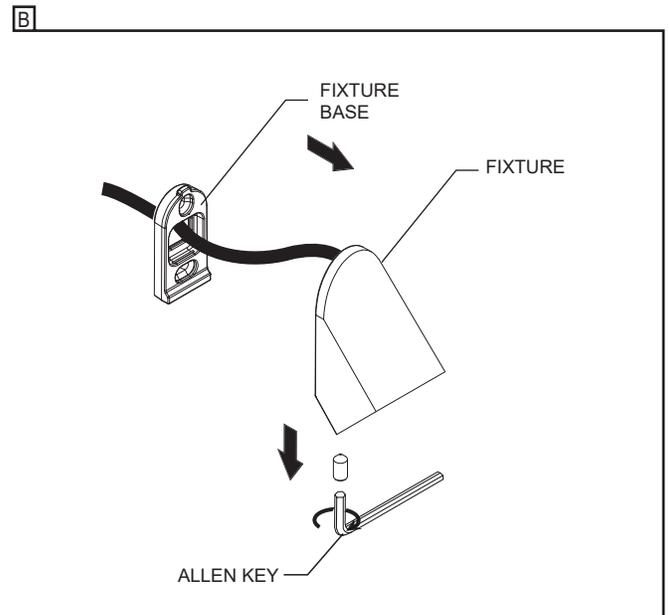


IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT.

⚠ DISCONNECT THE MAIN LINE BEFORE WIRING SECONDARY CONNECTORS.

SURFACE INSTALLATION WITH FIXTURE WHIP TO REMOTE DRIVER (FW-REM)






- A- PREPARE INSTALLATION SURFACE (SEE DIMENSIONS BELOW).
- B- UNSCREW THE BASE FROM THE FIXTURE WITH AN ALLEN KEY (INCLUDED).
- C- SECURE THE BASE TO THE WALL USING THE APPROPRIATE (2) SCREWS (MAX #6) (NOT INCLUDED).
- D- MAKE WIRE CONNECTIONS (FOLLOWING POLARITY MARKINGS) USING WATERTIGHT TWIST CONNECTORS (NOT INCLUDED).
- E- FASTEN THE FIXTURE TO THE BASE.

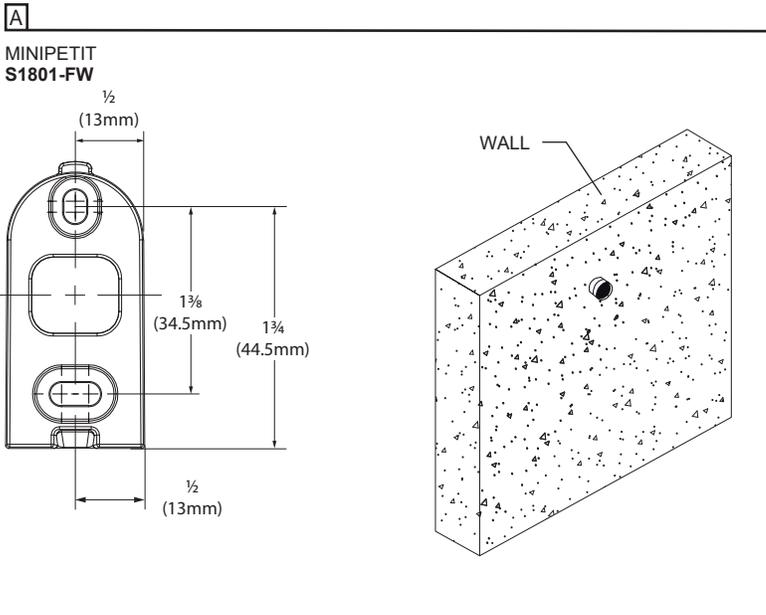

LED +	RED
LED -	BLACK

4" JUNCTION BOX INSTALLATION WITH REMOTE DRIVER (JB-REM)

- A- FIX THE CROSSBAR TO THE JUNCTION BOX USING THE (2) PHILLIPS SCREWS (**INCLUDED**). MAKE SURE THE CROSSBAR IS PROPERLY ALIGNED.
- B- INSTALL THE MOUNTING PLATE ON THE CROSSBAR USING THE (2) PHILLIPS SCREWS (**INCLUDED**).
- C- UNSCREW THE BASE FROM THE FIXTURE WITH THE ALLEN KEY (**INCLUDED**).
- D- FASTEN THE BASE ON THE MOUNTING PLATE USING THE (2) PHILLIPS SCREWS (**INCLUDED**).
- E- MAKE WIRE CONNECTIONS (**FOLLOWING POLARITY MARKINGS**) USING WATERTIGHT TWIST CONNECTORS (**NOT INCLUDED**).
ONCE CONNECTED, PUSH THE WIRES BACK INTO THE JUNCTION BOX.
- F- FASTEN THE FIXTURE TO THE BASE.

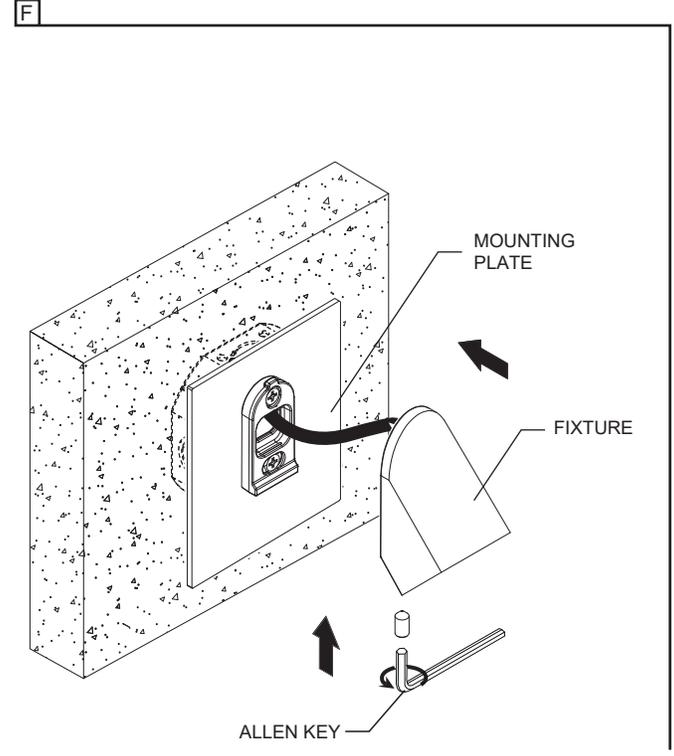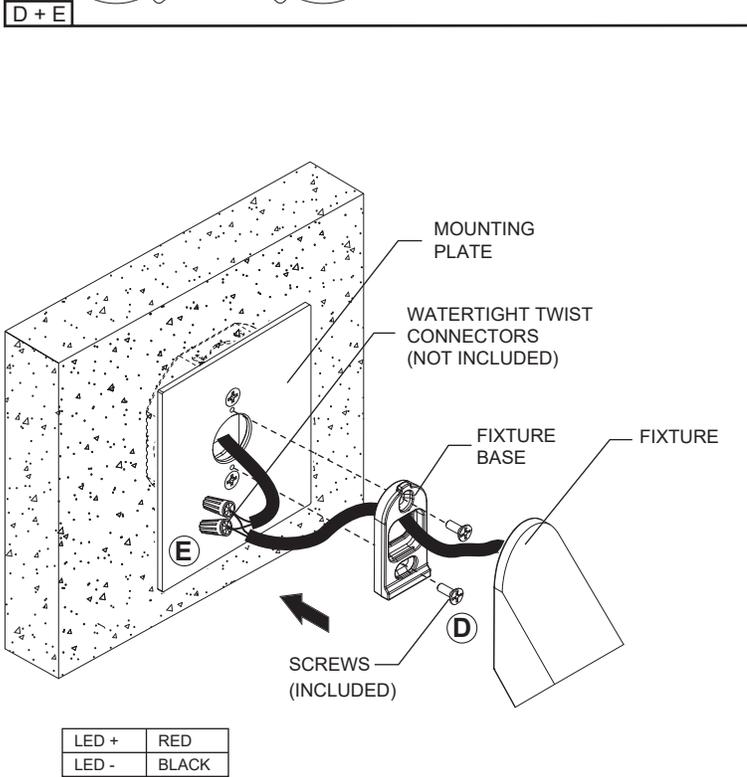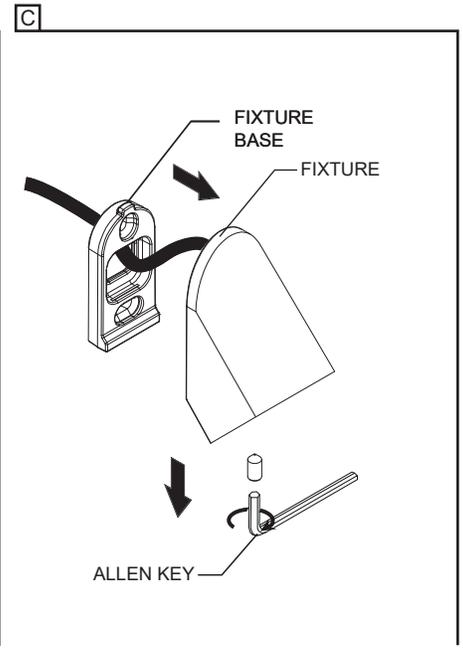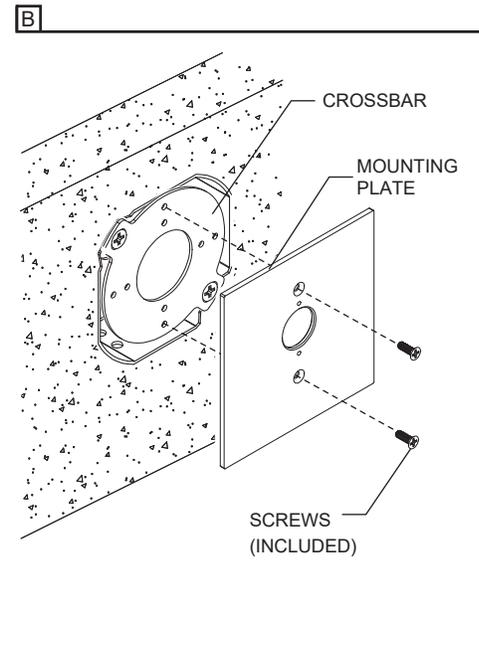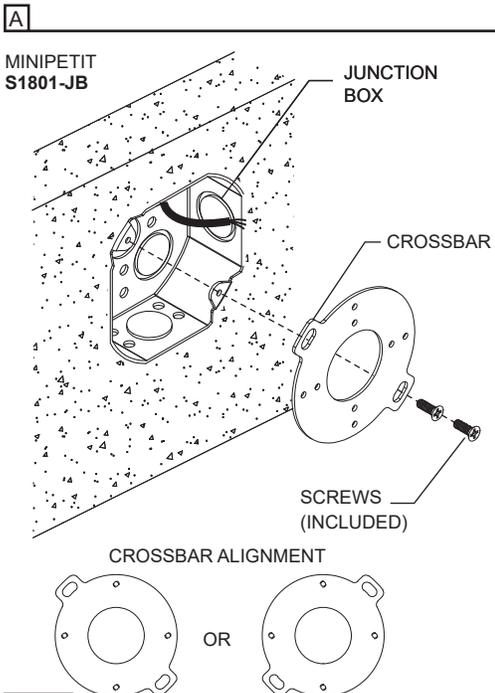

2" SINGLE GANG BOX INSTALLATION WITH REMOTE DRIVER (J2-REM)

- A- FIX THE CROSSBAR TO THE JUNCTION BOX USING THE (2) PHILLIPS SCREWS (INCLUDED).
- B- INSTALL THE MOUNTING PLATE ON THE CROSSBAR USING THE (2) PHILLIPS SCREWS (INCLUDED).
- C- UNSCREW THE BASE FROM THE FIXTURE WITH THE ALLEN KEY (INCLUDED).
- D- FASTEN THE BASE ON THE MOUNTING PLATE USING THE (2) PHILLIPS SCREWS (INCLUDED).
- E- MAKE THE WIRE CONNECTIONS (FOLLOWING POLARITY MARKINGS) USING WATERTIGHT TWIST CONNECTORS (NOT INCLUDED).
ONCE CONNECTED, PUSH THE WIRES BACK INTO THE JUNCTION BOX.
- F- FASTEN THE FIXTURE TO THE BASE.

