
IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY. CABLE LENGTH IS NOT FIELD AJUSTABLE, CONTACT FACTORY TO SPECIFY CABLE LENGTH.

## INSTALLATION ON ONE CIRCUIT TRACK WITH JUNO ADAPTOR

FOR USE WITH WESTPORT INTERNATIONAL'S W SERIES or JUNO LIGHTING'S T, TU or R SERIES TRACK SYSTEM ONLY (120V).

- A PULL THE ADAPTOR HOUSING DOWN TO INSERT IN THE TRACK FOLLOWING INITIAL POSITION SHOWN BELOW.
- B PUSH THE ADAPTOR INTO TRACK AND ROTATE THE TRACK ADAPTOR A QUARTER TURN IN THE PROPER DIRECTION IN ORDER TO ALLOW ELECTRICAL BOUNDING. RELEASE THE HOUSING AND MAKE SURE THE ADAPTOR IS LOCKED IN PLACE, FOLLOWING FINAL POSITION SHOWN BELOW.

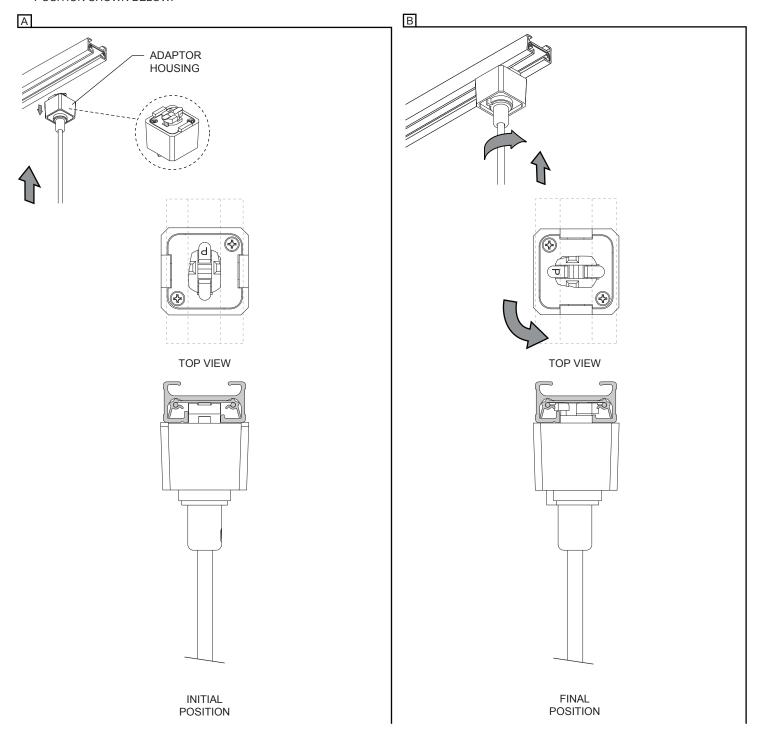

**SISTEMALUX** 

LAST UPDATE: DECEMBER 04, 2017

**LARGE** 

1790

1715

1716

1717

N/A

1720


1722

1721

1723-52

## REMOVING PENDANT FROM TRACK

- A PULL DOWN THE TRACK ADAPTOR HOUSING TO UNLOCK IT FROM THE TRACK SLOT.
- B HOLDING THE TRACK ADAPTOR HOUSING DOWN, ROTATE A QUARTER TURN IN ANY DIRECTION AND PULL DOWN THE ADAPTOR TO REMOVE IT FROM THE TRACK.

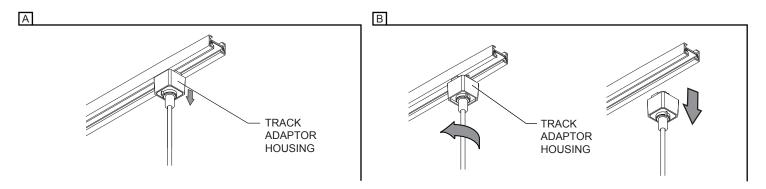

# **REPLACING OPTIC**

A + B

- A UNSCREW THE OPTIC HOLDER TO ACCESS THE REFLECTOR.
- B REPLACE THE REFLECTOR AND RE-INSTALL THE OPTIC HOLDER BACK IN PLACE.

#### **SMALL MEDIUM** 1770 1780 REFLECTOR 20° 1740 1735 REFLECTOR 40° 1741 1737 REFLECTOR 50° 1742 1738 REFLECTOR 60° 1743 N/A SOFT FOCUS LENS (INCLUDED) 1725 ELLIPTIC LENS 1598 1727 FROSTED LENS 1599 1726 **B**

**BLACK HEX** 

**CELL LOUVER** 



(A)


OPTIC HOLDER

1596-52

1728-52

### **ACCESSORIES**

- A UNSCREW THE OPTIC HOLDER.
- B PLACE ACCESSORY BETWEEN THE OPTIC HOLDER AND THE ACCESSORY HOLDER.
- C RE-INSTALL THE OPTIC HOLDER BACK IN PLACE.

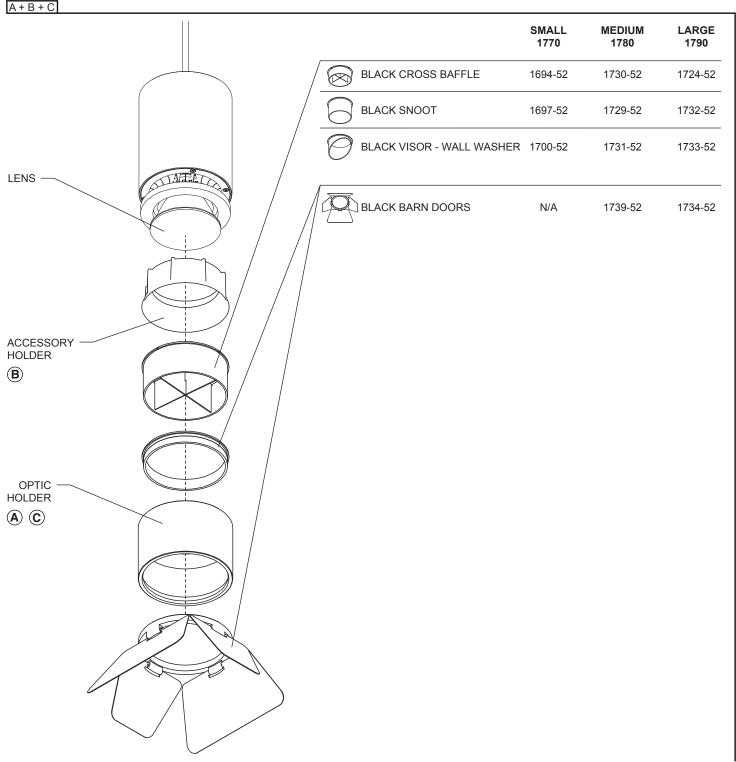

LAST UPDATE: DECEMBER 04, 2017