


IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

FIXTURE INSTALLATION INTO RECESSED BOX INTEGRAL DRIVER (120-277V) DIMMING 0-10V (10%)

- A- MAKE NECESSARY WIRE CONNECTIONS (**FOLLOWING WIRING DIAGRAM**) USING WATERTIGHT TWIST CONNECTORS (**NOT INCLUDED**).
B- INSERT THE FIXTURE (**STARTING FROM THE TOP**) AND PUSH IT INTO THE RECESSED BACKBOX UNTIL IT CLICKS IN PLACE.

A

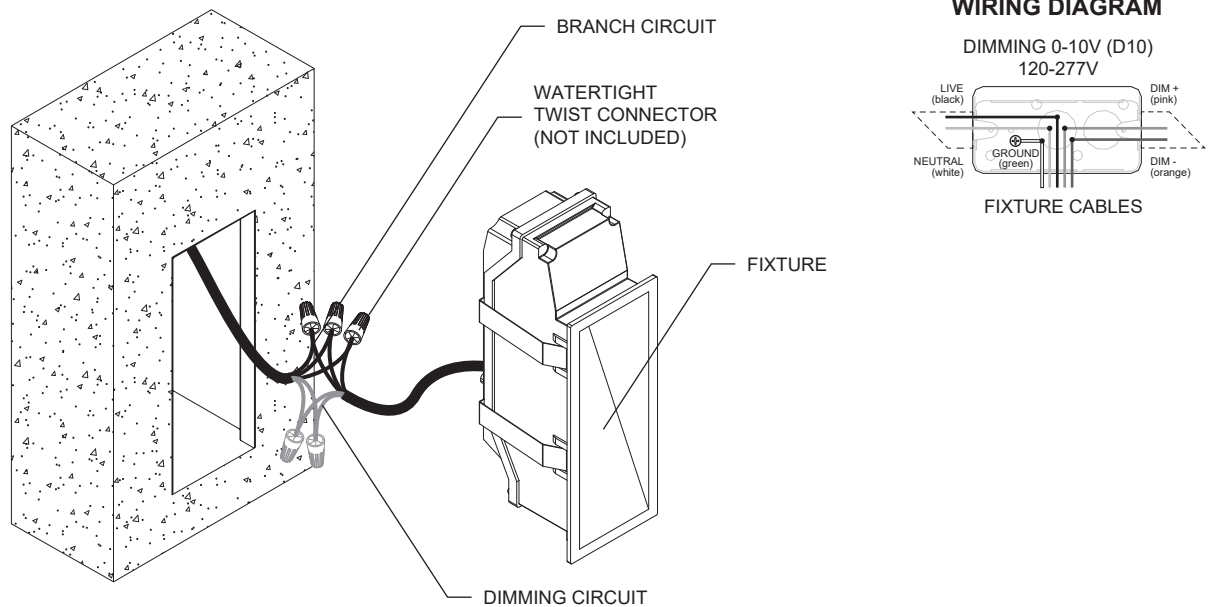

B

