
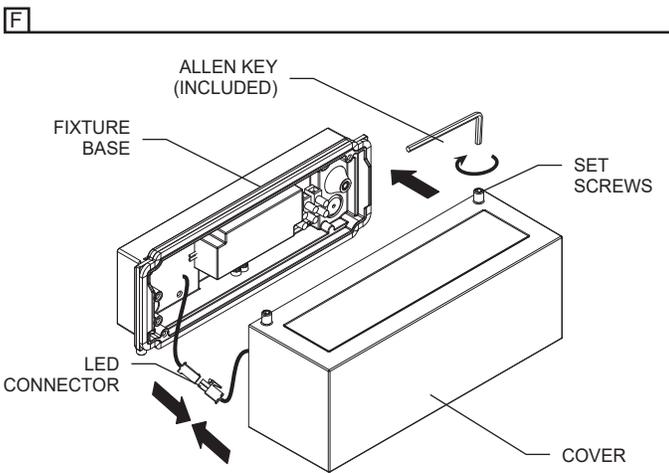
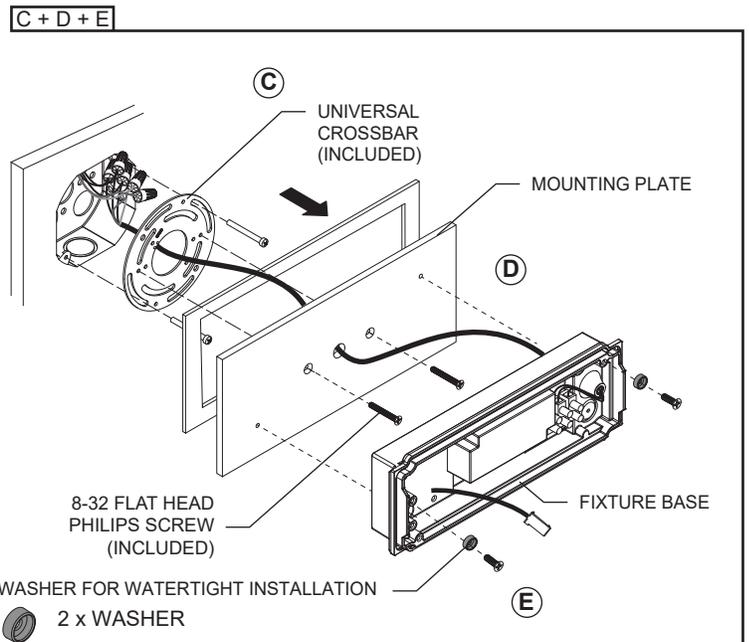


MODEL : S5054, S5064

IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

INSTALLATION ON 4" JUNCTION BOX INTEGRAL DRIVER 120-277V (UNV) DIMMING 0-10V (D10)

- A- UNSCREW THE (4) SET SCREWS (INCLUDED) WITH ALLEN KEY TO REMOVE THE COVER FROM THE FIXTURE BASE. DO NOT COMPLETELY REMOVE SCREWS.
- B- DISCONNECT THE LED CONNECTOR AND KEEP THE COVER IN A SAFE PLACE.
- C- INSTALL UNIVERSAL CROSSBAR (INCLUDED) AND MAKE ALL NECESSARY CONNECTIONS (FOLLOWING WIRING DIAGRAM).
- D- INSTALL THE MOUNTING PLATE ON THE CROSSBAR AND USE THE (2) FLAT HEAD PHILIPS SCREW (INCLUDED).
- E- INSTALL THE BASE FIXTURE ON THE MOUNTING PLATE, USING THE FLAT HEAD SCREWS (INCLUDED) AND THE (2) WASHERS FOR WATERTIGHT INSTALLATION.
- F- CONNECT THE LED CONNECTOR AND INSTALL THE COVER. SCREW BACK COVER WITH THE (4) SET SCREWS USING THE INCLUDED ALLEN KEY.

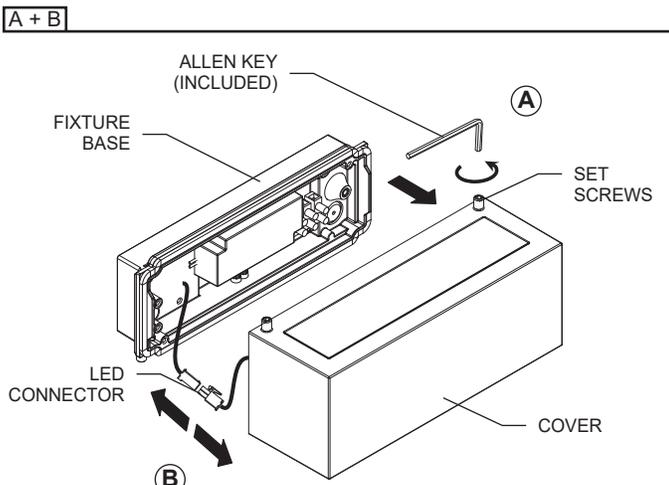

WIRING DIAGRAM

DIMMING
0-10V (D01 / D10)
120-277V



COVER DIMMING CABLES

IF NOT USING

