
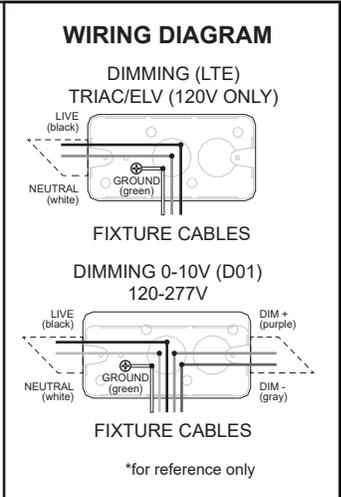




**IMPORTANT** - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

**SINGLE UNIT INSTALLATION (LENGTHS FROM 2' TO 8')**  
**INTEGRAL DRIVER (120 / 277V)**  
**DIMMING TRIAC/ELV (10%) OR 0-10V (1%)**

- A- MAKE CEILING CUT-OUT (SEE TABLE ON PAGE 3).
- B- OPEN THE CONNECTION BOXES ON TOP OF THE FIXTURE. UNSCREW THE BOXES PHILLIPS SCREW TO SLIDE OUT THE COVER. (SEE DETAIL 1)
- C- INSERT AND LOCK THE BX CABLE (NOT INCLUDED) INTO THE BX CONNECTORS (INCLUDED) AND MAKE NECESSARY WIRE CONNECTIONS (SEE WIRING DIAGRAM) USING TWIST CONNECTORS (NOT INCLUDED).
- D- UNSNAP THE DIFFUSER, REMOVE LED MODULE BY PUSHING ON IT AT THE END PART OF THE EXTRUSION AND DISCONNECT THE QUICK CONNECTOR.
- E- WITH THE MOUNTING BRACKETS IN THE NARROW POSITION, GENTLY INSERT THE FIXTURE INTO THE CEILING CUT-OUT.
- F- SCREW THE MOUNTING BRACKET SCREWS CLOCKWISE TO WIDEN AND LOWER THE MOUNTING BRACKETS ON THE CEILING. (SEE DETAIL 2)
- G- CONNECT THE LED MODULE'S QUICK CONNECTOR, SNAP THE LED MODULE AND THE DIFFUSER BACK INTO THE ALUMINUM EXTRUSION.

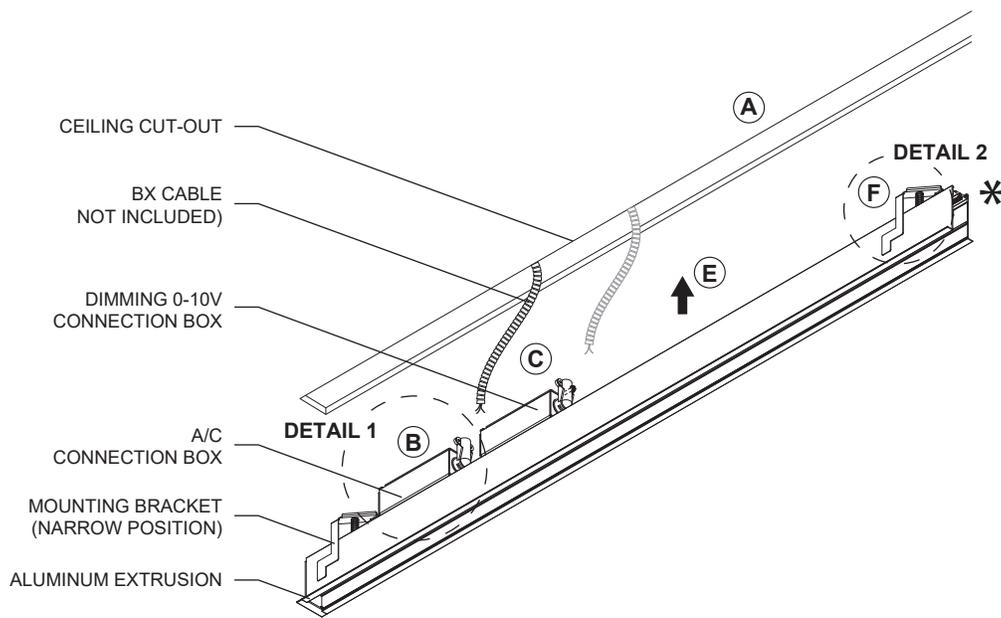


\* SINGLE UNITS SHIPPED WITH END CAPS INSTALLED AT BOTH ENDS (LENGTHS FROM 2' TO 8')

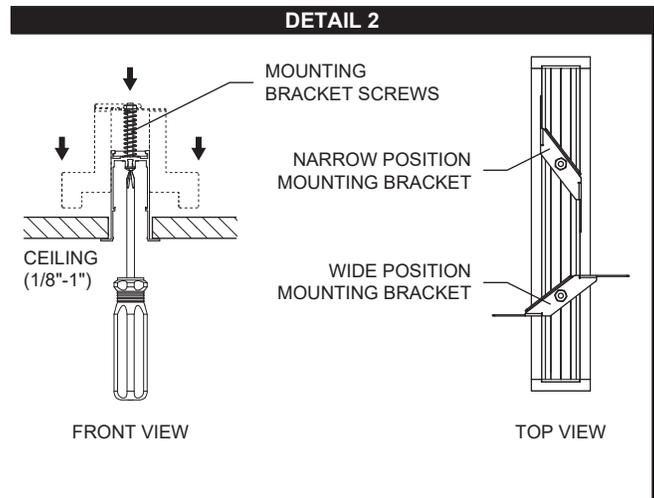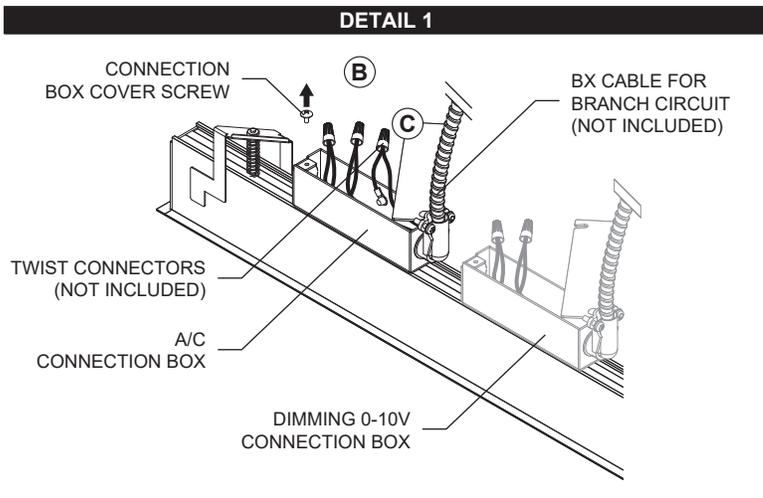


**IN-LINE UNIT INSTALLATION (LENGTHS FROM 9' AND MORE)**

- A- UNSNAP THE DIFFUSER AND REMOVE THE FIRST LED MODULE BY PUSHING ON IT AT THE BEGINNING PART OF THE IN-LINE FIXTURE. DISCONNECT THE LED MODULE QUICK CONNECTOR.
- B- WITH THE MOUNTING BRACKETS IN THE NARROW POSITION, GENTLY INSERT THE IN-LINE FIXTURE INTO CEILING CUT-OUT AND SLIDE IT AGAINST THE INSTALLED FIXTURE UNIT. MAKE SURE NOT TO PINCH ANY WIRES.
- C- SCREW MOUNTING BRACKET SCREWS CLOCKWISE TO SECURE FIXTURE UNIT. BEFORE ANCHORING, MAKE SURE THERE IS NO GAP BETWEEN FIXTURE UNITS.
- D- FASTEN THE JOINER PHILLIPS SCREW (**INCLUDED**) TO THE INSTALLED FIXTURE UNIT.
- E- MAKE THE NECESSARY CONNECTIONS USING THE QUICK CONNECTORS BETWEEN UNITS.
- F- RECONNECT THE INSTALLED FIXTURE UNIT LED MODULE USING THE QUICK CONNECTORS AND SNAP THE LED MODULE AND DIFFUSER BACK INTO THE FIXTURE.
- G- REPEAT STEPS **A** TO **F** FOR ALL NEW IN-LINE FIXTURES.

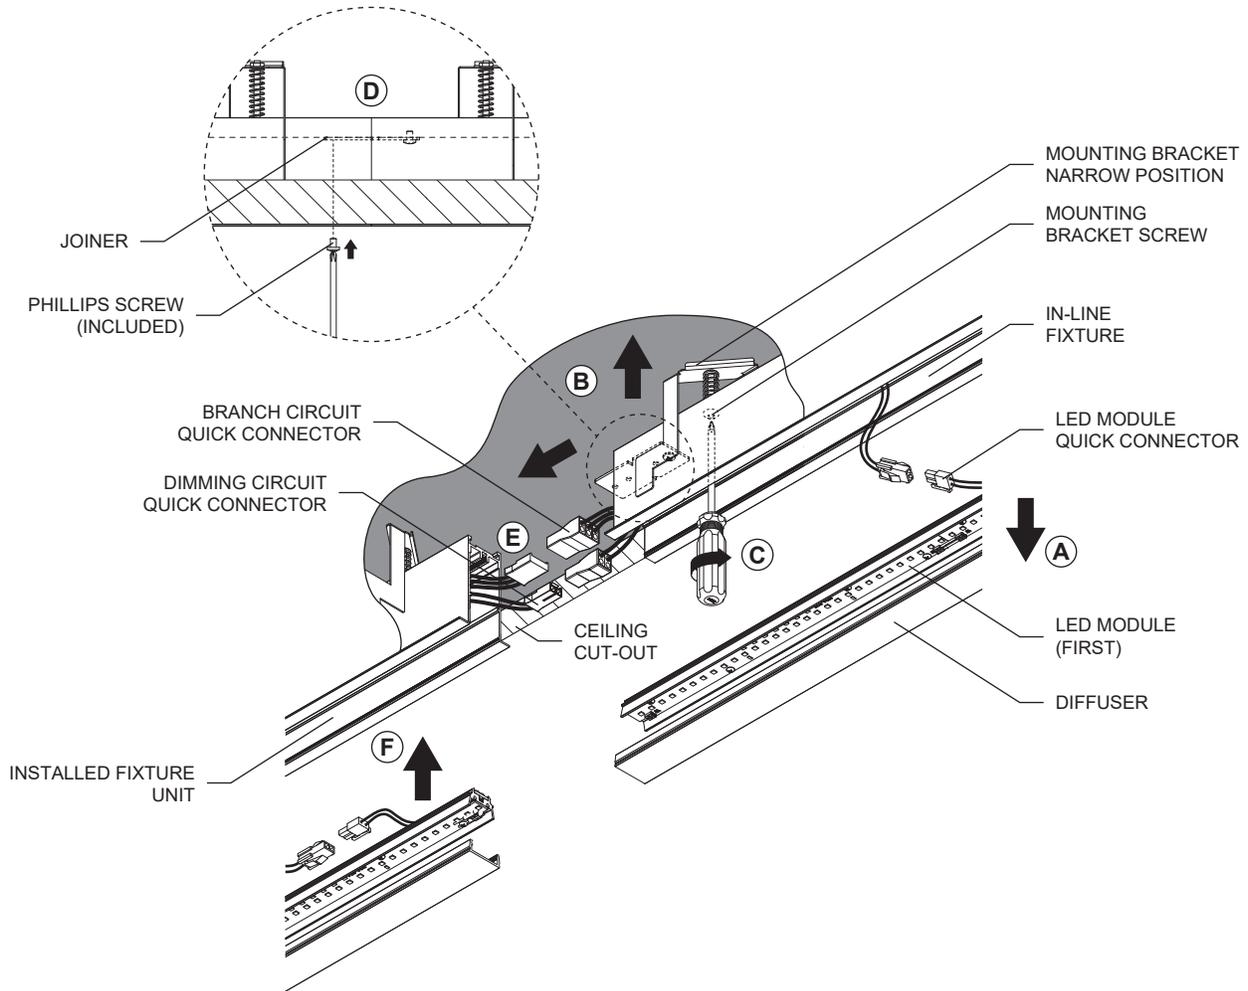

**RECESSED CUT-OUT DIMENSIONS**

IN LINE SYSTEM

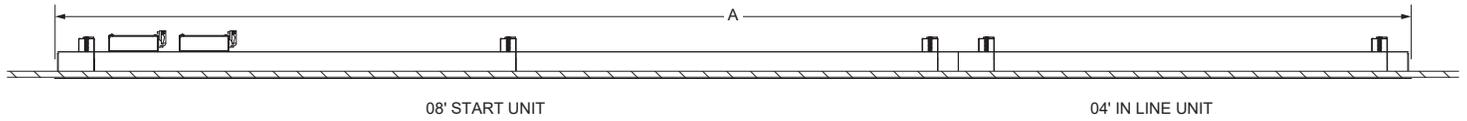

CUT-OUT FOR LINEAR RECESSED MODEL 3402*		
Nominal length	Actual length (A)	Cut-out
<b>04'</b>	4'-1/2" (1.233m)	1 3/8" x 4'-3/8" (35mm x 1.227m)
<b>08'</b>	8'-1/2" (2.450m)	1 3/8" x 8'-1/4" (35mm x 2.444m)
<b>12'</b>	12'-1/4" (3.664m)	1 3/8" x 11'-11 15/16" (35mm x 3.655m)
<b>16'</b>	16'-3/16" (4.881m)	1 3/8" x 15'-11 11/16" (35mm x 4.872m)
<b>24'</b>	23'-7/8" (7.312m)	1 3/8" x 23'-11 1/2" (35mm x 7.302m)

\*Refer to the cut-out guide document for full list of available lengths.