
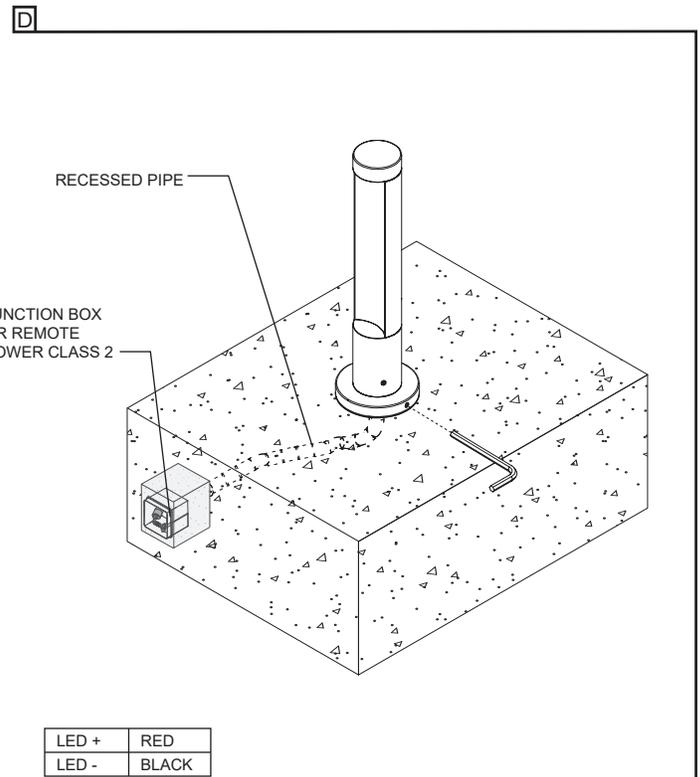
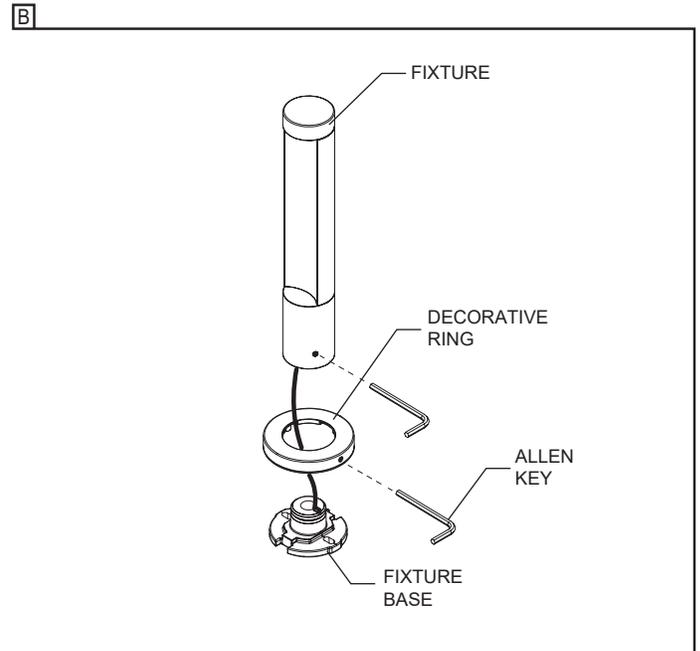
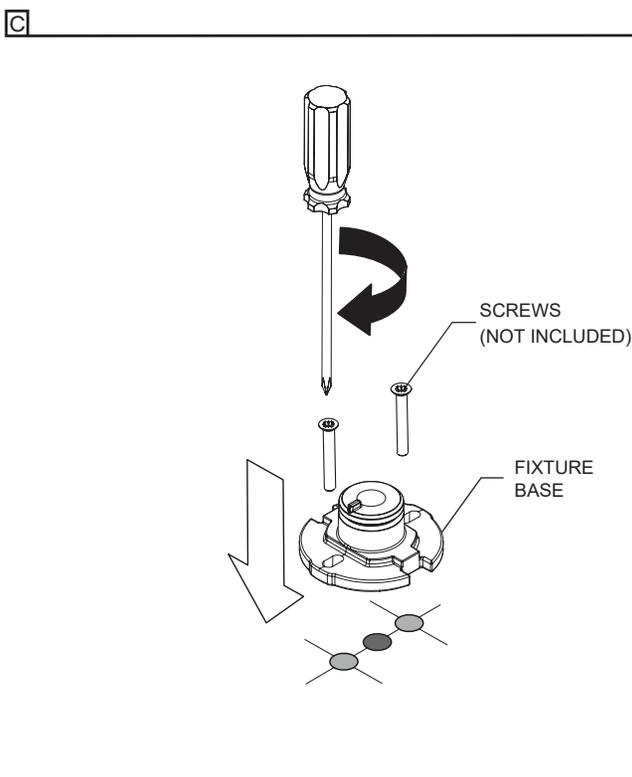


S2080, S2081

IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT.





STICK 1.5 SURFACE INSTALLATION WITH FIXTURE WHIP (FW-REM)

- A- PREPARE INSTALLATION SURFACE (**SEE DIMENSIONS BELOW**). THIS INSTALLATION NEEDS A RECESSED PIPE TO PASS THE WIRE.
- B- LOOSEN THE DECORATIVE RING AND REMOVE THE BASE FROM THE FIXTURE USING AN ALLEN KEY.
- C- SECURE THE BASE TO THE GROUND USING THE APPROPRIATE SCREWS (**2 X #8 NOT INCLUDED**).
- D- PASS THE WIRE IN THE RECESSED PIPE TO A REMOTE JUNCTION BOX OR A REMOTE POWER CLASS 2. MAKE ALL NECESSARY CONNECTION. SNAP THE FIXTURE BACK ONTO THE BASE AND LOCK IT USING AN ALLEN KEY. PLACE THE DECORATIVE RING BACK ON THE BASE AND FIX IT USING AN ALLEN KEY.

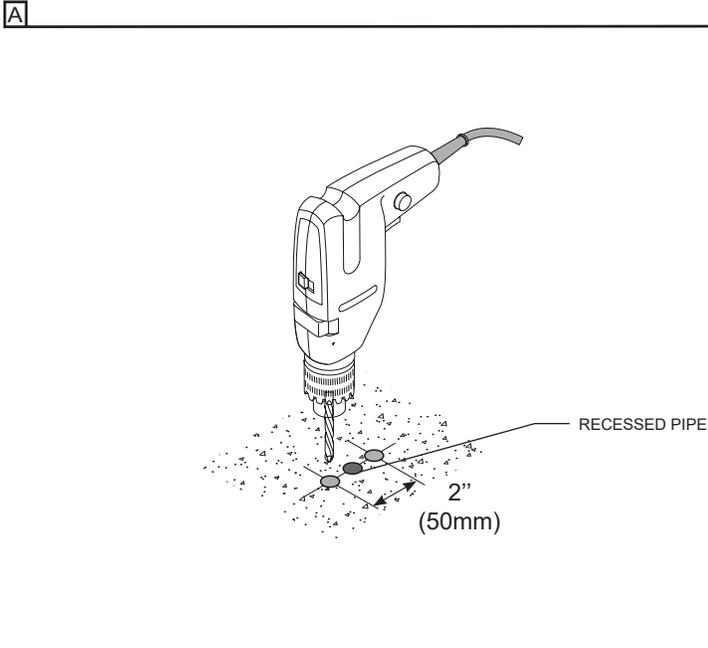

STICK 1.5 SURFACE INSTALLATION WITH JUNCTION BOX KIT (FOR INDOOR DRY OR DAMP LOCATION)

- A- FIX THE CROSSBAR TO THE JUNCTION BOX USING THE PHILLIPS SCREWS (2 X 8-32 **NOT INCLUDED**). MAKE SURE THE CROSSBAR IS PROPERLY ALIGNED.
- B- INSTALL THE MOUNTING PLATE ON THE CROSSBAR USING THE 2 PHILLIPS SCREWS (**INCLUDED**).
- C- UNCLIP THE BASE AND DECORATIVE RING USING AN ALLEN KEY. PASS THE CABLE THROUGH ALL THE PARTS OF THE FIXTURE.
- D- MAKE WIRE CONNECTIONS (**FOLLOWING POLARITY MARKINGS**) USING WATERTIGHT TWIST CONNECTORS (**NOT INCLUDED**).
ONCE CONNECTED, PUSH THE WIRES BACK INTO THE JUNCTION BOX AND FASTEN THE BASE ON THE MOUNTING PLATE USING THE (2) PHILLIPS SCREWS (**INCLUDED**).
- E- SNAP THE FIXTURE BACK ONTO THE BASE AND LOCK IT USING AN ALLEN KEY.

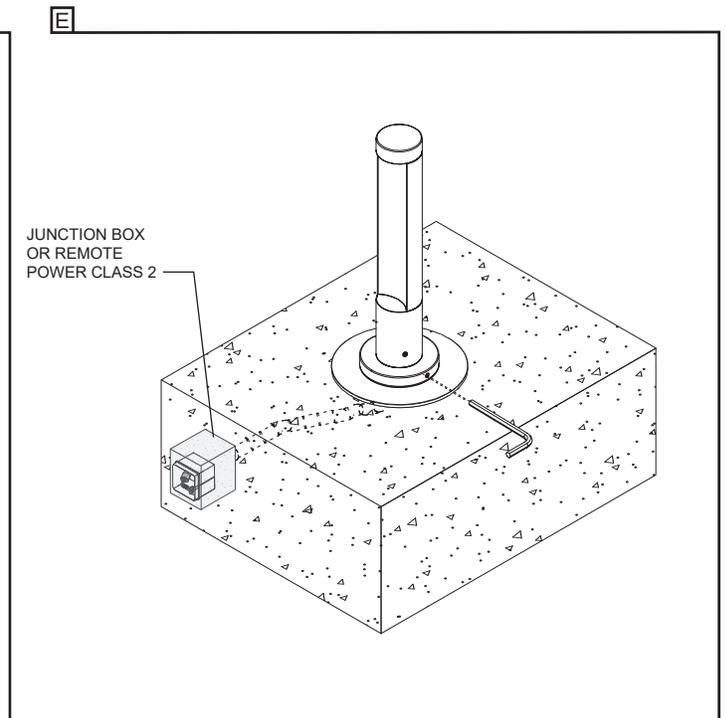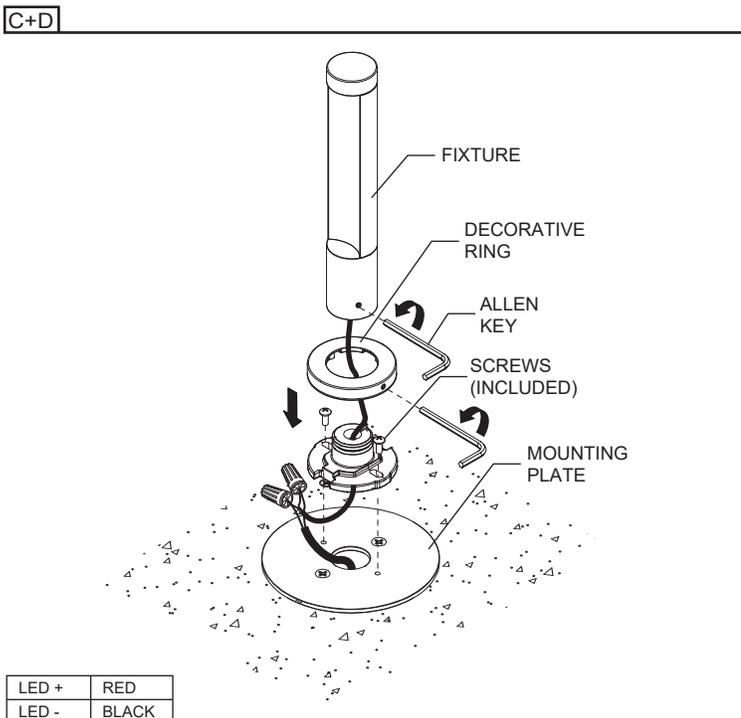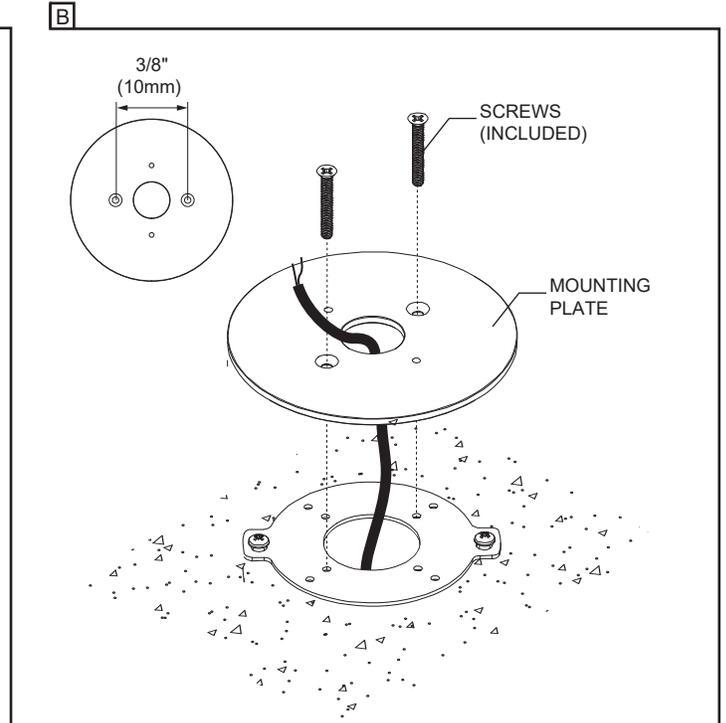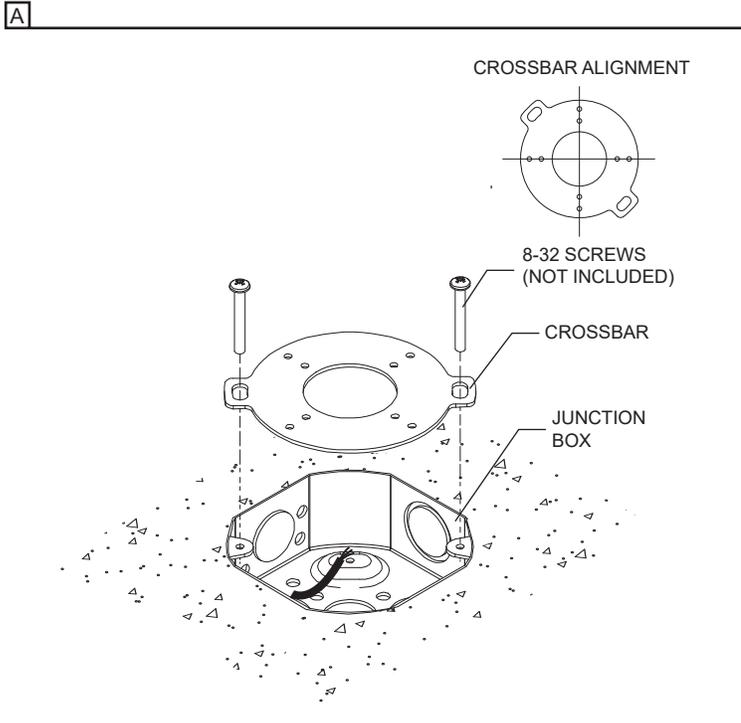

LED +	RED
LED -	BLACK

STICK 1.5 INTALLATION WITH STAKE

- A- PRE-DRILL THE GROUND TO FACILITATE THE INSERTION OF THE STAKE WITH A 3/8" DRILL BIT.
- B- UNCLIP THE BASE AND DECORATIVE RING FROM THE FIXTURE WITH AN ALLEN KEY.
- C- FASTEN THE BASE ONTO THE STAKE ACCESSORY (**S2088 TO BE ORDERED SEPARATELY**) USING THE PROVIDED (2) SCREWS AND (2) NUTS (**INCLUDED**) AND INSTALL THE SPIKE STOPPER.
- D- USE A RUBBER Mallet TO INSERT THE STAKE INTO THE SOIL. THE STOPPER SURFACE SHOULD BE RESTING ON THE SOIL.
- E- PASS THE WIRE THROUGH THE RECESSED PIPE TO A REMOTE JUNCTION BOX OR A REMOTE POWER CLASS 2. MAKE ALL NECESSARY CONNECTION. SNAP THE FIXTURE BACK ON THE BASE AND LOCK IT USING AN ALLEN KEY. PLACE THE DECORATIVE RING BACK ON THE BASE AND FIX IT USING AN ALLEN KEY.

