

IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

NEW CONSTRUCTION HOUSING INSTALLATION (IC / CP / AT)

INTEGRAL DRIVER (120V / 120-277V)

DIMMING TRIAC/ELV OR 0-10V (15%), LUTRON HI-LUME® (1% EcoSystem™ / 1% 2-WIRE)

AIRTIGHT INSTALLATION AND D01, D2B, D3 DIMMING ONLY AVAILABLE FOR TRIM MODEL.


A- ENGAGE THE (2) HANGER BARS IN THE MOUNTING BRACKET SLOTS AND ASSEMBLE THEM TOGETHER.

B- FASTEN THE HANGER BARS TO THE CEILING STRUCTURE WITH THE APPROPRIATE SCREWS (**NOT INCLUDED**). THE MOUNTING FRAME MUST BE FLUSH WITH THE CEILING STRUCTURE.



C- UNFASTEN CONNECTION BOX COVER FROM HOUSING.

D- MAKE ALL THE NECESSARY WIRE CONNECTIONS (**SEE WIRING DIAGRAMS**) AND FASTEN BACK CONNECTION BOX COVER.

E- INSTALL THE DRYWALL AND MAKE THE CUT-OUT OPENING (**SEE DIMENSIONS BELOW**).

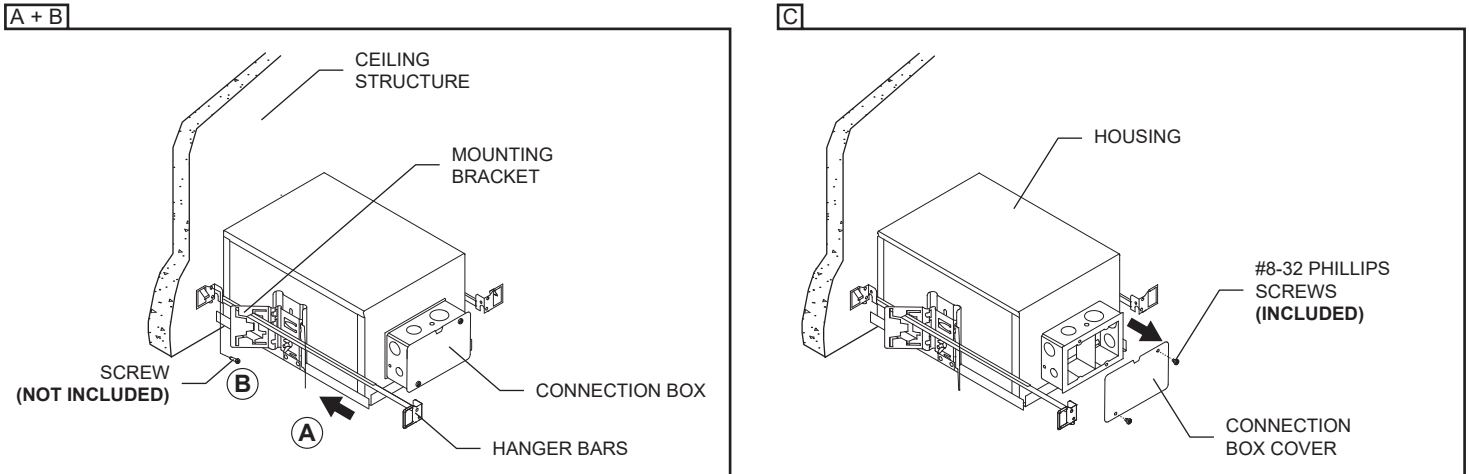

WIRING DIAGRAMS

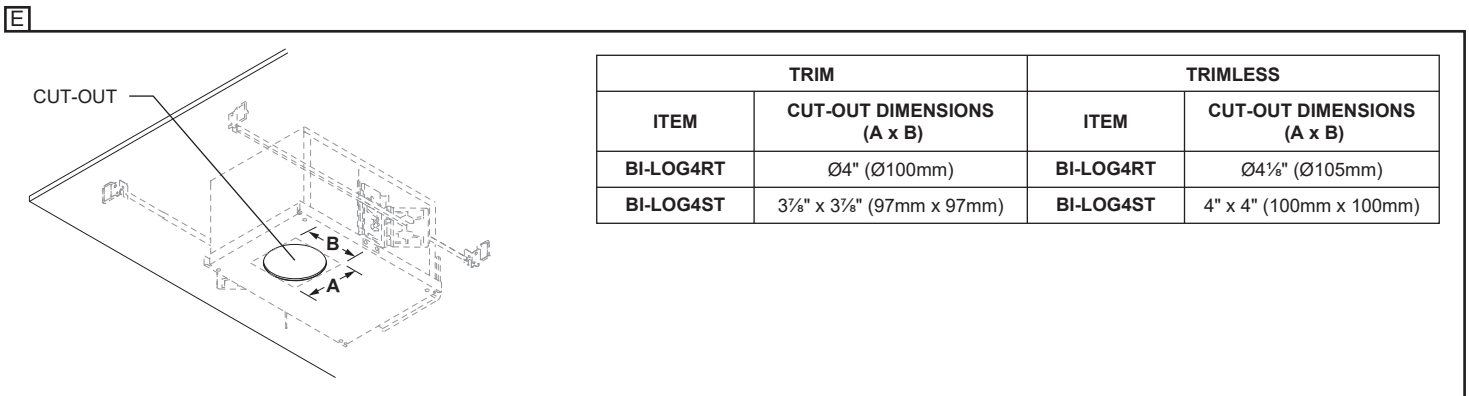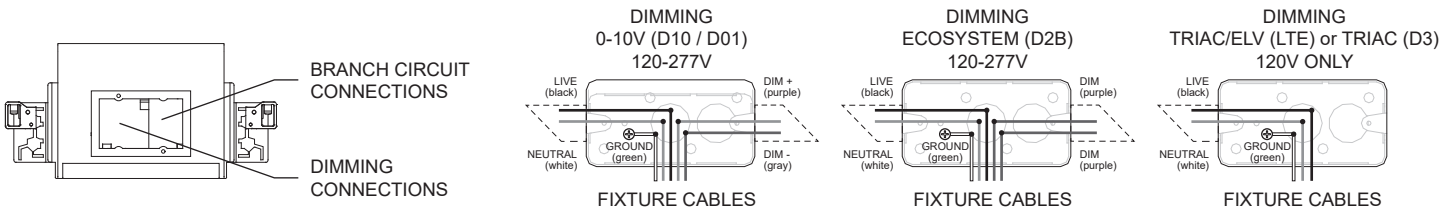

FRAME KIT INSTALLATION FOR TRIMLESS MODELS

TRIMLESS INSTALLATION ONLY AVAILABLE WITH DIMMING D10 AND LTE.

- A- PLACE THE FIXATION BRACKET TABS TO THE DESIRED POSITION DEPENDING ON THE CEILING THICKNESS. MAKE SURE THAT THE RETAINING CABLE IS LOOSE IN THE CEILING.
- B- INSERT AND TIGHTEN THE FRAME KIT IN THE CUT-OUT. MAKE SURE THE FIXATION BRACKETS ARE OPEN FOR PROPER INSTALLATION.
- C- FINISH THE ASSEMBLY BY PLASTERING, SANDING AND PAINTING.

