

**IMPORTANT** - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.


THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

## INSTALLATION ON 4" JUNCTION BOX INTEGRAL DRIVER (120-277V) / 120V ONLY FOR MINILOFT



FOR USE WITH STANDARD 4" JUNCTION BOX (120-277V)

VERIFY CROSSBAR ALIGNMENT IN REFERENCE FOR FIXTURE'S FINAL POSITION.

- A- UNFASTEN THE FIXTURE (4)(2 FOR MICROLOFT) SET SCREWS USING THE ALLEN KEY (INCLUDED) DO NOT COMPLETELY REMOVE SCREWS.
- B- INSTALL THE CROSSBAR ON THE JUNCTION BOX (NOT INCLUDED) WITH (2) 8-32 SCREWS (NOT INCLUDED).
- C- PASS THE CABLE THROUGH THE CENTER HOLE OF THE MOUNTING PLATE AND CROSSBAR.
- D- MAKE ALL THE NECESSARY CONNECTIONS (SEE WIRING DIAGRAM) USING TWIST CONNECTORS (NOT INCLUDED).
- E- INSTALL THE MOUNTING PLATE ON THE CROSSBAR WITH THE (2) MOUNTING PHILLIPS SCREWS (INCLUDED).
- F- INSTALL THE BASE FIXTURE ON THE MOUNTING PLATE, USING (2) PHILLIPS SCREWS (INCLUDED) AND THE WATERTIGHT WASHERS (INCLUDED) (SEE BELOW). \* IMPORTANT FOR A WATERTIGHT INSTALLATION WASHERS ARE REQUIRED.
- G- CONNECT THE QUICK CONNECTOR (INCLUDED), LIFT THE FIXTURE'S HEAD AND FASTEN THE SET SCREWS WITH THE ALLEN KEY (INCLUDED).



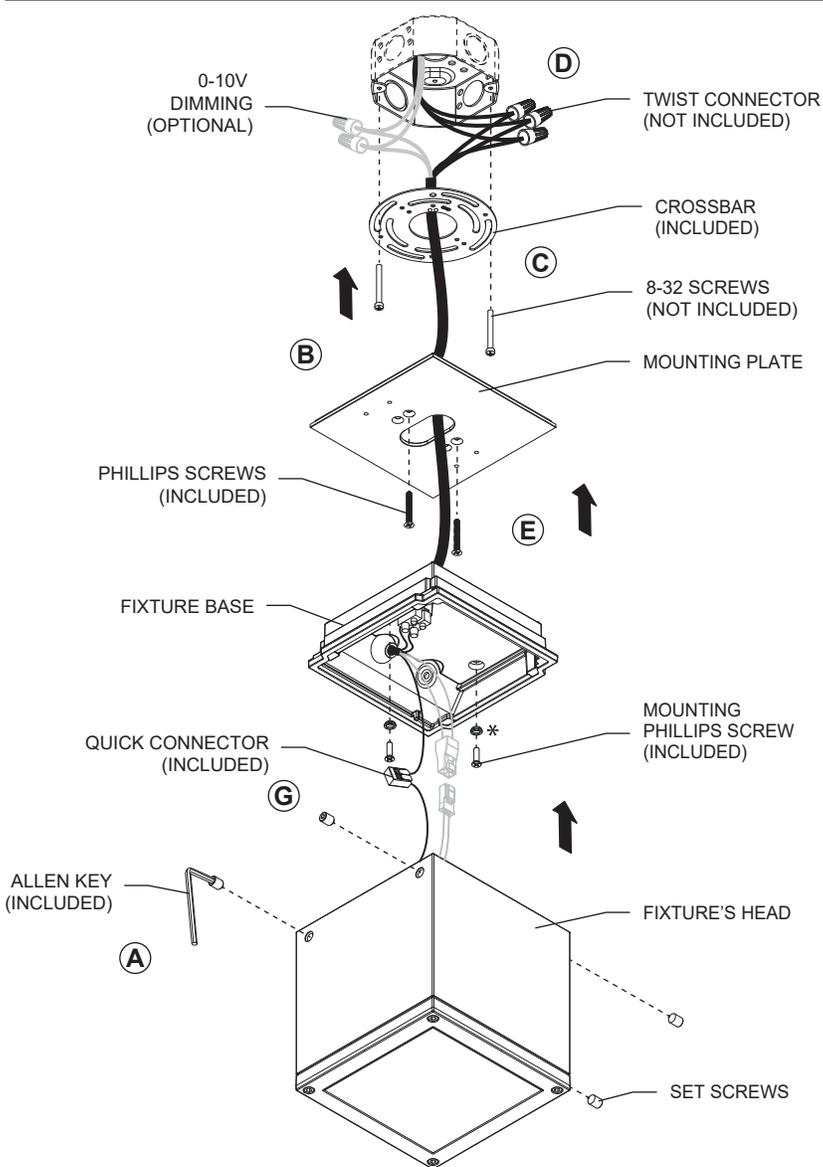


**BOTTOM VIEW  
CROSSBAR ALIGNMENT**

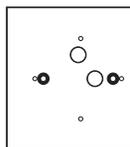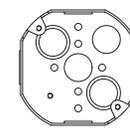

**S6646**


**BOTTOM VIEW  
CROSSBAR ALIGNMENT**

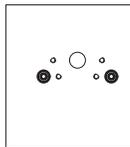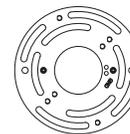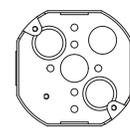

**S6615**

**WIRING DIAGRAM**


NO DIMMING

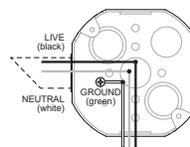

FIXTURE CABLES

**WIRING DIAGRAM**

DIMMING 120-277V  
0-10V (D10)

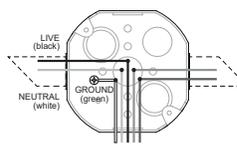

FIXTURE CABLES



\* 2x WASHER



**If the wires for 0-10V dimming are not used, protect wire ends with twist connectors.**