
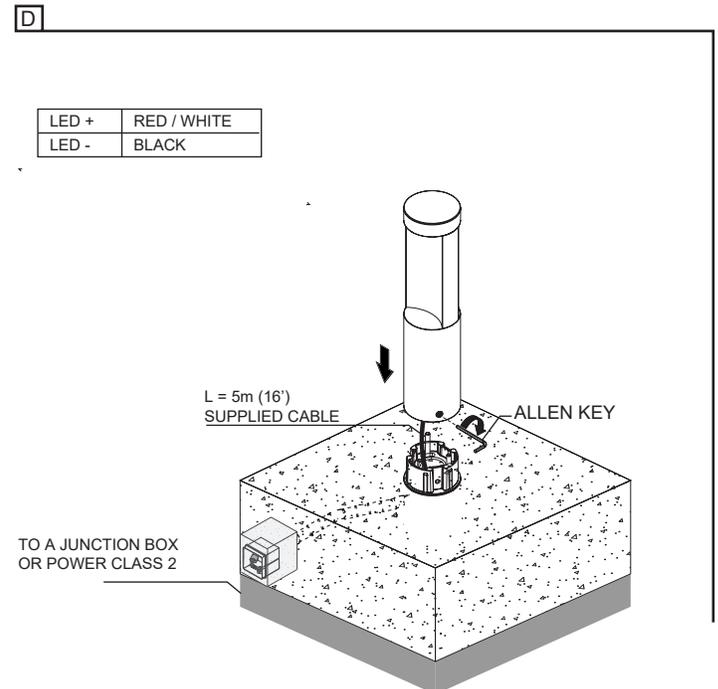
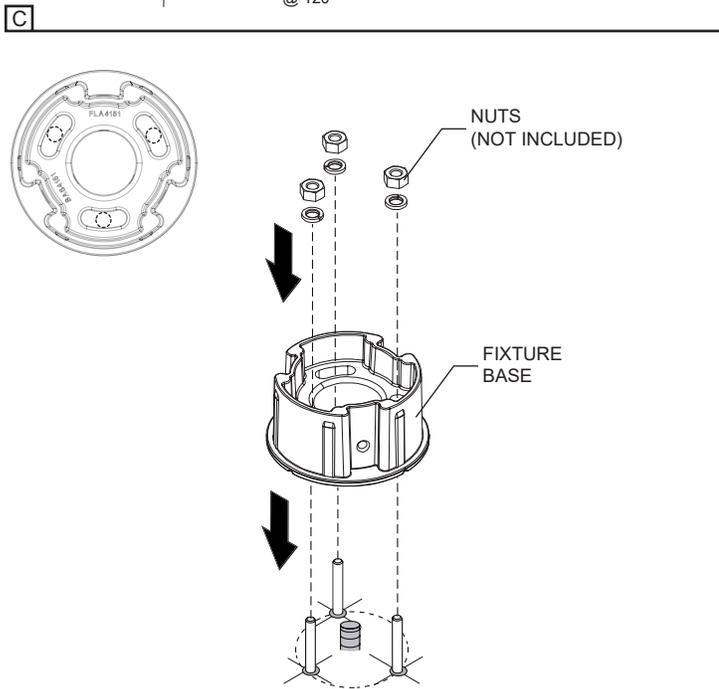
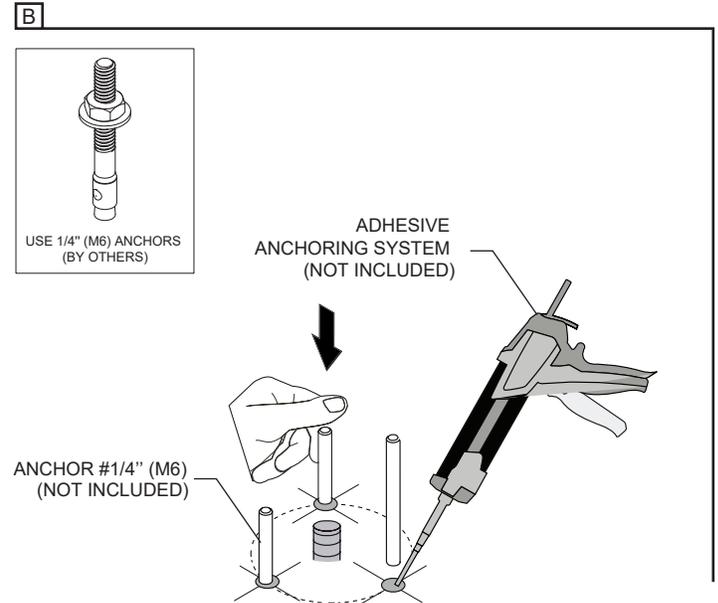


S2090, S2091, S2095, S2096

**IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT.**

## STICK 3 SURFACE INTALLATION WITH FIXTURE WHIP (FW-REM)

- A- PRE-DRILL THE GROUND TO FACILITATE THE INSERTION OF THE ANCHOR (**NOT INCLUDED**).
- B- APPLY THE ADHESIVE (**NOT INCLUDED**), THEN INSERT THE (3) ANCHORS.
- C- PLACE THE BASE ON THE SURFACE, ENSURING THE ANCHORS GO THROUGH THE DESIGNATED HOLES SO THE ENTIRE ASSEMBLY CAN BE SECURED WITH THE (3) NUTS (**NOT INCLUDED**).
- D- PASS THE WIRES IN THE PRE INSTALLED CHANNEL OR GUTTER TO A REMOTE JUNCTION BOX OR TO A REMOTE POWER CLASS 2. MAKE ALL NECESSARY CONNECTIONS WITH A POWER CLASS 2. SNAP THE FIXTURE BACK ON THE BASE AND LOCK IT USING AN ALLEN KEY.


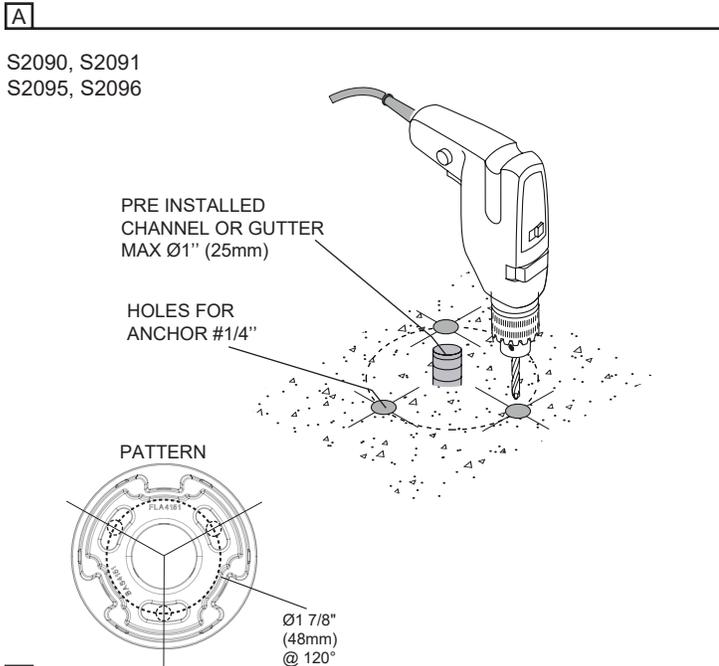


## STICK 3 SURFACE INTALLATION WITH FLANGE ACCESSORY (S2099) (FW-REM)


- A- PREPARE THE DESIRED DRAINING USING 8"-12" (20-30CM) OF GRAVEL UNDER THE FLANGE.  
INSTALL AN APPROPRIATE ELECTRICAL CONDUIT (**NOT INCLUDED**) THROUGH THE FLANGE.
- B- POUR CONCRETE IN AND MAKE SURE THAT IT SITS 5MM UNDER THE TOP OF THE FLANGE.
- C- SEPARATE FIXTURE FROM ITS BASE. FASTEN THE BASE ON THE FLANGE ACCESSORY (**S2099 TO BE ORDERED SEPARATELY**) USING THE PROVIDED 3 NUTS. PASS THE WIRES IN THE PRE INSTALLED CHANNEL OR GUTTER TO A REMOTE JUNCTION BOX OR TO A REMOTE POWER CLASS 2. MAKE ALL NECESSARY CONNECTIONS WITH A POWER CLASS 2.
- D- SNAP THE FIXTURE BACK ON THE BASE AND LOCK IT USING AN ALLEN KEY.

**A**

S2090, S2091  
S2095, S2096

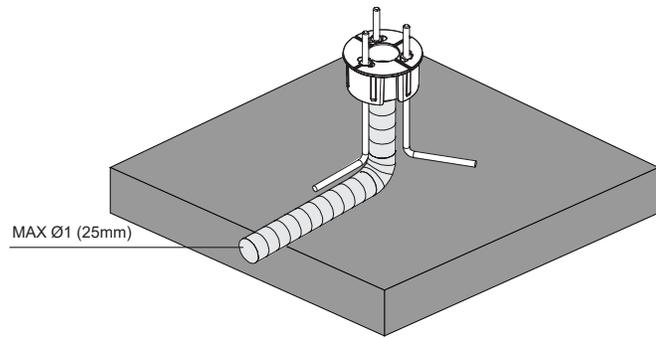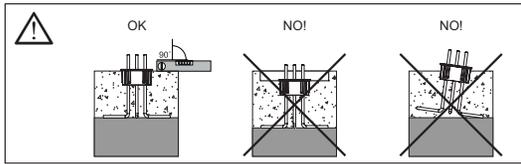


**B**

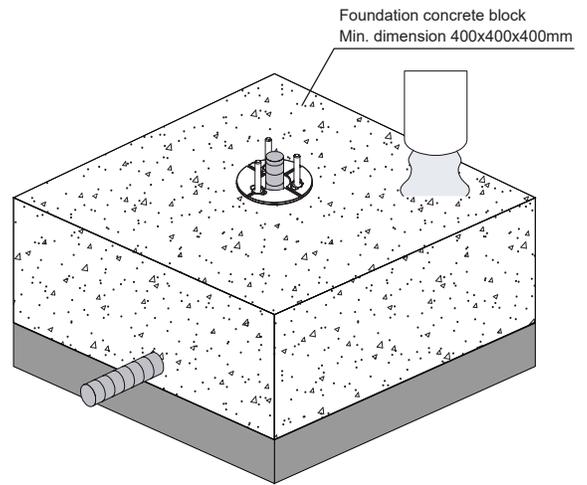


**C+D**

### FLANGE DIMENSIONS

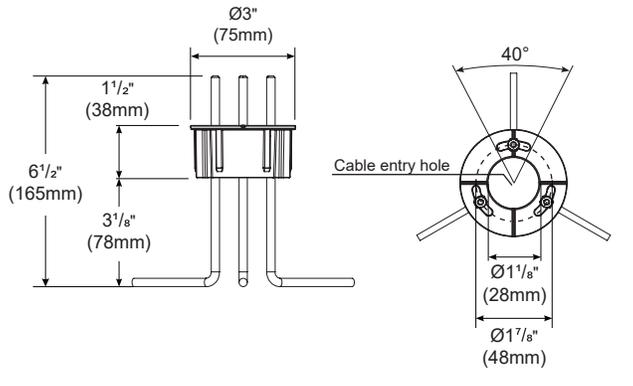

LED +	RED / WHITE
LED -	BLACK

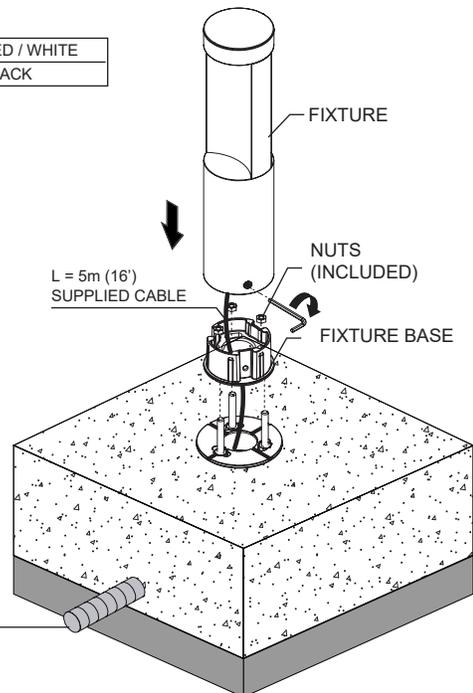

TO A JUNCTION BOX  
OR POWER CLASS 2

## STICK 3 INTALLATION WITH STAKE ACCESSORY (S2098) (FW-REM)

- A- PRE-DRILL THE GROUND TO FACILITATE THE INSERTION OF THE STAKE WITH A 3/8" DRILLING BIT.
- B- INSERT 2 FLAT HEAD SCREWS BEFORE ATTACHING THE PROVIDED BRACKET TO THE BASE OF THE FIXTURE USING (3) SCREWS AND (3) NUTS (INCLUDED) WITH AN ALLEN KEY.
- C- FASTEN THE BASE ON THE STAKE ACCESSORY (S2098 TO BE ORDERED SEPARATELY) USING THE (2) NUTS (INCLUDED).
- D- USE A RUBBER Mallet TO INSERT THE STAKE INTO THE SOIL. THE STOPPER SURFACE SHOULD BE RESTING ON THE SOIL.
- E- PASS THE WIRES IN THE PRE INSTALLED CHANNEL OR GUTTER TO A REMOTE JUNCTION BOX AND/OR TO A REMOTE POWER CLASS 2. MAKE ALL NECESSARY CONNECTIONS WITH A POWER CLASS 2.
- SNAP THE FIXTURE BACK ON THE BASE AND LOCK IT USING AN ALLEN KEY.

