


IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
 THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

**INSTALLATION ON 4" JUNCTION BOX
 INTEGRAL DRIVER (120-277V)
 DIMMING 0-10V (15%)**


FOR USE WITH STANDARD 4" JUNCTION BOX (120-277V)

- A- UNFASTEN THE FIXTURE (3) SET SCREWS USING THE ALLEN KEY (INCLUDED). DO NOT COMPLETELY REMOVE THE SCREWS.
- B- INSTALL THE CROSSBAR ON THE JUNCTION BOX (NOT INCLUDED) WITH THE (2) 8-32 SCREWS (NOT INCLUDED).

A

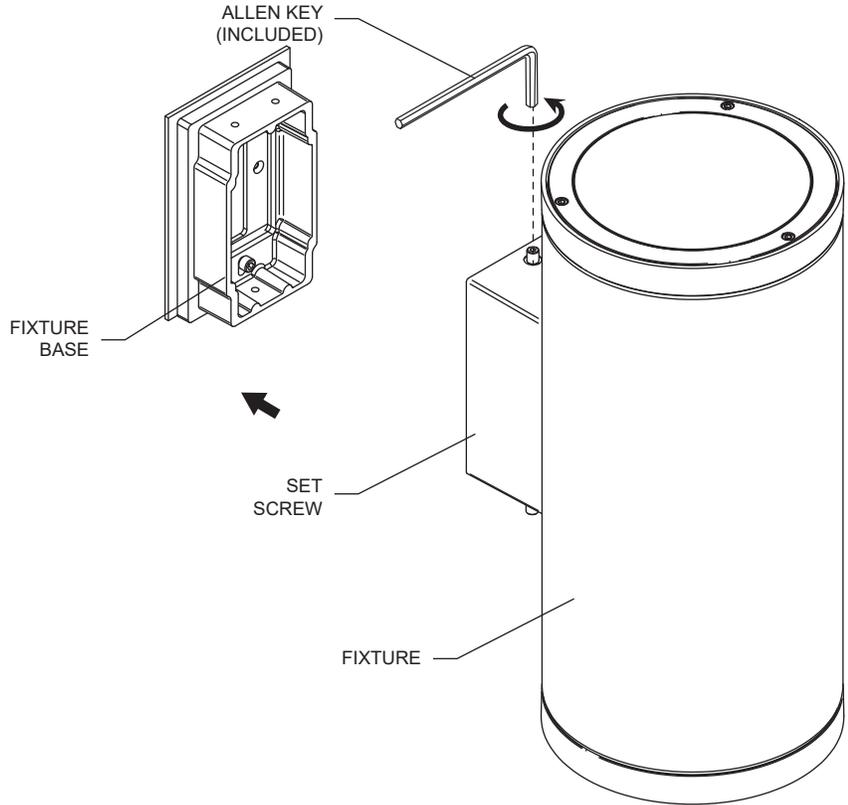


B

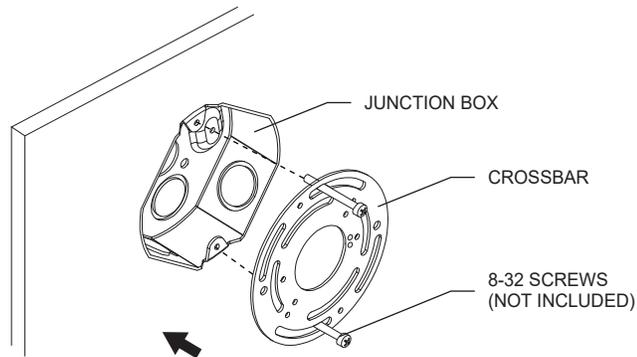

- C- PASS THE CABLE THROUGH THE CENTER HOLES OF THE MOUNTING PLATE AND CROSSBAR.
- D- MAKE ALL THE NECESSARY CONNECTIONS (**SEE WIRING DIAGRAM**) USING TWIST CONNECTORS (**NOT INCLUDED**).
- E- INSTALL THE MOUNTING PLATE ON THE CROSSBAR WITH THE (2) PHILLIPS SCREWS (**INCLUDED**).
- F- FASTEN THE FIXTURE BASE TO THE MOUNTING PLATE USING THE (3) PHILLIPS SCREWS (**INCLUDED**).
- G- FASTEN THE FIXTURE BACK TO ITS BASE WITH (3) SET SCREWS USING THE ALLEN KEY (**INCLUDED**)

C + D + E + F + G

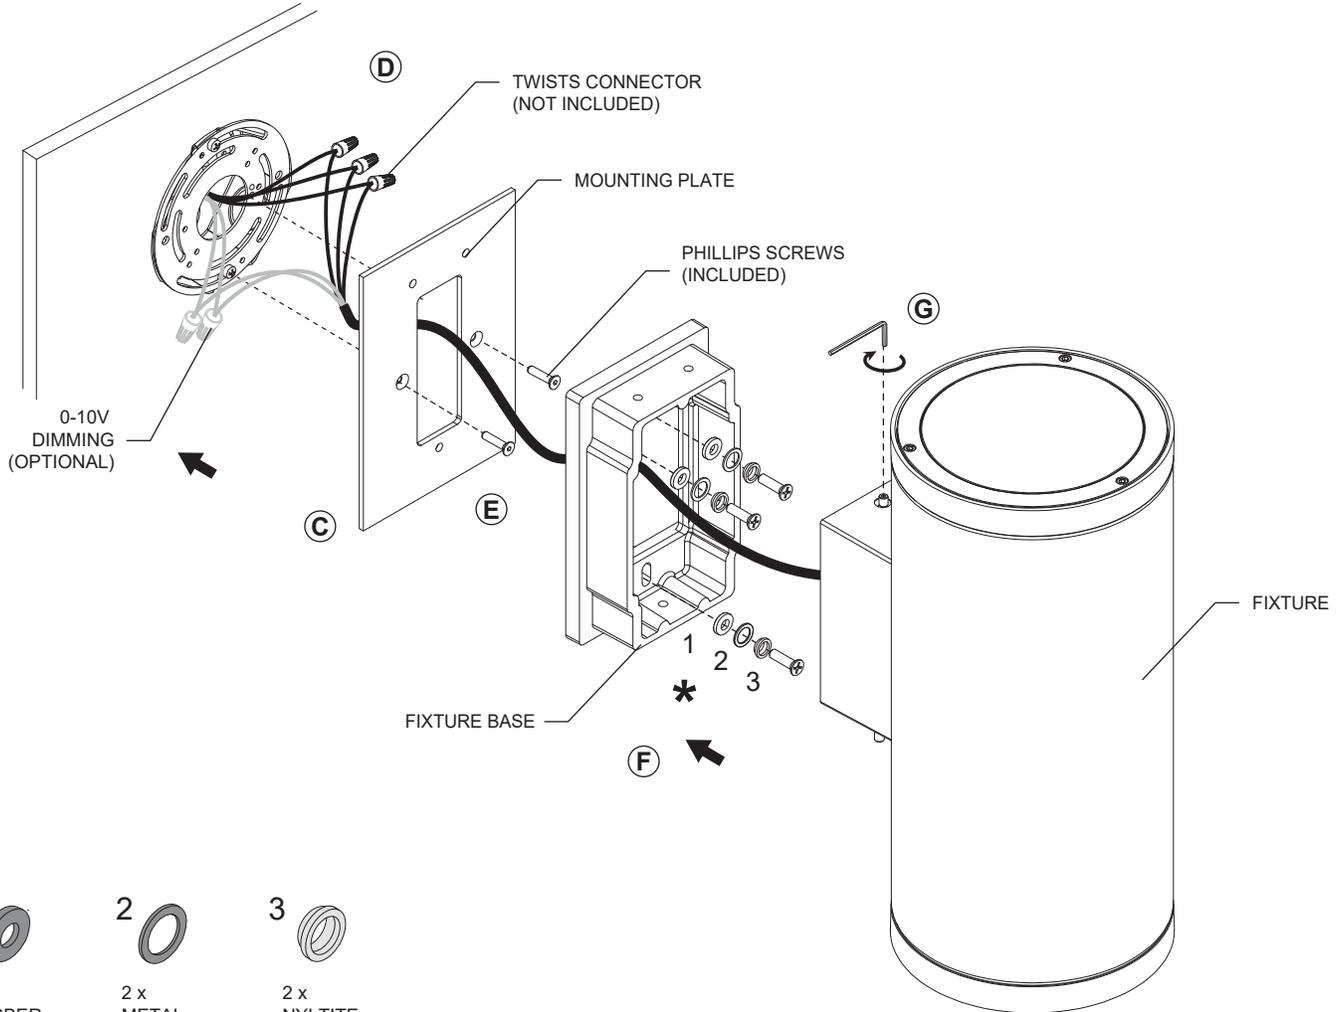


- | | | |
|-------------------------|------------------------|--------------------------|
| 1 | 2 | 3 |
| | | |
| 2 x
RUBBER
WASHER | 2 x
METAL
WASHER | 2 x
NYLTITE
WASHER |

*ORDER MUST BE RESPECTED TO GUARANTEE WATERTIGHT INSTALLATION

WIRING DIAGRAM


NO DIMMING

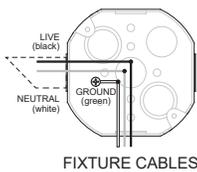

FIXTURE CABLES

WIRING DIAGRAM

DIMMING 120-277V
0-10V (D10)

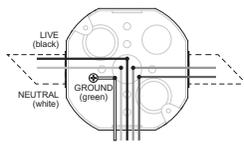

FIXTURE CABLES



If the wires for 0-10V dimming are not used, protect wire ends with twist connectors.