





# KEEN FAMILY

POLE MODEL : S1520W / S1520N / S1521W / S1521N / S1530W / S1530N  
S1531W / S1531N / S1533W / S1533N  
WALL MODEL : S1500W / S1500N / S1501W / S1501N / S1505W / S1505N  
S1510W / S1510N / S1511W / S1511N / S1513W / S1513N

**IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.**  
THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

## POLE INSTALLATION

- A- ON POLE, PLACE THE DRILLING GUIDE.
- B- PRE DRILL THE HOLES ( $\varnothing 7/16''$ ) FOR THE POWER CABLE INTO THE TENON.
- C- INSERT THE WIRE PROTECTOR INTO THE HOLE.
- D- FASTEN THE GASKET AND THE MOUNTING FRAME ON THE POLE WITH THE WATERTIGHT SCREW (**INCLUDED**).

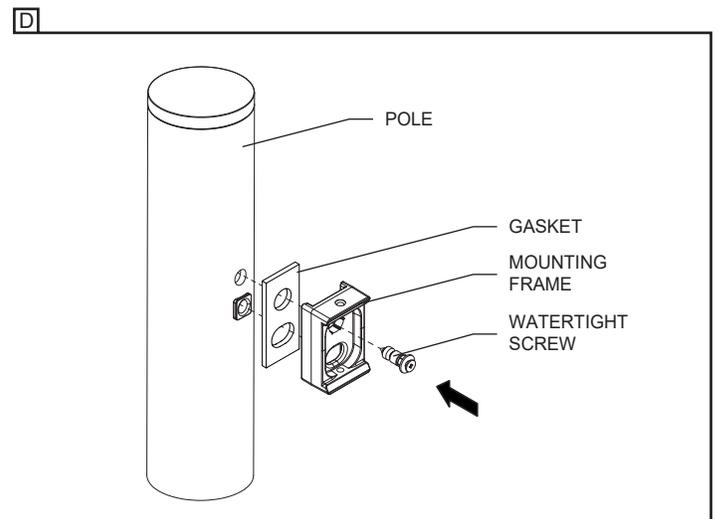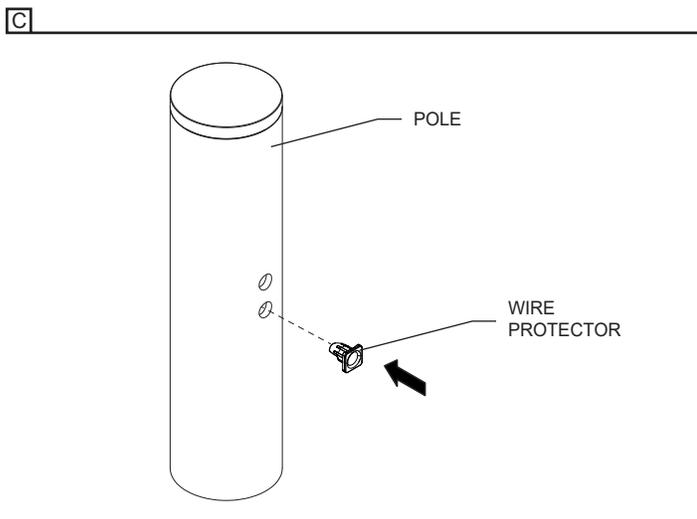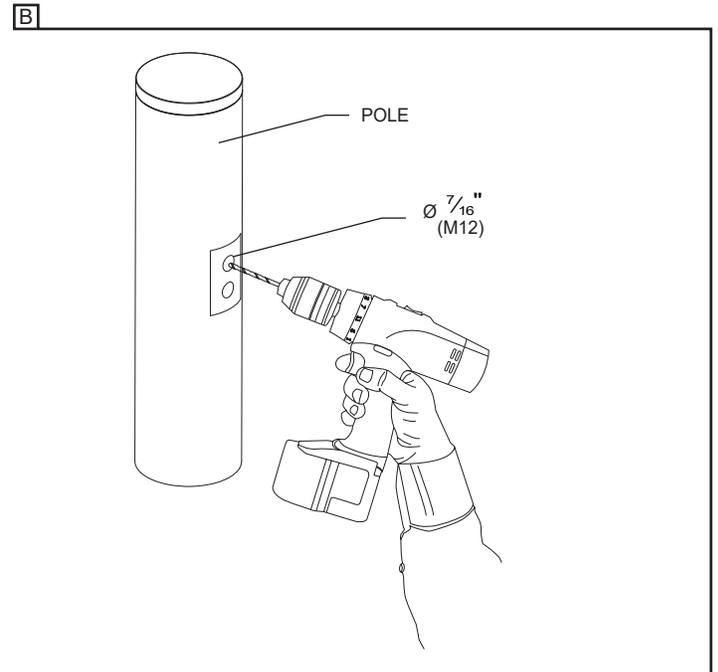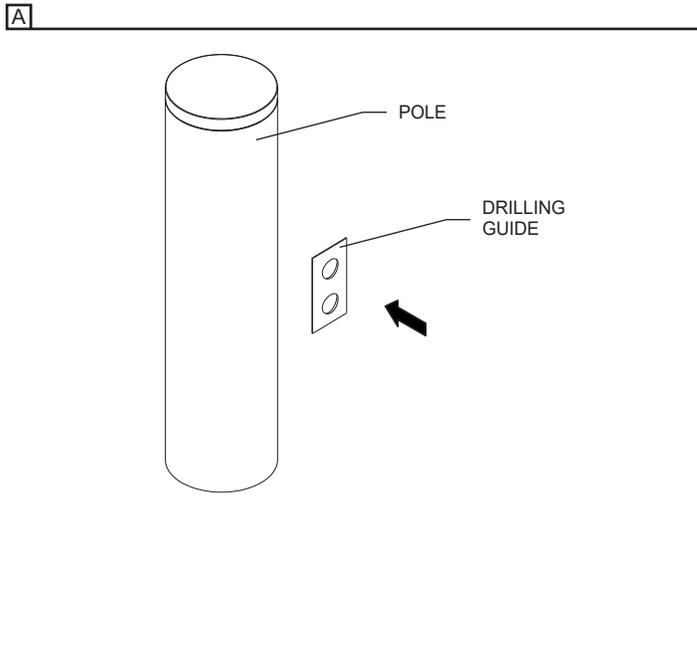


# KEEN FAMILY

POLE MODEL : S1520W / S1520N / S1521W / S1521N / S1530W / S1530N  
S1531W / S1531N / S1533W / S1533N  
WALL MODEL : S1500W / S1500N / S1501W / S1501N / S1505W / S1505N  
S1510W / S1510N / S1511W / S1511N / S1513W / S1513N

E- PASS THE CABLE THROUGH THE HOLE AND MAKE ALL NECESSARY CONNECTIONS, USING THE CONDUCTOR CONNECTOR (**INCLUDED**).

E

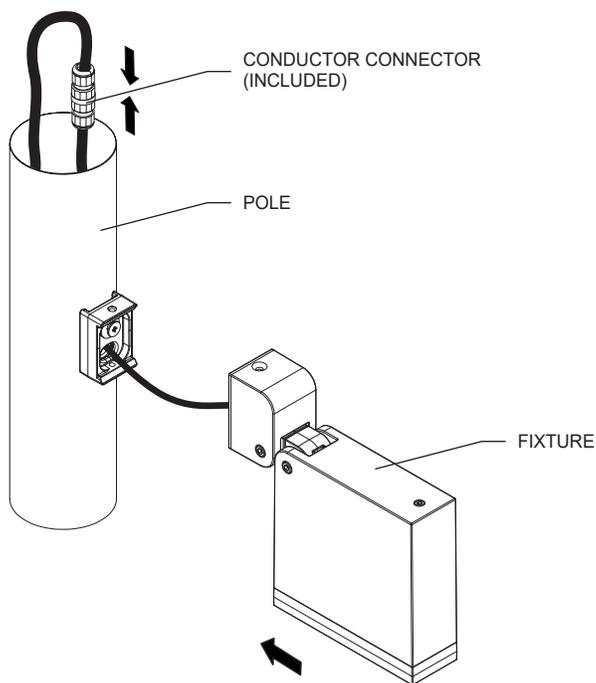


POLE MODEL : S1520W / S1520N / S1521W / S1521N / S1530W / S1530N  
 S1531W / S1531N / S1533W / S1533N  
 WALL MODEL : S1500W / S1500N / S1501W / S1501N / S1505W / S1505N  
 S1510W / S1510N / S1511W / S1511N / S1513W / S1513N

## WALL INSTALLATION ON STANDARD 4" JUNCTION BOX (120V)

- A- UNFASTEN THE (2) SET SCREWS (INCLUDED) USING THE ALLEN KEY (INCLUDED) TO REMOVE THE FIXTURE BASE.  
**\*DO NOT COMPLETELY REMOVE THE SET SCREWS.**
- B- INSTALL UNIVERSAL CROSSBAR (INCLUDED) AND MAKE ALL NECESSARY CONNECTIONS (FOLLOWING WIRING DIAGRAM).
- C- INSTALL THE MOUNTING PLATE ON THE CROSSBAR AND USE THE (2) FLAT HEAD PHILIPS SCREWS (INCLUDED).
- D- FASTEN THE FIXTURE BASE TO THE MOUNTING PLATE USING THE (2) PHILLIPS SCREWS (INCLUDED).
- E- FASTEN THE FIXTURE BACK TO IT'S BASE WITH THE (2) SET SCREWS USING THE ALLEN KEY (INCLUDED).

**A + B + C + D + E**

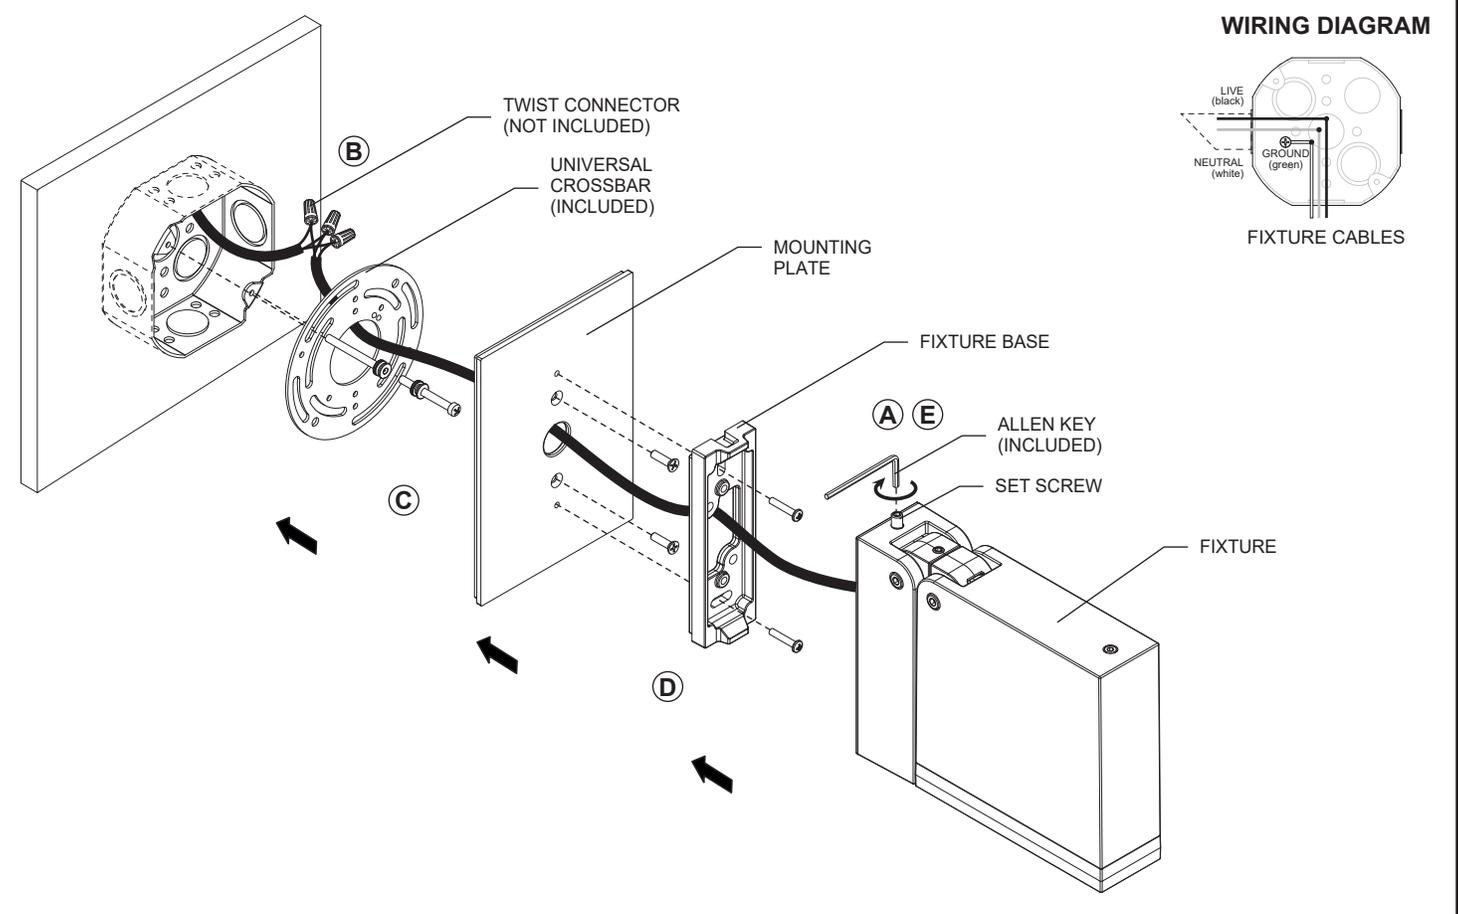


POLE MODEL : S1520W / S1520N / S1521W / S1521N / S1530W / S1530N  
 S1531W / S1531N / S1533W / S1533N  
 WALL MODEL : S1500W / S1500N / S1501W / S1501N / S1505W / S1505N  
 S1510W / S1510N / S1511W / S1511N / S1513W / S1513N


## WALL INSTALLATION ON STANDARD 2" JUNCTION BOX (120V)

- A- UNFASTEN THE (2) SET SCREWS (**INCLUDED**) USING THE ALLEN KEY (**INCLUDED**) TO REMOVE THE FIXTURE BASE.
- \*DO NOT COMPLETELY REMOVE THE SET SCREWS.**
- B- MAKE ALL NECESSARY CONNECTIONS (**FOLLOWING WIRING DIAGRAM**).
- C- FASTEN THE FIXTURE BASE TO THE JUNCTION BOX USING THE (2) PHILLIPS SCREWS (**INCLUDED**).
- D- FASTEN THE FIXTURE BACK TO IT'S BASE WITH THE (2) SET SCREWS USING THE ALLEN KEY (**INCLUDED**).

A + B + C + D

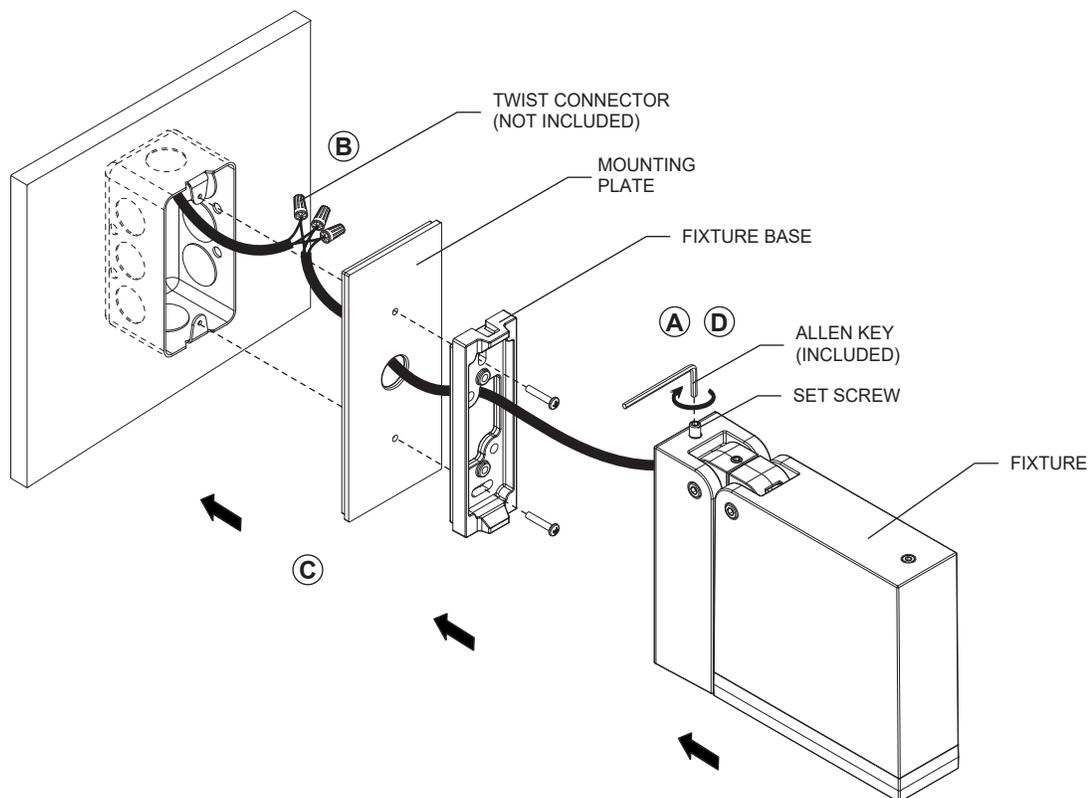

### WIRING DIAGRAM

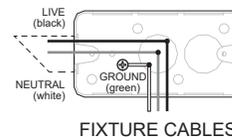

# KEEN FAMILY

POLE MODEL : S1520W / S1520N / S1521W / S1521N / S1530W / S1530N  
S1531W / S1531N / S1533W / S1533N  
WALL MODEL : S1500W / S1500N / S1501W / S1501N / S1505W / S1505N  
S1510W / S1510N / S1511W / S1511N / S1513W / S1513N

## ADJUST POSITION

- A- UNFASTEN THE (2) SET SCREWS (**INCLUDED**) WITH ALLEN KEY TO MOVE THE ORIENTATION OF THE HEAD FIXTURE.  
DO NOT COMPLETELY REMOVE THE SCREWS.  
**\*ONCE THE FIXTURE POSITION IS CORRECT, FASTEN THE SET SCREWS TO LOCK IT IN PLACE.**

A

