
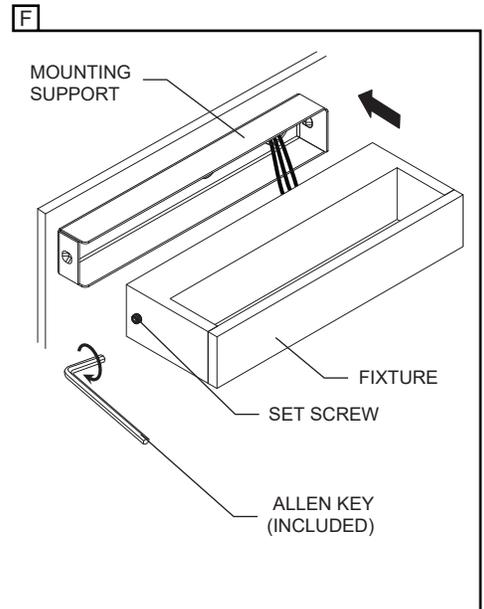
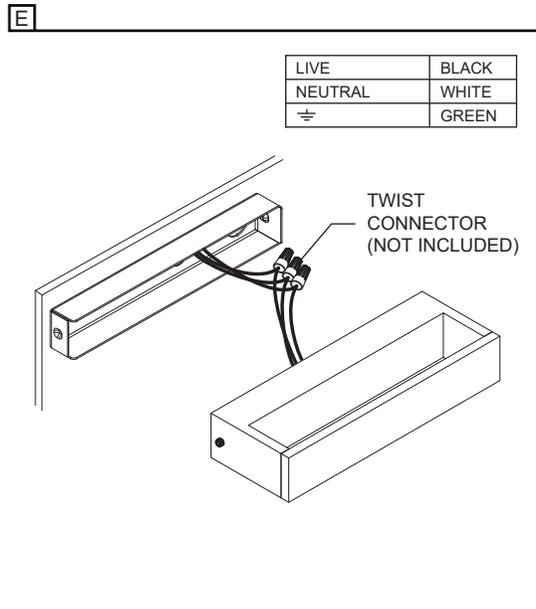
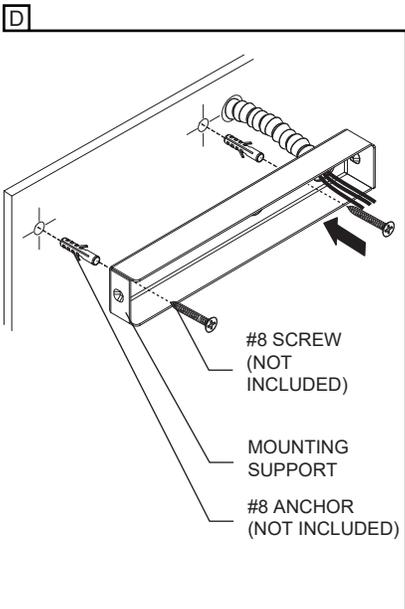
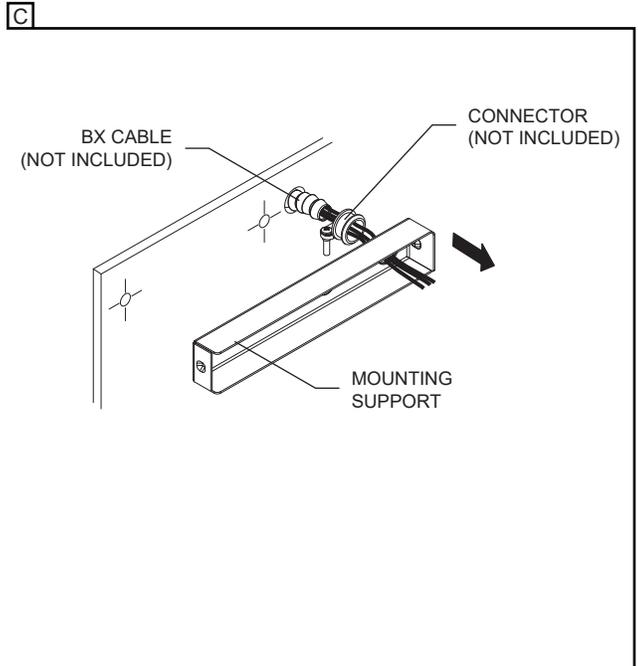


IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.





INSTALLATION WITH DIRECT FEED - INTEGRAL DRIVER (120V / 277V)

- A- PREPARE SURFACE FOR INSTALLATION USING DIMENSIONS BELOW.
- B- UNFASTEN THE SET SCREWS WITH AN ALLEN KEY (**INCLUDED**) TO REMOVE THE MOUNTING SUPPORT FROM THE FIXTURE. DO NOT COMPLETELY REMOVE SCREWS.
- C- INSTALL BX CABLE (**NOT INCLUDED**) ON THE MOUNTING SUPPORT USING PROPER CONNECTOR (**NOT INCLUDED**).
- D- FASTEN THE MOUNTING SUPPORT TO THE SURFACE USING #8 SCREWS AND ANCHORS (**NOT INCLUDED**).
- E- MAKE ALL NECESSARY CONNECTIONS (**FOLLOWING WIRING DIAGRAM AND POLARITY MARKING**) USING TWIST CONNECTORS (**NOT INCLUDED**).
- F- FASTEN THE FIXTURE ON THE MOUNTING SUPPORT WITH THE SET SCREWS USING AN ALLEN KEY (**INCLUDED**), AVOIDING PINCHING ANY CONDUCTOR.

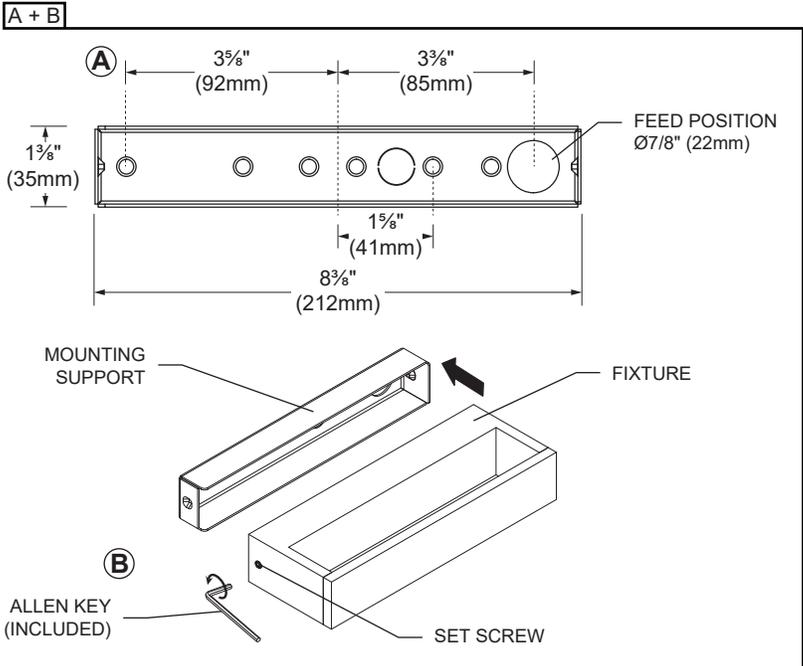

INSTALLATION ON 2" JUNCTION BOX - INTEGRAL DRIVER (120V / 277V)

- A- UNFASTEN THE SET SCREWS WITH AN ALLEN KEY (**INCLUDED**) TO REMOVE THE MOUNTING ASSEMBLY FROM THE FIXTURE. DO NOT COMPLETELY REMOVE SCREWS.
- B- INSTALL THE MOUNTING ASSEMBLY ON THE JUNCTION BOX USING (2) PHILLIPS SCREWS (**INCLUDED**). FOLLOW ALIGNMENT DETAIL BELOW TO GET THE PROPER ORIENTATION.
- C- MAKE ALL NECESSARY CONNECTIONS (**FOLLOWING WIRING DIAGRAM AND POLARITY MARKING**) USING TWIST CONNECTORS (**NOT INCLUDED**).
- D- FASTEN THE FIXTURE ON THE MOUNTING SUPPORT WITH THE SET SCREWS USING AN ALLEN KEY (**INCLUDED**), AVOIDING PINCHING ANY CONDUCTOR.

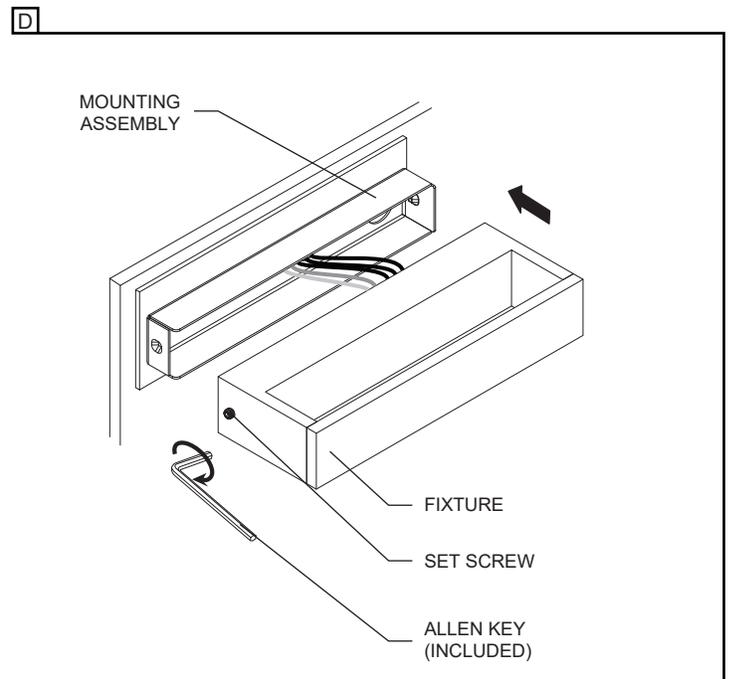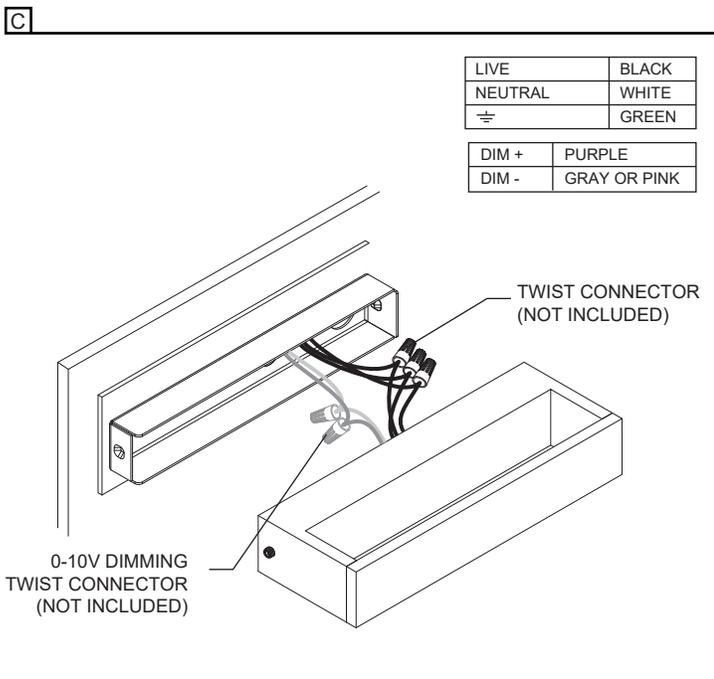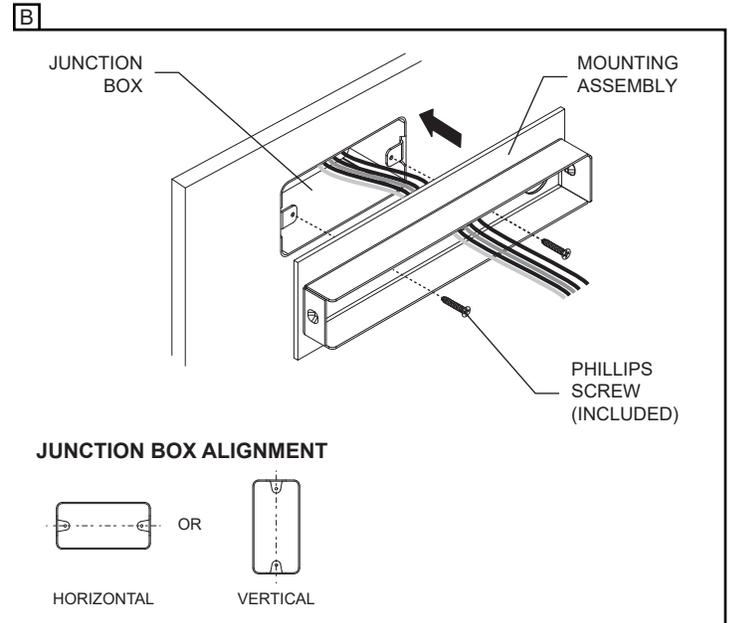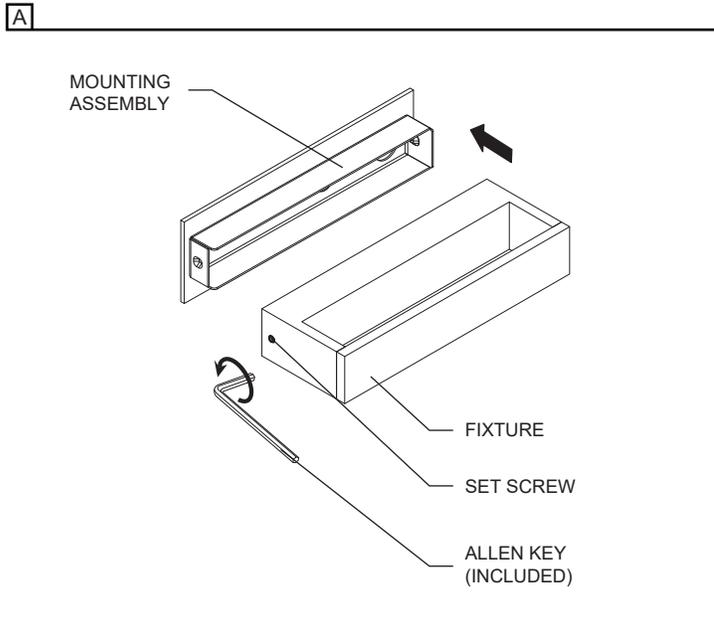

INSTALLATION ON 4" JUNCTION BOX WITH INTEGRAL DRIVER (120V / 277V)

- A- UNFASTEN THE SET SCREWS WITH AN ALLEN KEY (**INCLUDED**) TO REMOVE THE MOUNTING ASSEMBLY FROM THE FIXTURE. DO NOT COMPLETELY REMOVE SCREWS.
- B- INSTALL THE UNIVERSAL CROSSBAR ON THE JUNCTION BOX USING (2) 8-32 SCREWS (**NOT INCLUDED**). FOLLOW ALIGNMENT DETAIL BELOW TO GET THE PROPER ORIENTATION.
- C- INSTALL THE MOUNTING ASSEMBLY ON THE UNIVERSAL CROSSBAR USING (2) PHILLIPS SCREWS (**INCLUDED**).
- D- MAKE ALL NECESSARY CONNECTIONS (**FOLLOWING WIRING DIAGRAM AND POLARITY MARKING**) USING TWIST CONNECTORS (**NOT INCLUDED**).
- E- FASTEN THE FIXTURE ON THE MOUNTING SUPPORT WITH THE SET SCREWS USING AN ALLEN KEY (**INCLUDED**), AVOIDING PINCHING ANY CONDUCTOR.

