# **INSTRUCTIONS**

INS-300

**SLIVER** 

# 7050-XX-LDX-XX-X-XX

PAGE 1 OF 2 LAST UPDATE: AUGUST 12, 2013

#### **CODE STRUCTURE**

LENGTH	LED COLOR	DIFFUSER	MOUNTING SYSTEM	FINISH
6"TO 96" CHOOSE LENGTH* THESE ARE NOMBAL LENGTHS 2"HORSEMENT 2" = 6 LED	24V 3000K 80+CRI	FD EDOSTED DIEUSED	A - 90° MOUNTING	01 - WHITE
			B - WALL MOUNTING	
			C INVISIBLE MOUNTING	10 - GRAY

#### ALL MOUNTING SCREWS AND SUPPORT SYSTEM ARE INCLUDED


LENGTHS	# OF MOUNTING SUPPORT INCLUDED		
6" TO 24"	2x MOUNTING SUPPORT INCLUDED		
26" TO 48"	3x MOUNTING SUPPORT INCLUDED		
50" TO 72"	4x MOUNTING SUPPORT INCLUDED		
74" TO 96"	5x MOUNTING SUPPORT INCLUDED		

POWER SUPPLY INFO 24V DC 4.8 WATTS / FEET CLASS 2

\*\* NOT FOR WET LOCATIONS.


#### **INSTALLATION**

- A PLAN YOUR ANCHORING LAYOUT ON THE MOUNTING SURFACE.
- B DRILL Ø3/16" HOLE AND INSTALL WALL ANCHORS (INCLUDED) FLUSH TO DRYWALL SURFACE AT PLANNED POSITIONS.

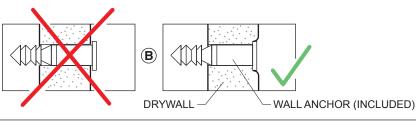


#### A - 90° MOUNTING

C - FIX THE WALL SUPPORT ON THE WALL ANCHORS WITH PROVIDED #8 SREWS.

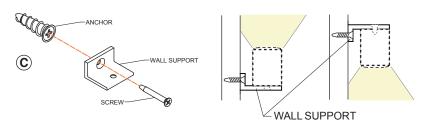

- **D** ON THE BACK OF THE LIGHTING FIXTURE, ADJUST THE T-SLOT NUTS TO YOUR LAYOUT BY SLIDING THEM INTHE REAR GROOVE.
- E MAKE NECESSARY CONNECTIONS TO REMOTE POWER SUPPLY (24V DC).
- **F** SECURE THE LIGHTING FIXTURE TO THE WALL SUPPORTS WITH THE PROVIDED SHORT FLAT HEAD SREWS AND A PHILLIPS SCREW DRIVER.

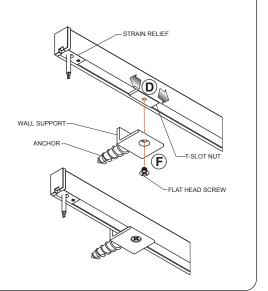

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

APP. BY :

MR - R0



9320 Boul. St-Laurent, suite 100, Montréal (Québec) Canada H2N 1N7 P.: 514.523.1339 F.: 514.525.6107



# SISTEMALUX

## INSTRUCTIONS

**SLIVER** 


# 7050-XX-LDX-XX-X-XX MODEL LENGTH LED COLOR DIFFUSER MOUNT. FINISH


INS-300


PAGE 2 OF 2 LAST UPDATE: AUGUST 12, 2013

#### **B-WALL MOUNTING**

C - ON THE BACK OF THE LIGHTING FIXTURE, ADJUST THE T-SLOT NUT TO YOUR LAYOUT. (IF NEEDED, UNSCREW THE WALL SUPPORTS FROM THE FIXTURE AND SLIDE THEM IN THE REAR GROOVE. ONCE IN THE DESIRED POSITION, FASTEN THEM IN PLACE).

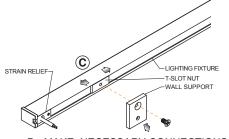

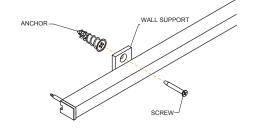

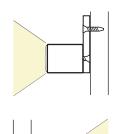



- D MAKE NECESSARY CONNECTIONS TO REMOTE POWER SUPPLY (24V DC).
- **E** SECURE THE LIGHTING FIXTURE ON THE WALL IN INSTALLED ANCHORS WITH PROVIDED #8 SREWS AND A PHILLIPS SCREW DRIVER.

### **C - INVISIBLE MOUNTING**

- C ON THE BACK OF THE LIGHTING FIXTURE, ADJUST THE T-SLOT NUT TO YOUR LAYOUT BY FIRST UNSCREWING THE SET SCREW WITH PROVIDED ALLEN KEY.
- D SLIDE THE FIXATION TO DESIRED POSITION AS SHOWN. SECURE SET SCREW TO LOCK T-SLOT NUT IN PLACE.
- E DRILL 1/4" HOLE TO PASS WIRE THROUGH WALL.
- F MAKE NECESSARY CONNECTIONS TO REMOTE POWER SUPPLY (24V DC).
- **G** ALIGN WIRE WITH HOLE IN WALL AND SLIDE WIRE LENGTH THROUGH DURING INSTALLATION.



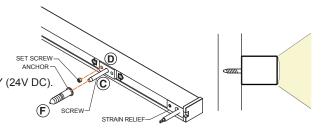

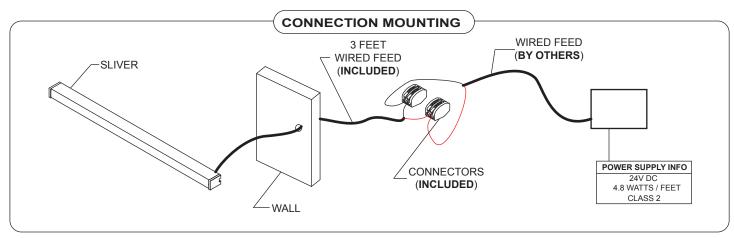

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

MR - R0 APP. BY :



9320 Boul. St-Laurent, suite 100, Montréal (Québec) Canada H2N 1N7 P.: 514.523.1339 F.: 514.525.6107

