
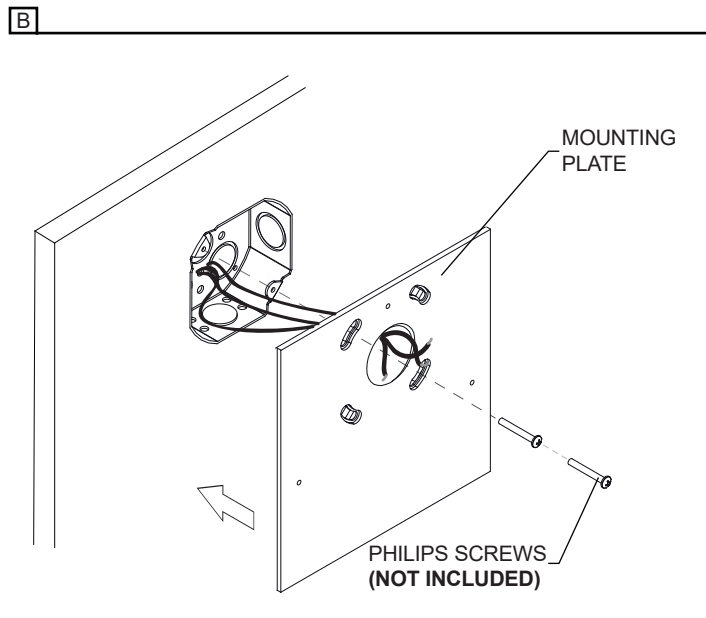


INSTALLATION WITH 4" JUNCTION BOX - 120- 277V (JB- UNV) DIMMING 0-10V (D10)

A- UNSCREW THE SET SCREWS WITH ALLEN KEY (INCLUDED) TO REMOVE THE COVER FROM THE FIXTURE BASE.

DO NOT COMPLETELY REMOVE SCREWS.

B- INSTALL THE MOUNTING PLATE ON THE JUNCTION BOX USING (2) PHILIPS SCREWS (NOT INCLUDED).

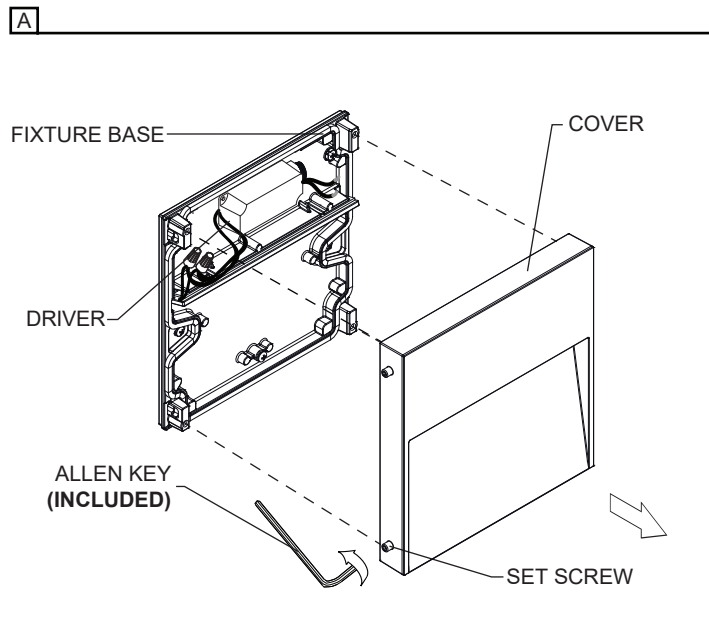

C- MAKE WIRE CONNECTIONS (FOLLOWING POLARITY MARKING) USING WET LOCATION TWIST CONNECTOR (NOT INCLUDED).

D- SCREW THE FIXTURE BASE TO THE MOUNTING PLATE USING THE (2) PHILLIPS SCREWS.

E- FASTEN THE SCREWS USING ALLEN KEY (INCLUDED).

