
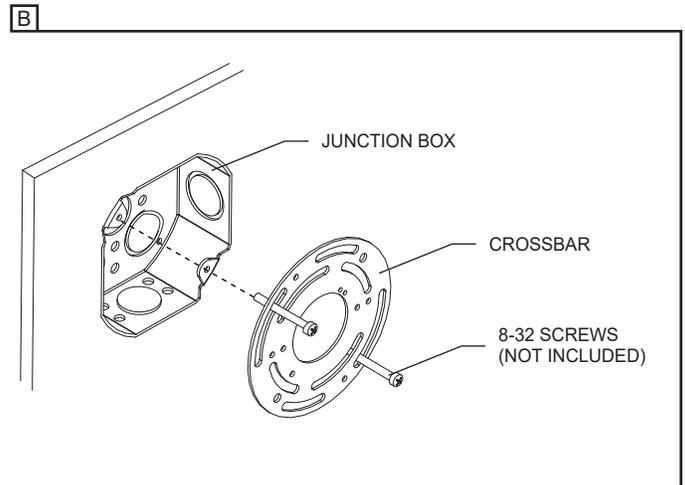


**IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.**  
 THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

### INSTALLATION ON 4" JUNCTION BOX INTEGRAL DRIVER (120-277V)

FOR USE WITH STANDARD 4" JUNCTION BOX (120-277V)

- A- UNFASTEN THE FIXTURE (4) SET SCREWS USING THE ALLEN KEY (INCLUDED). DO NOT COMPLETELY REMOVE THE SCREWS.
- B- INSTALL CROSSBAR ON THE JUNCTION BOX (NOT INCLUDED) WITH (2) 8-32 SCREWS (NOT INCLUDED).
- C- PASS THE CABLE THROUGH THE CENTER HOLES OF THE MOUNTING PLATE AND CROSSBAR.
- D- MAKE ALL THE NECESSARY CONNECTIONS (SEE WIRING DIAGRAM) USING TWIST CONNECTORS (NOT INCLUDED).
- E- INSTALL THE MOUNTING PLATE ON THE CROSSBAR WITH THE (2) PHILLIPS SCREWS (INCLUDED).

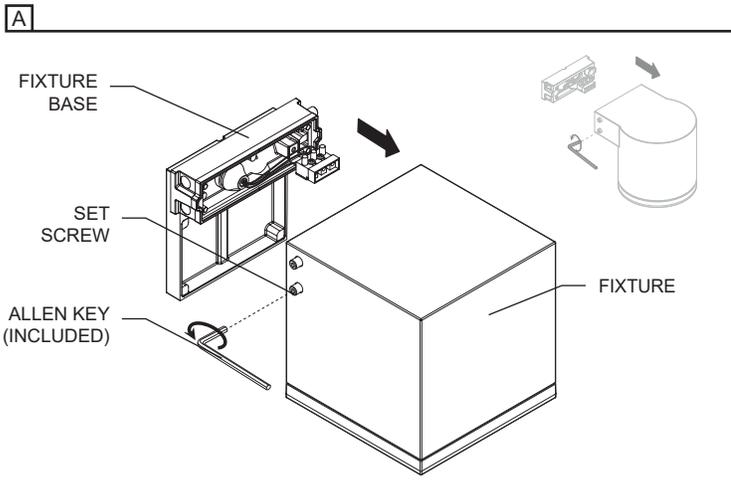

### C + D + E

**WIRING DIAGRAM NO DIMMING**

FIXTURE CABLES

**WIRING DIAGRAM DIMMING 120-277V 0-10V (D10)**

FIXTURE CABLES


**! If the wires for 0-10V dimming are not used, protect wire ends with twist connectors.**

**BOTTOM VIEW CROSSBAR ALIGNMENT**

F- INSTALL THE BASE FIXTURE ON THE MOUNTING PLATE, USING (2) PHILLIPS SCREWS (INCLUDED) AND THE WASHERS IN THIS SPECIFIC ORDER AND POSITION (SEE BELOW).

G- CONNECT THE QUICK CONNECTOR (INCLUDED), AND FASTEN THE FIXTURE ON BASE WITH THE (2) SET SCREWS USING THE ALLEN KEY (INCLUDED).

F + G

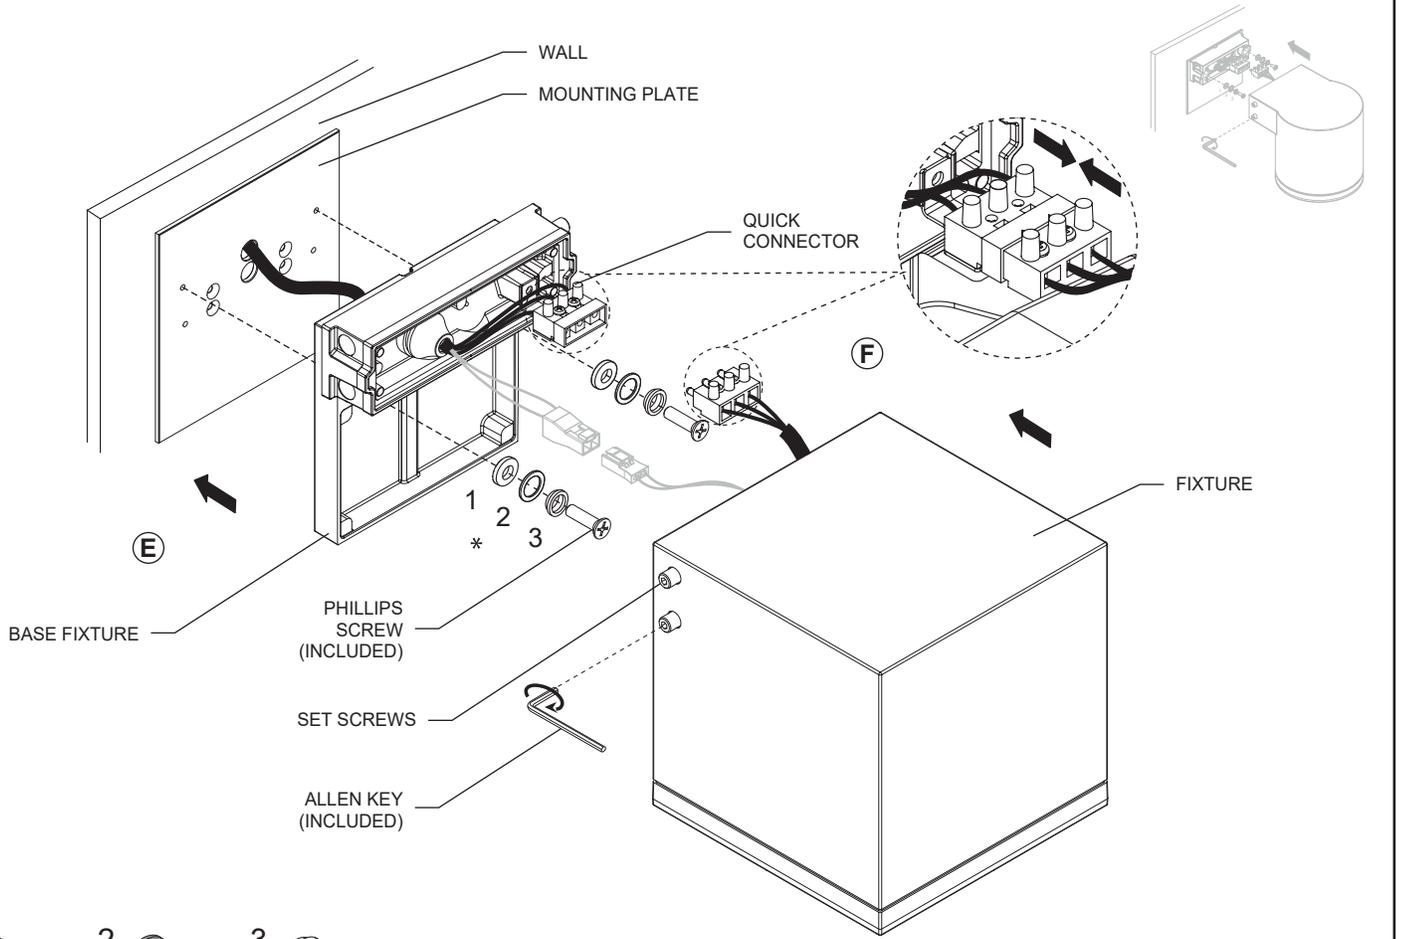

- |   |  |  |
|---|--|--|
| <p>1</p>  <p>2 x<br/>RUBBER<br/>WASHER</p> | <p>2</p>  <p>2 x<br/>METAL<br/>WASHER</p> | <p>3</p>  <p>2 x<br/>NYLTITE<br/>WASHER</p> |
|---|--|--|

\*ORDER MUST BE RESPECTED TO GUARANTEE WATERTIGHT INSTALLATION