
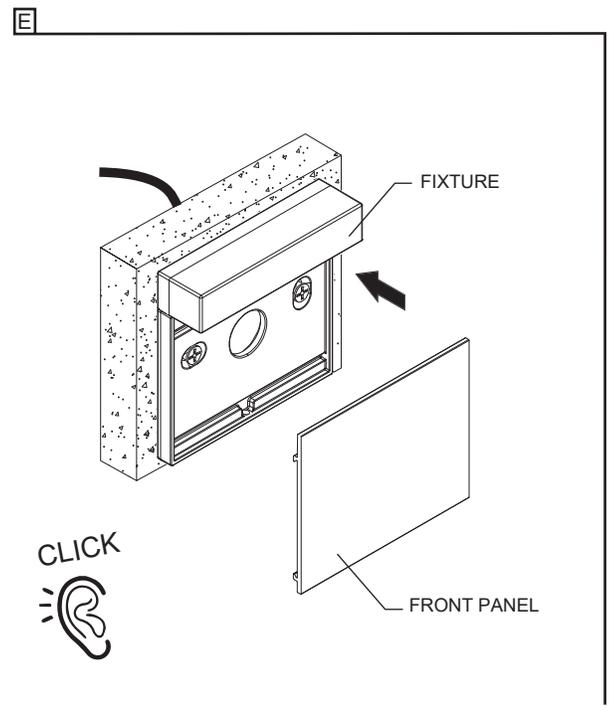
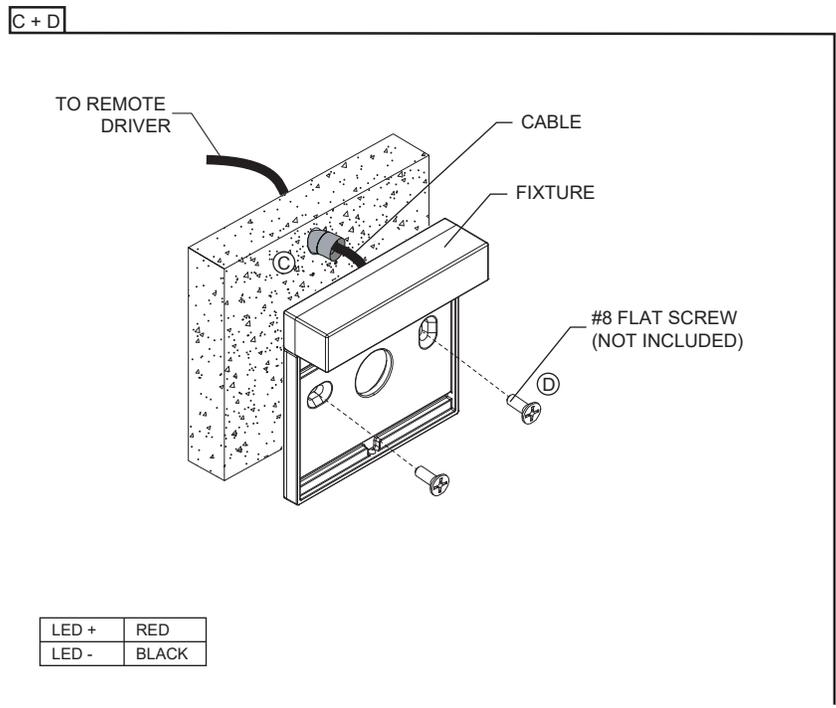
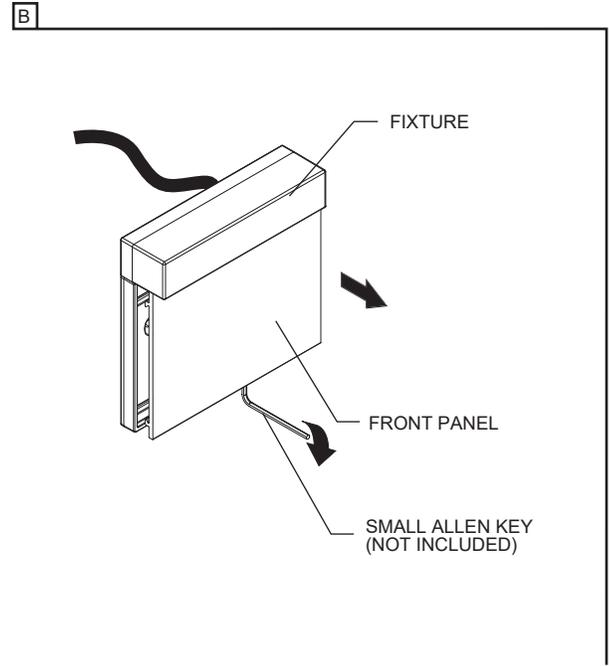


IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

⚠ DISCONNECT THE MAIN LINE BEFORE WIRING SECONDARY CONNECTORS.





SURFACE INSTALLATION WITH FIXTURE WHIP TO REMOTE DRIVER (FW-REM)

- A- SET THE FIXTURE LEVELED TO THE WALL, MARK THE DESIRED DRILLING HOLES ON THE WALL AND PREPARE THE SURFACE. **(SEE DIMENSIONS BELOW)**. *INSERT (2) ANCHOR SCREWS **(NOT INCLUDED)** IF NECESSARY.
- B- UNCLIP THE FRONT PANEL FROM THE FIXTURE USING A SMALL ALLEN KEY **(NOT INCLUDED)**.
- C- FEED THE CABLE THROUGH THE CONDUIT AND MAKE THE NECESSARY WIRE CONNECTIONS AT THE REMOTE DRIVER USING WATERTIGHT TWIST CONNECTORS **(NOT INCLUDED)**.
- D- INSTALL THE FIXTURE BASE TO THE WALL USING THE APPROPRIATE #8 FLAT SCREWS **(NOT INCLUDED)**.
- E- CLIP THE FRONT PANEL BACK ON THE FIXTURE

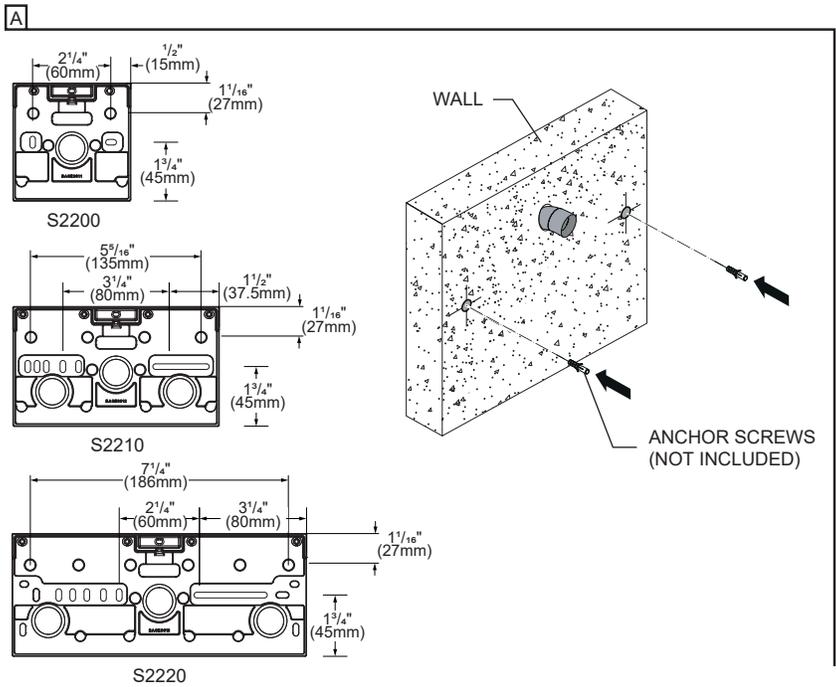

4" JUNCTION BOX INSTALLATION WITH REMOTE DRIVER (JB-REM)

- A- INSTALL THE MOUNTING PLATE ON THE JUNCTION BOX USING THE APPROPRIATE #8-32 SCREWS (**NOT INCLUDED**)
- B- UNCLIP THE FRONT PANEL FROM THE FIXTURE USING A SMALL ALLEN KEY (**NOT INCLUDED**).
- C- MAKE WIRE CONNECTIONS (**FOLLOWING POLARITY MARKINGS**) USING WATERTIGHT TWIST CONNECTORS (**NOT INCLUDED**).
ONCE CONNECTED, PUSH THE WIRES BACK INTO THE JUNCTION BOX.
- D- FASTEN THE FIXTURE ON THE MOUNTING PLATE USING THE (2) PHILLIPS SCREWS (**INCLUDED**).
- E- CLIP THE FRONT PANEL BACK ON THE FIXTURE.

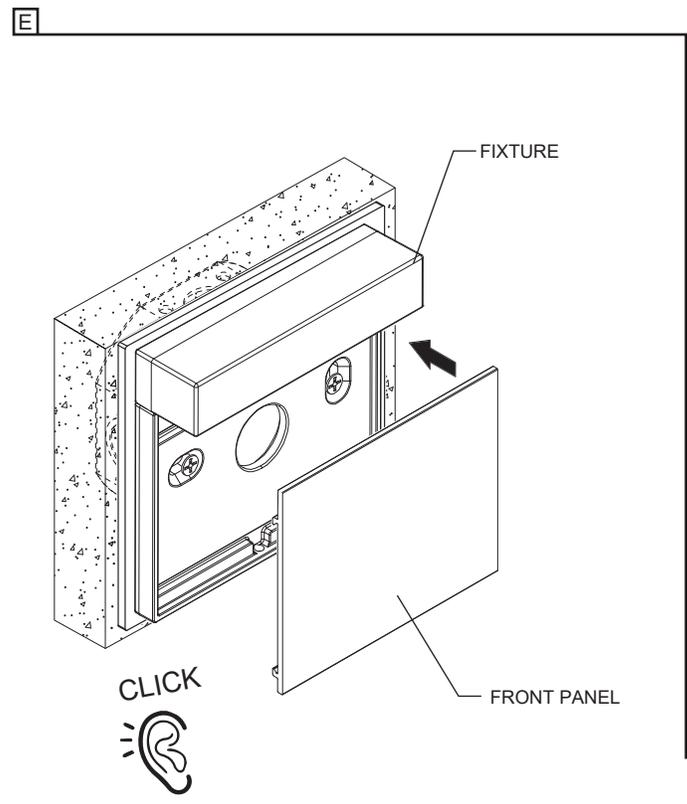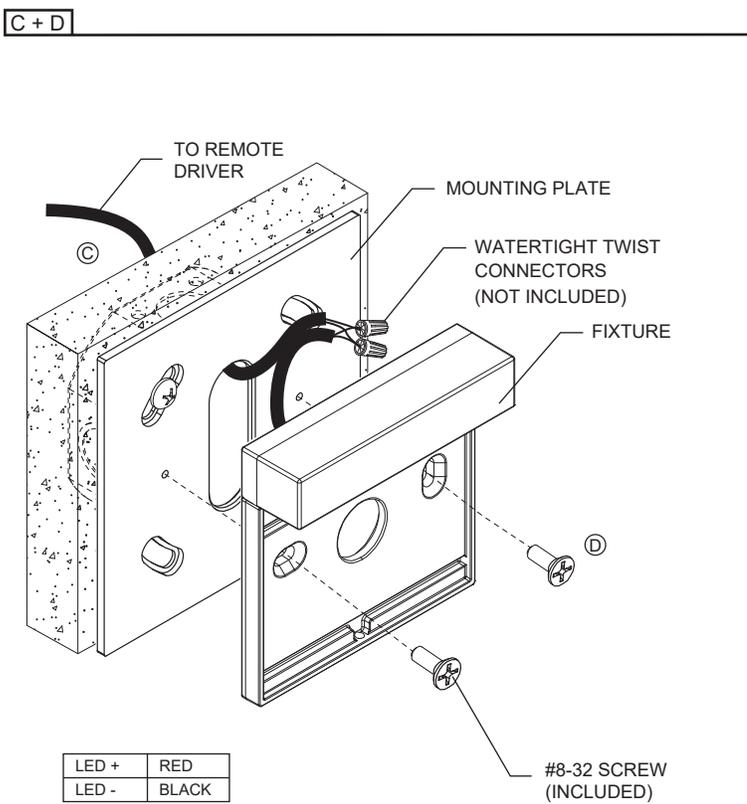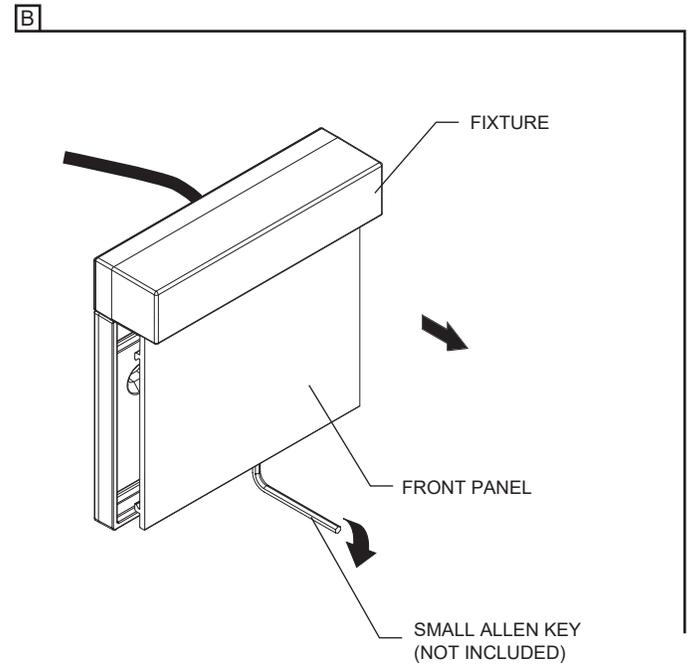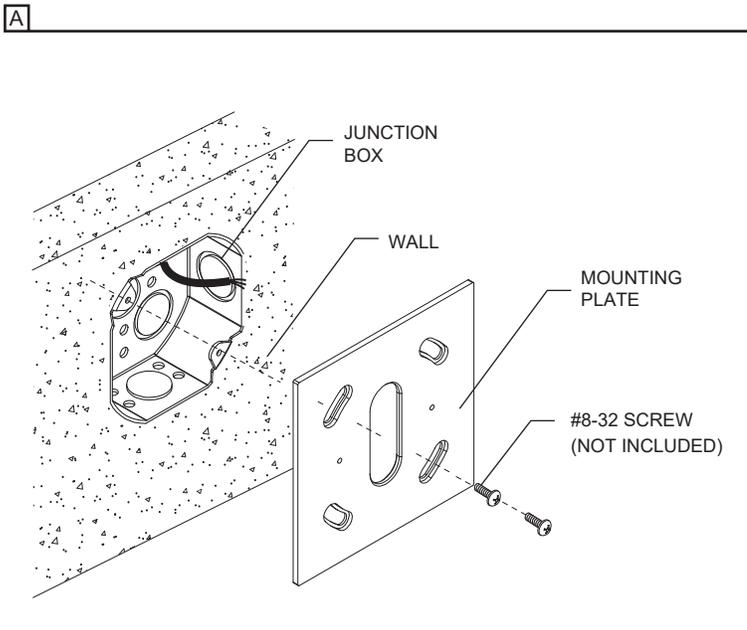


2" SINGLE GANG BOX INSTALLATION WITH REMOTE DRIVER (J2-REM)

JUNCTION BOX MUST BE LEVELED IN ORDER TO HAVE THE FIXTURE INSTALLED PROPERLY.

- A- UNCLIP THE CAP FROM THE FIXTURE USING A SMALL ALLEN KEY (**NOT INCLUDED**).
- B- MAKE WIRE CONNECTIONS (**FOLLOWING POLARITY MARKINGS**) USING WATERTIGHT TWIST CONNECTORS (**NOT INCLUDED**).
ONCE CONNECTED, PUSH THE WIRES BACK INTO THE JUNCTION BOX.
- C- SECURE THE FIXTURE TO THE JUNCTION BOX USING (2) PHILLIPS SCREWS (**INCLUDED**).
- D- CLIP THE FRONT PANEL BACK ON THE FIXTURE.


A

5CENTO RECTANGULAR
S2210, S2220

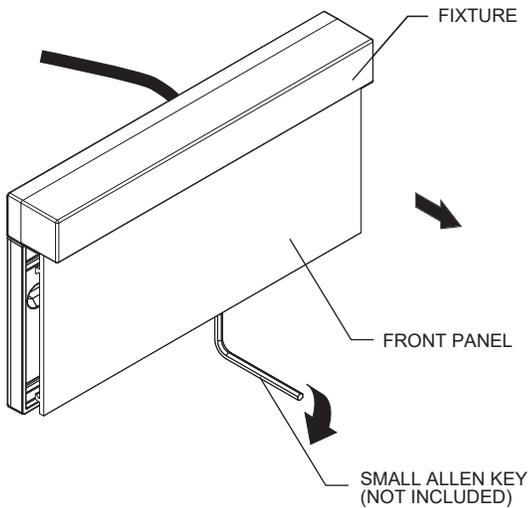

B + C

LED +	RED
LED -	BLACK

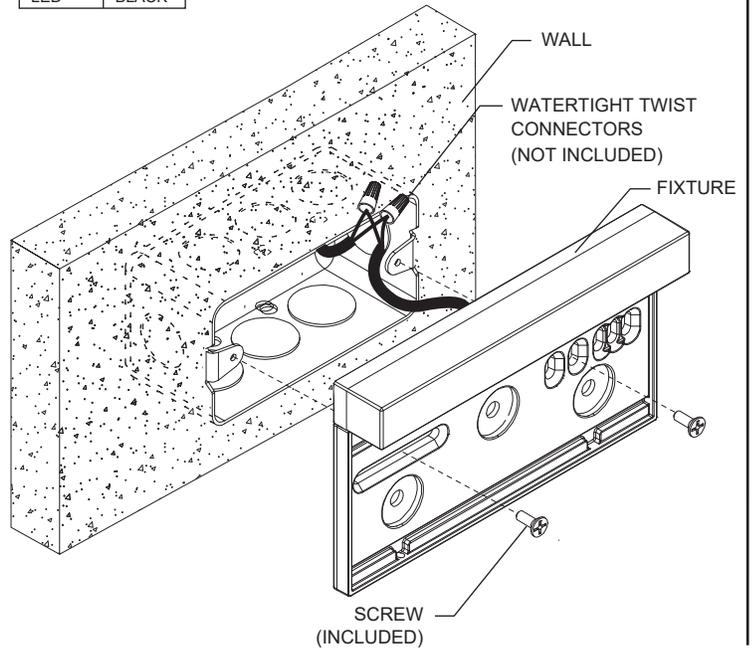

D

