



**IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.**  
 THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

**INSTALLATION**

**FACTORY DEFAULT SET**



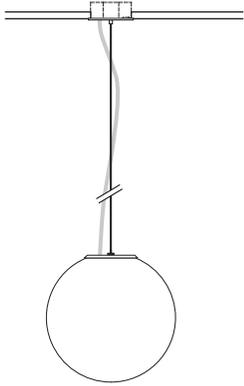


**FIELD CHANGEABLE ALTERNATE OPTION**

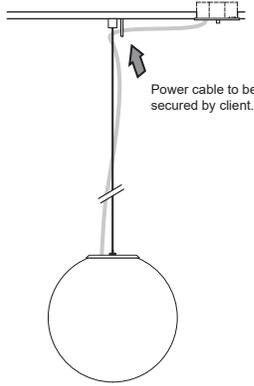

For alternate mounting options see page 3.

- A- INTRODUCE POWER CABLE THROUGH CANOPY.
- B- PASS IT THROUGH THE MOUNTING CROSSBAR HOLE.
- C- ADJUST THE LENGTH OF THE POWER CORD AND TIGHTEN IT USING CABLE GRIPPER TO LOCK POSITION. LEAVE 4 TO 6" ABOVE THE MOUNTING CROSSBAR (FOR CONNECTIONS) AND CUT THE CORD SURPLUS.

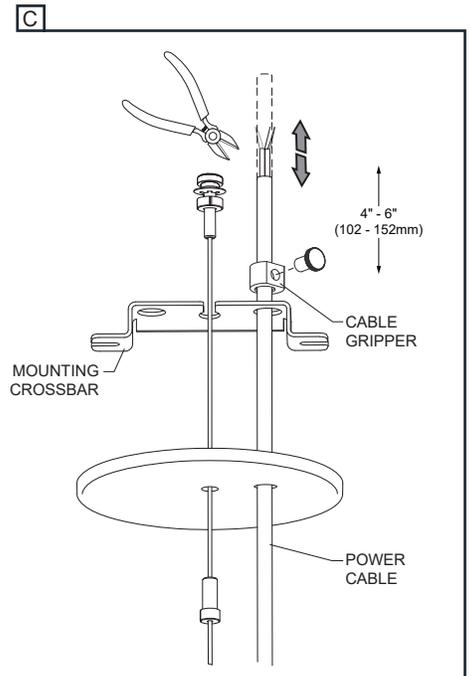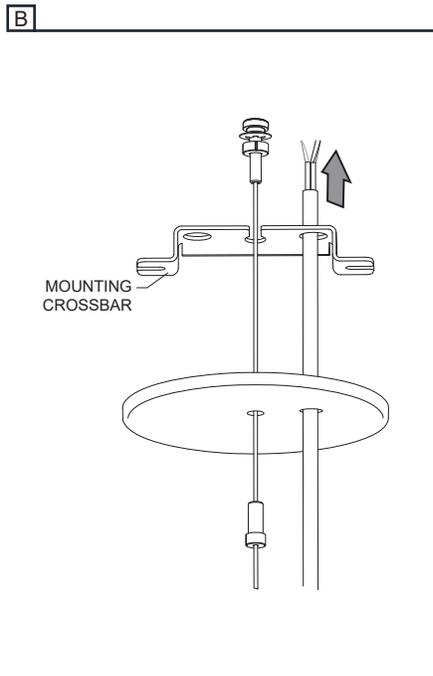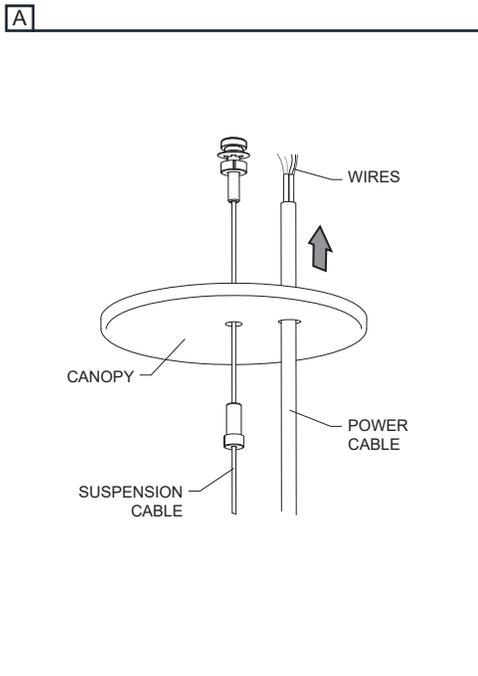






D- PASS THUMB SCREW INTO THE MOUNTING CROSSBAR KEY HOLE WITH LOCK WASHER ON TOP. HOLD SUSPENSION CABLE DOWN IN POSITION AND SECURE WITH THE PROVIDED NUT.

E- RAISE THE MOUNTING CROSSBAR AGAINST THE CEILING AND FASTEN IT TO THE JUNCTION BOX USING 8-32 MOUNTING SCREWS.

F- MAKE ALL NECESSARY WIRE CONNECTIONS. \*FOR OPTIONAL DIMMING 0-10V: WIRES MUST BE RUN THROUGH A SEPARATE KNOCK-OUT HOLE WHEN CONNECTING DIMMING CONTROLLER.

G- PLACE THE CANOPY OVER THE MOUNTING CROSSBAR. SECURE ASSEMBLY IN PLACE USING FINISHING SCREW.


H- ADJUST THE LENGTH OF THE SUSPENSION CABLE AND CUT THE SURPLUS.

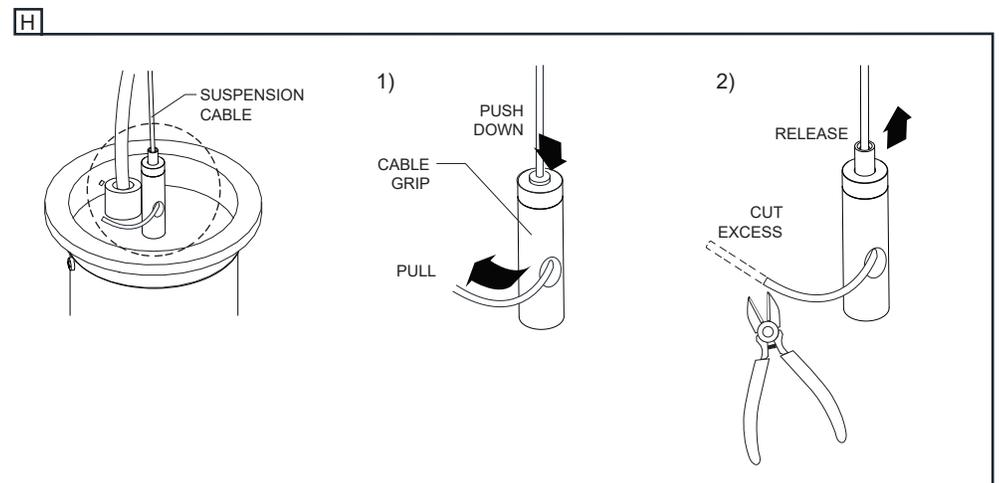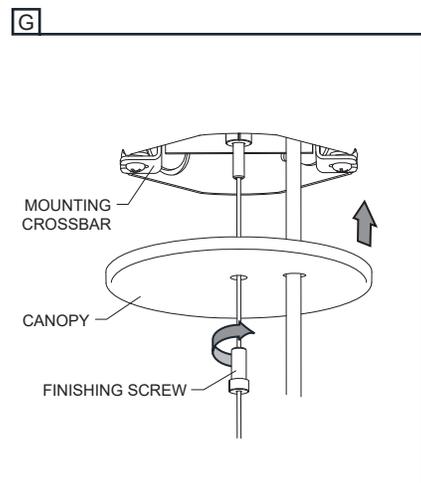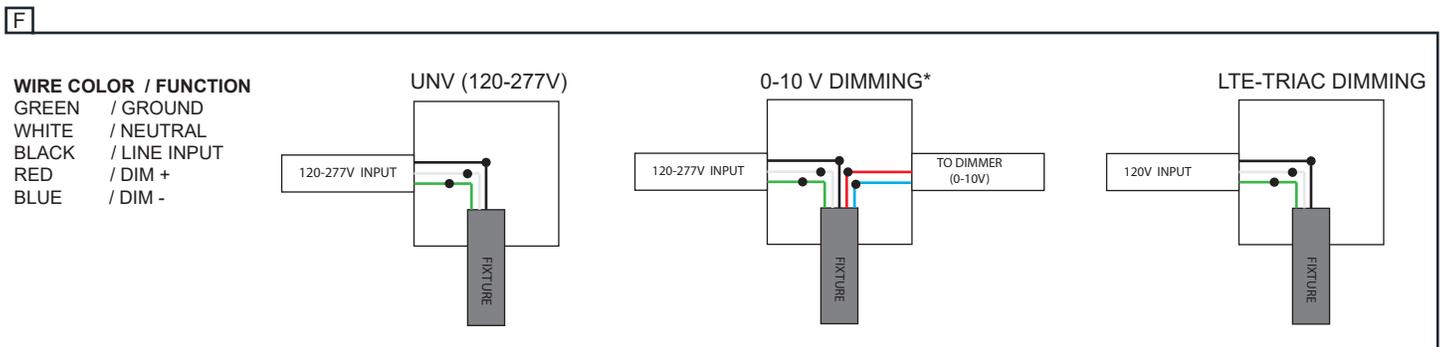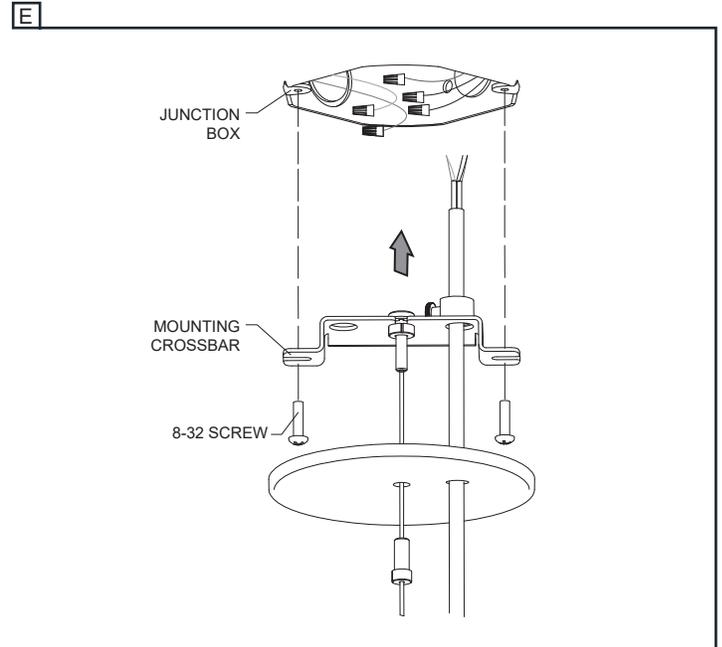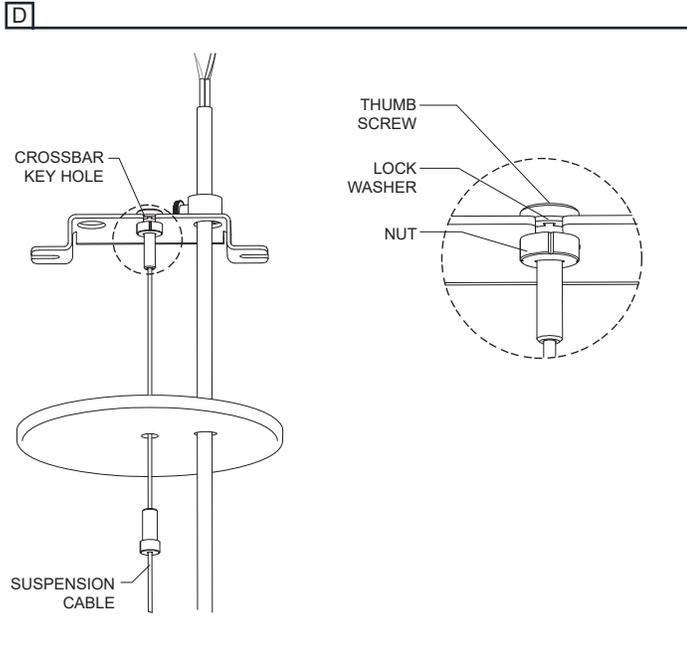


**ALTERNATE CANOPY INSTALLATION**

**IN ORDER TO SEPARATE SUSPENSION CABLE FROM CANOPY FOLLOW THE INSTRUCTIONS:**

- A- REMOVE SUSPENSION CABLE FROM CANOPY ASSEMBLY.
- B- TAKE THE SUSPENSION CABLE AND PASS IT THROUGH THE CYLINDRICAL COVER SUPPLIED WITH CANOPY KIT.
- C- INSTALL SUSPENSION CABLE FOLLOWING THESE STEPS:
  - a) PLACE AND SCREW SELF-DRILLING (NO HOLE NEEDED) PLASTIC ANCHOR SCREW IN DRYWALL CEILING (MINIMUM 1/2" THICKNESS) OR IN HARDWOOD (NO ANCHOR NEEDED) AT THE PROPER POSITION.
  - b) PASS SCREW THROUGH WASHER AND THREADED RING AND SECURE SCREW INTO PRE INSTALLED PLASTIC ANCHOR SCREW.
  - c) FASTEN CYLINDRICAL COVER TO THREADED RING.

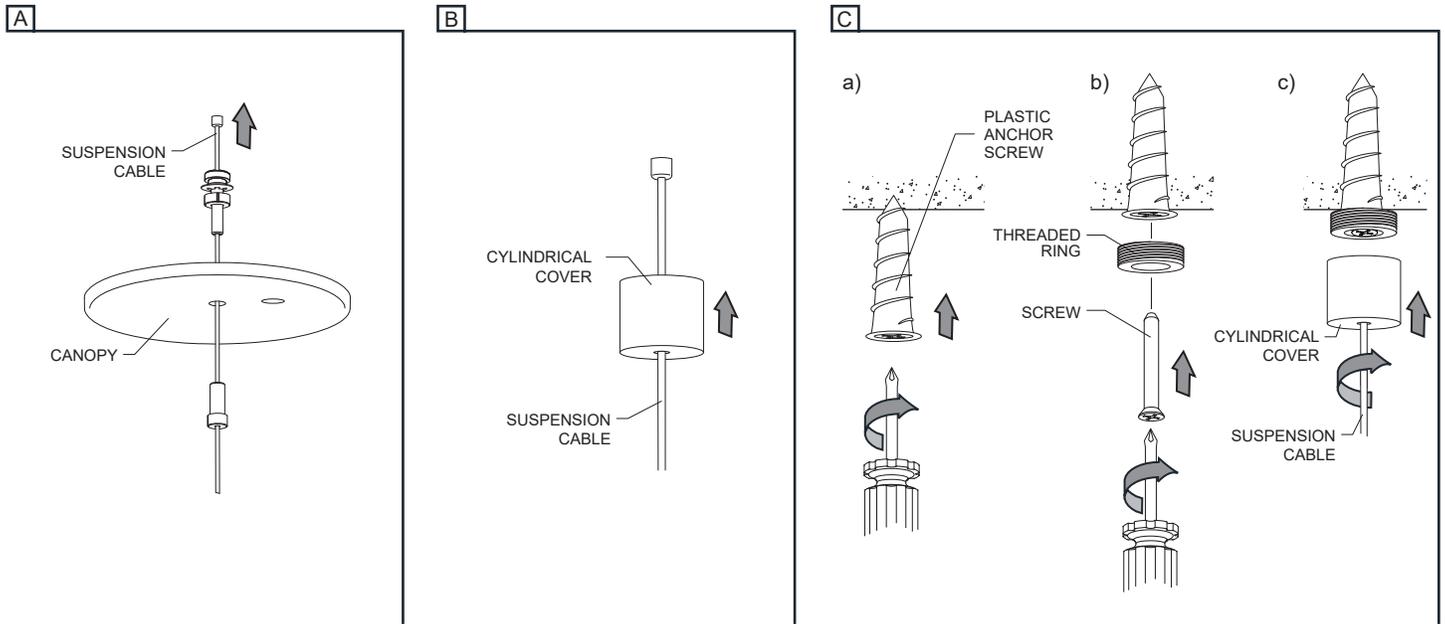

- D- INTRODUCE POWER CABLE THROUGH CANOPY.
- E- PASS IT THROUGH THE MOUNTING CROSSBAR HOLE.
- F- ADJUST THE LENGTH OF THE POWER CORD AND TIGHTEN IT USING CABLE GRIPPER TO LOCK POSITION. LEAVE 4 TO 6" ABOVE THE MOUNTING CROSSBAR (FOR CONNECTIONS) AND CUT THE CORD SURPLUS.

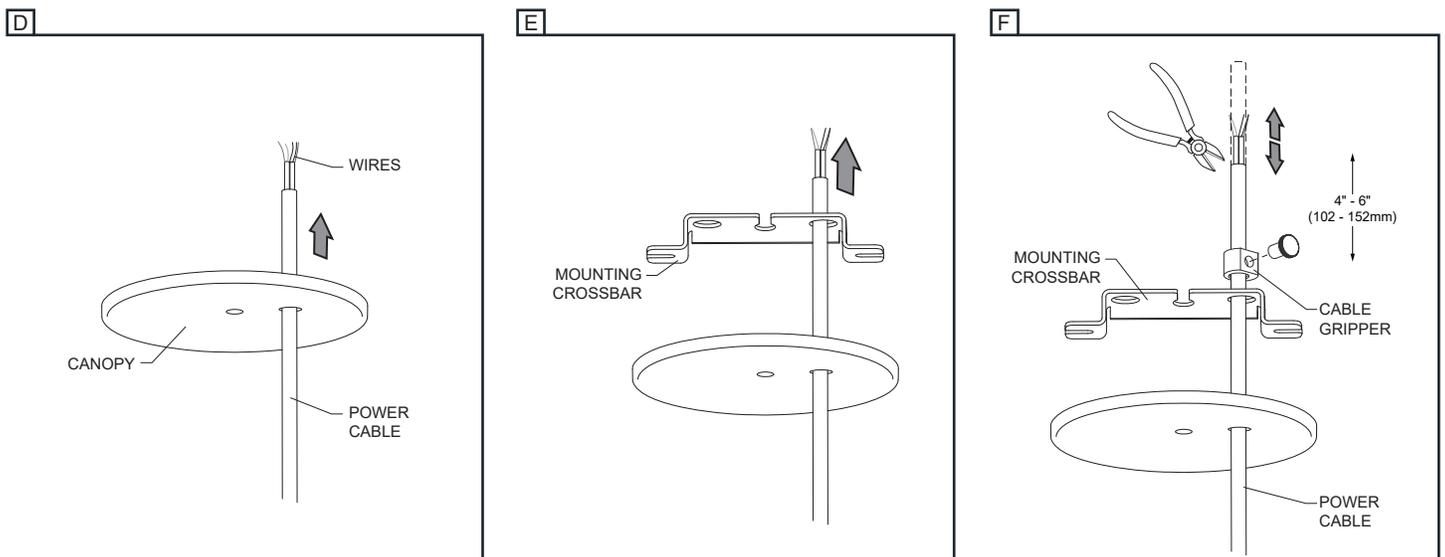

- G- PASS THUMB SCREW INTO THE MOUNTING CROSSBAR KEY HOLE WITH LOCK WASHER ON TOP.
- H- RAISE THE MOUNTING CROSSBAR AGAINST THE CEILING AND FASTEN IT TO THE JUNCTION BOX USING 8-32 MOUNTING SCREWS.
- I- MAKE ALL NECESSARY WIRE CONNECTIONS. \*FOR OPTIONAL DIMMING 0-10V: WIRES MUST BE RUN THROUGH A SEPARATE KNOCK-OUT HOLE WHEN CONNECTING DIMMING CONTROLLER.
- J- PLACE THE CANOPY OVER THE MOUNTING CROSSBAR. SECURE ASSEMBLY IN PLACE USING FINISHING SCREW.
- K- ADJUST THE LENGTH OF THE SUSPENSION CABLE AND CUT THE SURPLUS.

