



IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
 THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

4" JUNCTION BOX INSTALLATION FOR MICROSLOT WITH INTEGRAL DRIVER (120-277V)

- A- UNFASTEN THE (3) FIXTURE SET SCREWS USING THE ALLEN KEY (INCLUDED). DO NOT COMPLETELY REMOVE SCREWS.
- B- INSTALL THE CROSSBAR ON THE JUNCTION BOX WITH (2) 8-32 SCREWS (NOT INCLUDED).
- C- PASS THE CABLE THROUGH THE CENTER HOLES OF THE MOUNTING PLATE AND CROSSBAR.
- D- MAKE ALL THE NECESSARY CONNECTIONS (SEE WIRING DIAGRAM) USING TWIST CONNECTORS (NOT INCLUDED).
- E- INSTALL THE MOUNTING PLATE ON THE CROSSBAR WITH THE (2) PHILLIPS SCREWS (INCLUDED).
- F- INSTALL THE FIXTURE HOLDER WITH THE (2) MOUNTING SCREWS (INCLUDED).
- G- INSTALL THE FIXTURE AND FASTEN THE (3) FIXTURE SET SCREWS .

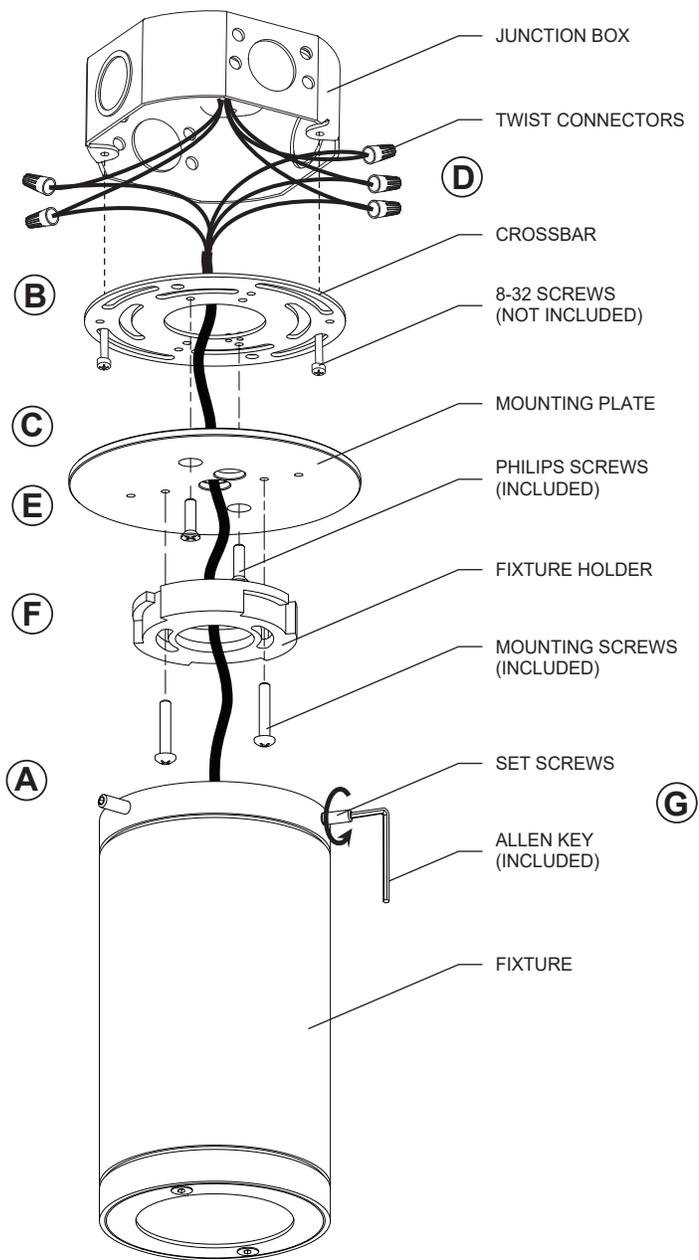

WIRING DIAGRAM
 DIMMING 120-277V
 0-10V (D10)

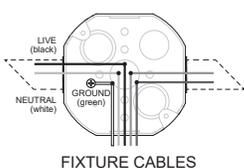


! If the wires for 0-10V dimming are not used, protect wire ends with twist connectors.


4" JUNCTION BOX INSTALLATION FOR SLOT WITH INTEGRAL DRIVER (120-277V)

- A- MAKE (3) HOLES IN THE CEILING FOLLOWING THE DIMENSIONS BELOW.
- B- INSTALL (3) MAX #12 ANCHORS (**NOT INCLUDED**) IN THE CEILING IN THE PREVIOUSLY DRILLED HOLES.
- C- FASTEN THE FIXTURE HOLDER BY USING MAX #12 SCREWS (**NOT INCLUDED**) WITH THE (3) ANCHORS PREVIOUSLY INSTALLED.

A

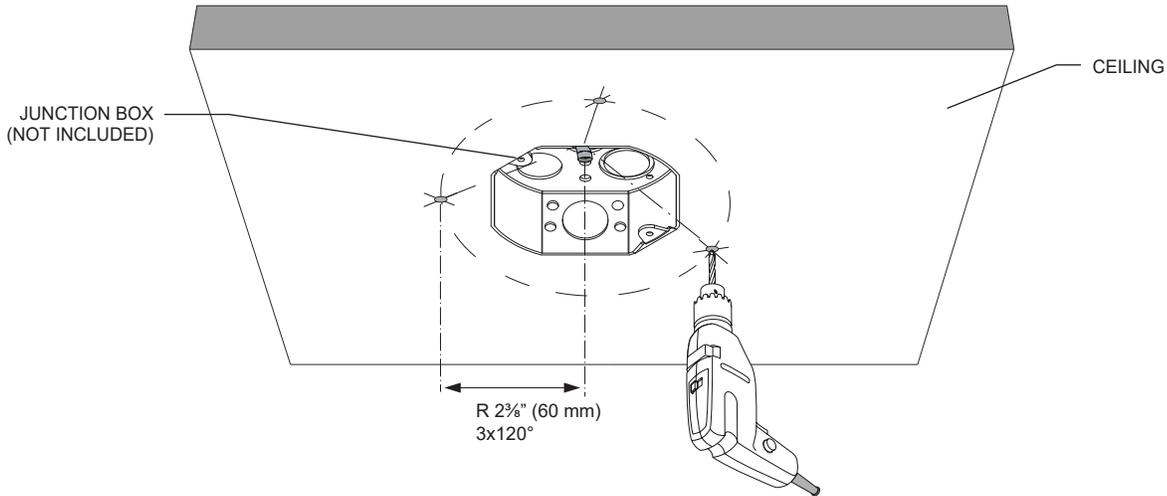


B + C

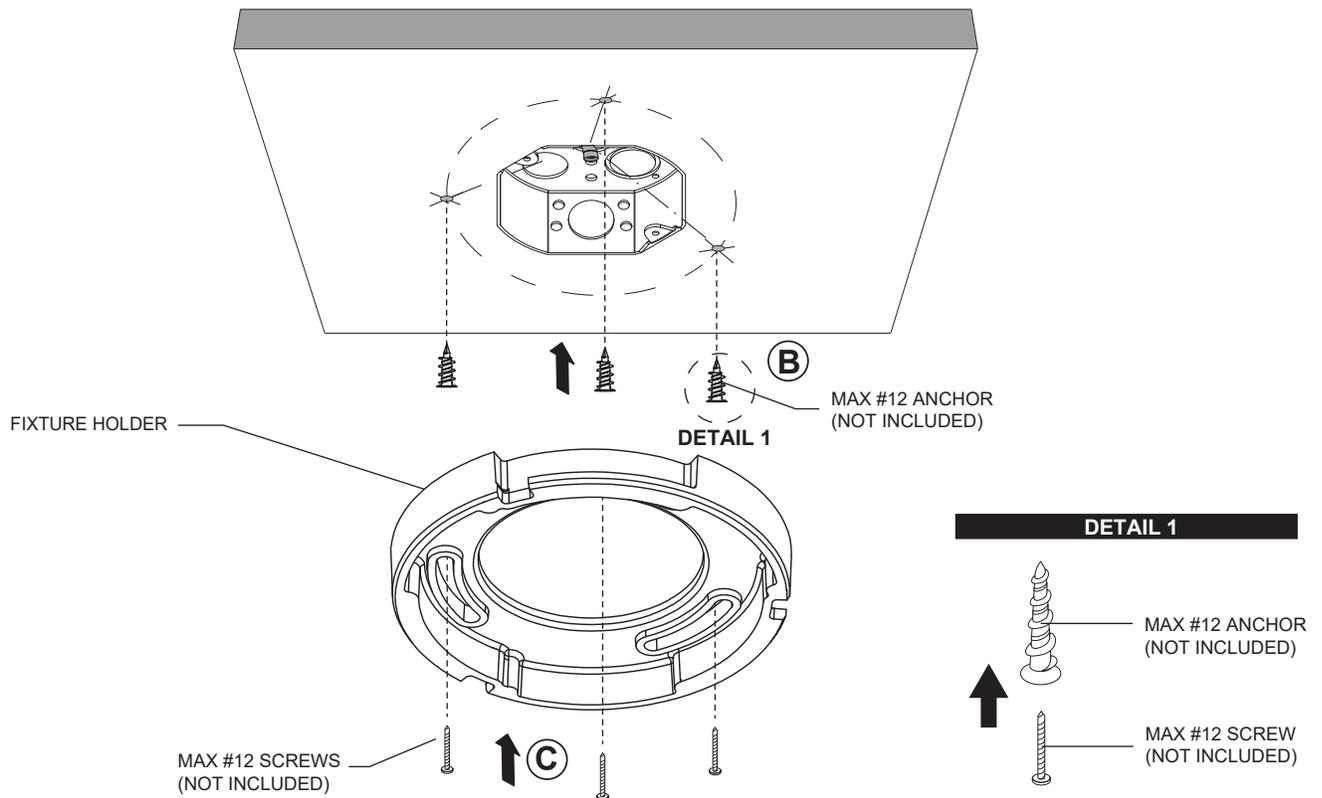


- D- MAKE ALL THE NECESSARY CONNECTIONS USING TWIST CONNECTORS (**NOT INCLUDED**).
- E- INSTALL THE FIXTURE AND FASTEN THE (3) FIXTURE SET SCREWS.

D + E

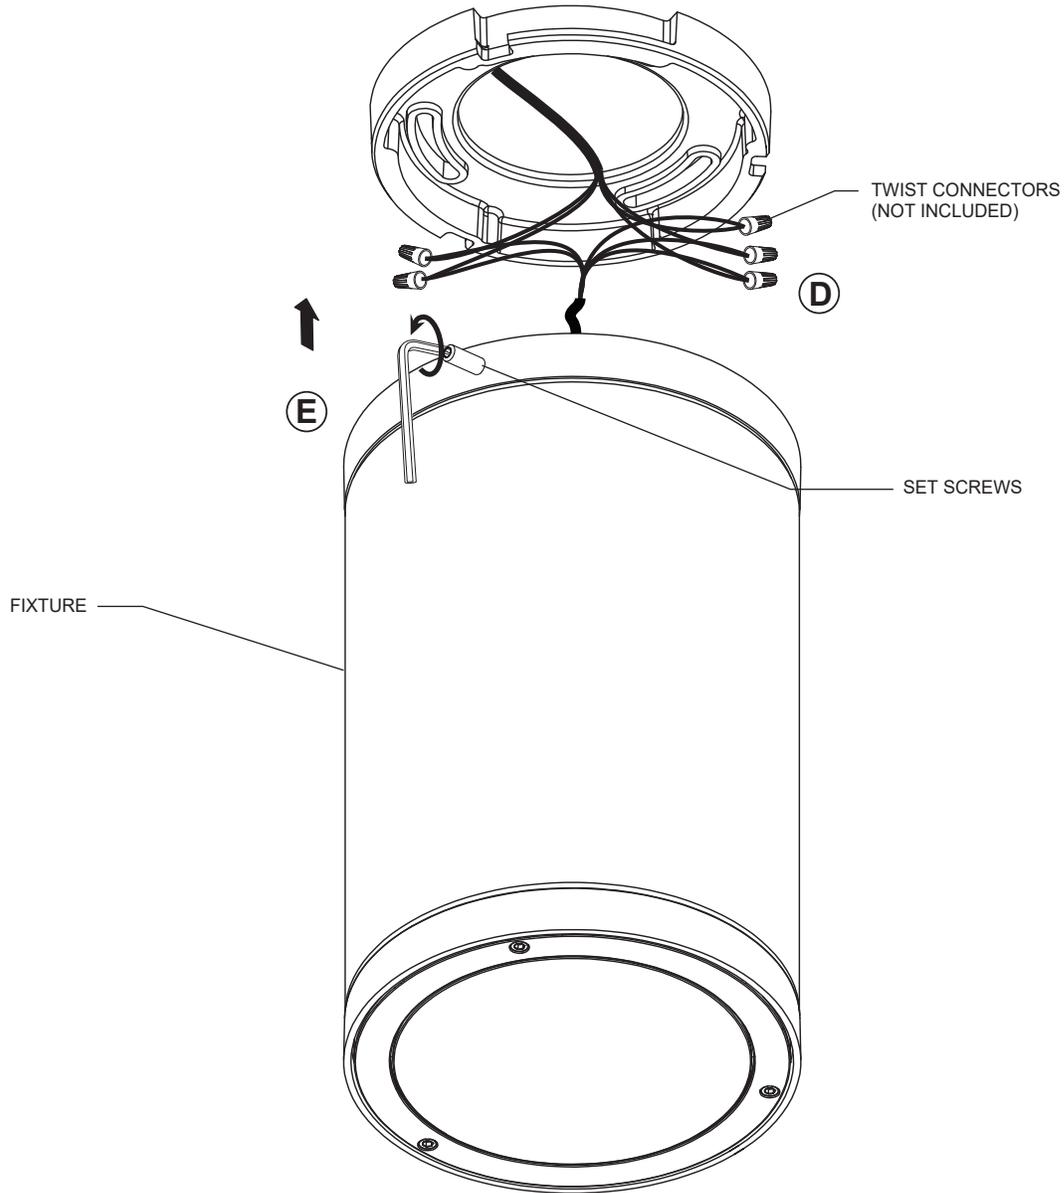

WIRING DIAGRAM

DIMMING 120-277V
0-10V (D10)

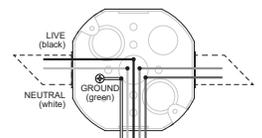

FIXTURE CABLES

! If the wires for 0-10V dimming are not used, protect wire ends with twist connectors.