

IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.


FLUSH MOUNT BACK BOX INSTALLATION (FM)

A- USE NAILS (NOT INCLUDED) TO FIX THE BACK BOX MALE PART TO THE FORMWORK PLYWOOD OPENING SIDE.


*MALE PART IS NAILED TO THE HIGH OPENING SIDE.

A


SKILL SQUARE LARGE BACK BOX
S.6257

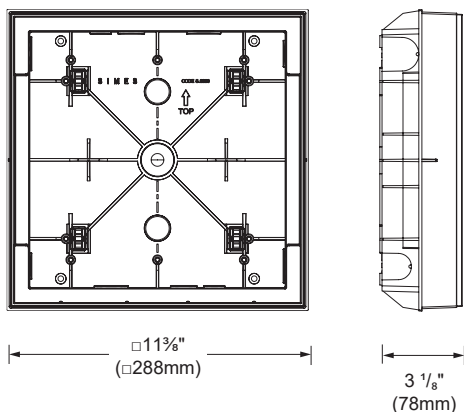



SKILL SQUARE BACK BOX
S.6268

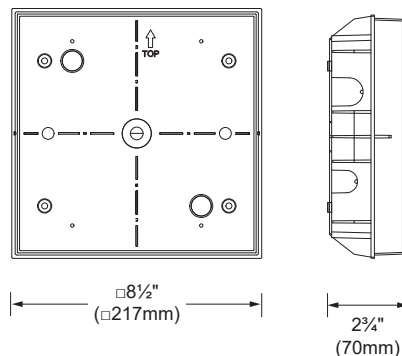

SKILL ROUND BACK BOX
S.6288

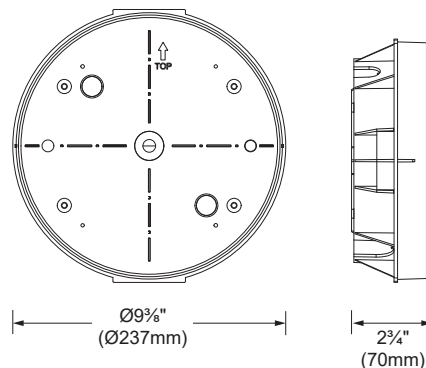

SKILL RECTANGLE BACK BOX
S.6247

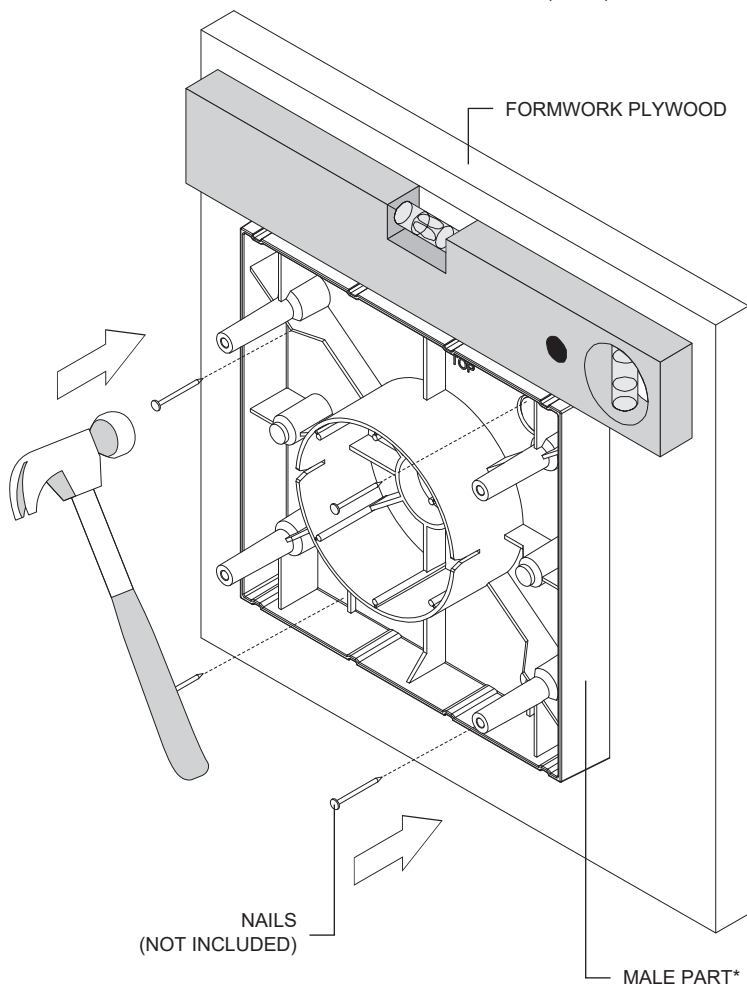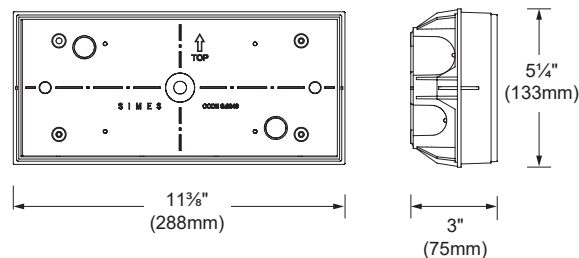

FLUSH MOUNT BACK BOX INSTALLATION (FM)

- B- ASSEMBLE THE BACK BOX MALE AND FEMALE PARTS TOGETHER USING SCREWS (**NOT INCLUDED**).
 C- INSERT A CONDUIT (**NOT INCLUDED**) IN THE APPROPRIATE KNOCK OUT (SEE DIMENSIONS BELOW).
 D- POUR CONCRETE IN THE FORMWORK WHERE THE BACK BOX IS PLACED. WAIT FOR THE CONCRETE TO DRY.
 WHEN REMOVING THE FORMWORK, PULL THE MALE PART OFF OF THE BACK BOX.

