

IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.


INSTALLATION ON STANDARD 4" JUNCTION BOX (120-277V) DIMMING 0-10V (D10)

- A- UNFASTEN THE CANOPY PHILLIPS SCREWS, AND REMOVE THE CROSSBAR FROM THE CANOPY.
KEEP THE SCREWS IN SAFE PLACE.
- B- SCREW THE CROSSBAR TO THE JUNCTION BOX, USING (2) 8-32 SCREWS (**NOT INCLUDED**).
- C- MAKE ALL THE NECESSARY CONNECTIONS (**SEE WIRING DIAGRAM**) USING TWIST CONNECTORS (**NOT INCLUDED**).
- D- LIFT THE CANOPY UP TO THE CROSSBAR AND FASTEN WITH THE KEPT PHILLIPS SCREWS.

A + B + C + D

WIRING DIAGRAM


DIMMING
0-10V (D01 / D10)
120-277V

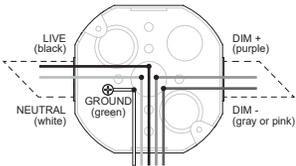

FIXTURE CABLES

WIRING DIAGRAM

DIMMING 120V ONLY
TRIAC/ELV (LTE) or TRIAC (D3)

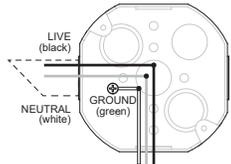

FIXTURE CABLES

