
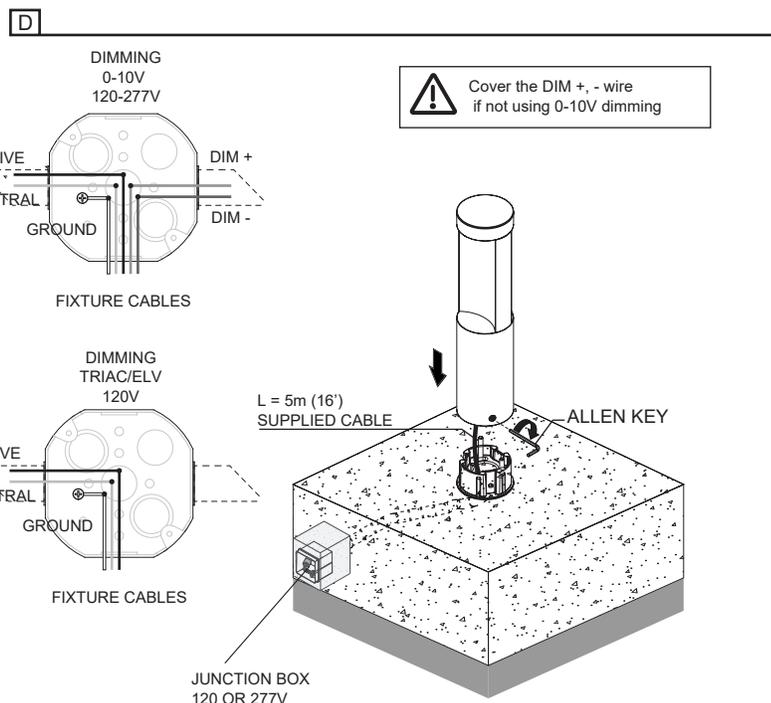
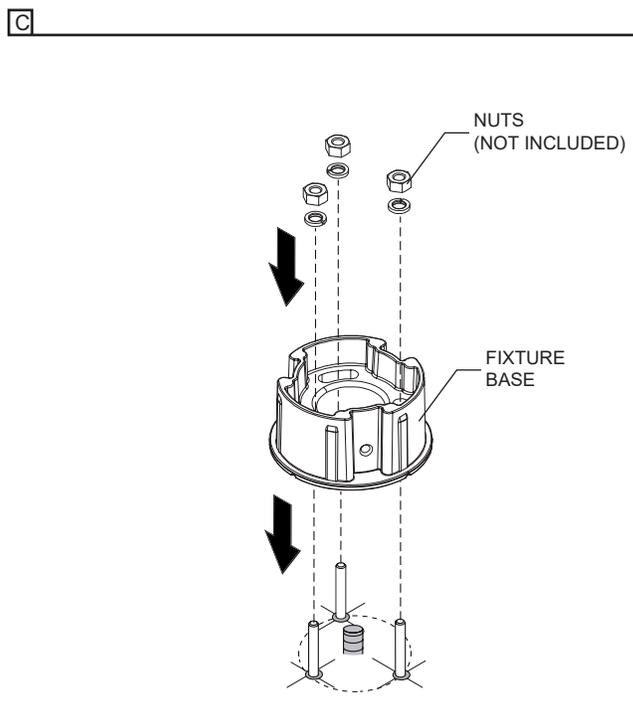
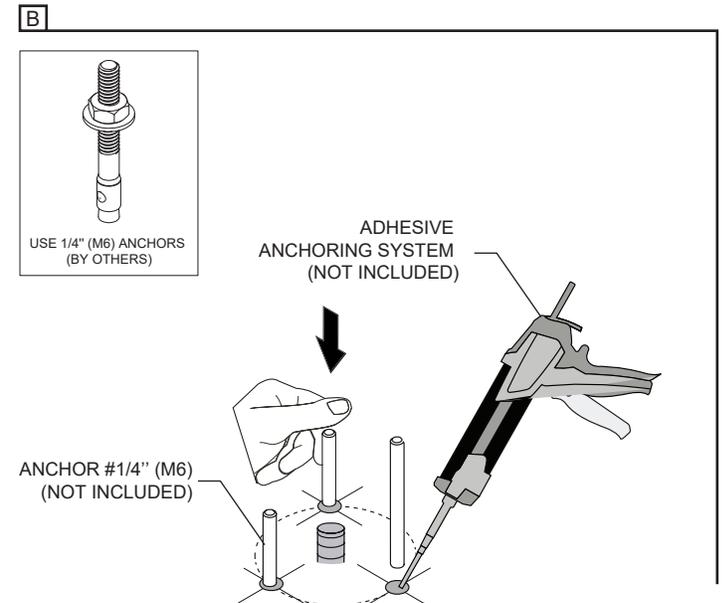


IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT. PROPER GROUNDING IS REQUIRED FOR SAFETY.




STICK 3 SURFACE INTALLATION WITH FIXTURE WHIP (FW-UNV)

- A- PRE-DRILL THE GROUND TO FACILITATE THE INSERTION OF THE ANCHOR (**NOT INCLUDED**).
- B- APPLY THE ADHESIVE (**NOT INCLUDED**), THEN INSERT THE (3) ANCHORS.
- C- PLACE THE BASE ON THE SURFACE, ENSURING THE ANCHORS GO THROUGH THE DESIGNATED HOLES SO THE ENTIRE ASSEMBLY CAN BE SECURED WITH THE (3) NUTS (**NOT INCLUDED**).
- D- PASS THE WIRES IN THE RECESSED PIPE TO A REMOTE JUNCTION BOX. MAKE ALL NECESSARY CONNECTIONS. SNAP THE FIXTURE BACK ON THE BASE AND LOCK IT USING AN ALLEN KEY.

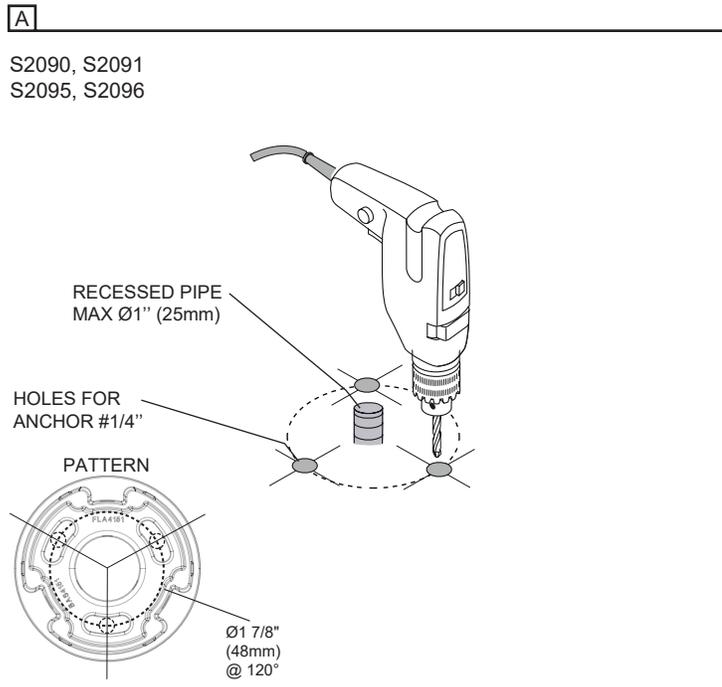

STICK 3 SURFACE INTALLATION WITH FLANGE ACCESSORY (S2099) (FW-UNV)

- A- PREPARE THE DESIRED DRAINING USING 8"-12" (20-30CM) OF GRAVEL UNDER THE FLANGE.
INSTALL AN APPROPRIATE ELECTRICAL CONDUIT (**NOT INCLUDED**) THROUGH THE FLANGE.
- B- POUR CONCRETE IN AND MAKE SURE THAT IT SITS 5MM UNDER THE TOP OF THE FLANGE.
- C- SEPARATE FIXTURE FROM ITS BASE. FASTEN THE BASE ON THE FLANGE ACCESSORY (**S2099 TO BE ORDERED SEPARATELY**) USING THE PROVIDED (3) NUTS. PASS CABLE IN RECESSED PIPE. MAKE NECESSARY CONNECTIONS.
- D- SNAP THE FIXTURE BACK ON THE BASE AND LOCK IT USING AN ALLEN KEY.

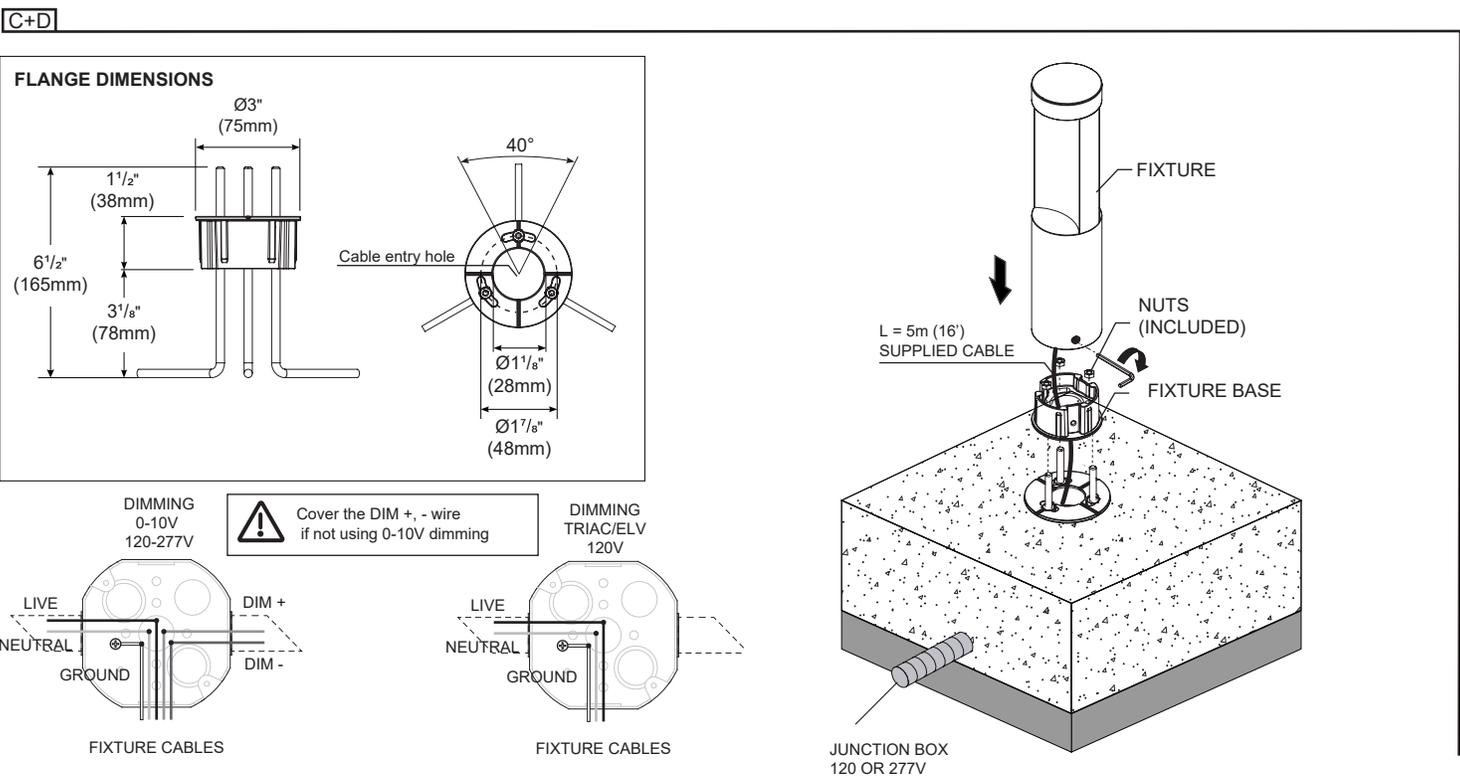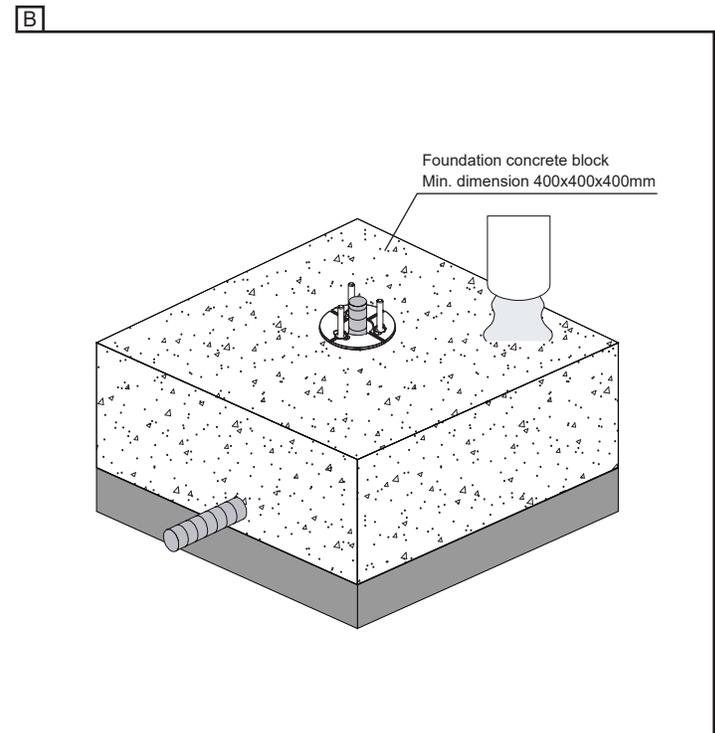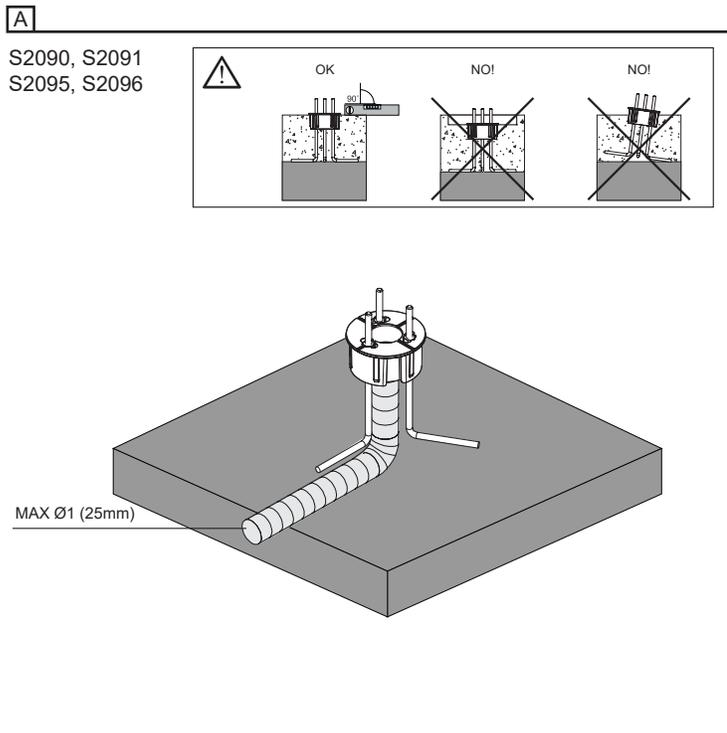

STICK 3 INTALLATION WITH STAKE ACCESSORY (S2098) (FW-UNV)

- A- PRE-DRILL THE GROUND TO FACILITATE THE INSERTION OF THE STAKE WITH A 3/8" DRILLING BIT.
- B- INSERT 2 FLAT HEAD SCREWS BEFORE ATTACHING THE PROVIDED BRACKET TO THE BASE OF THE FIXTURE USING (3) SCREWS AND (3) NUTS (INCLUDED) WITH AN ALLEN KEY.
- C- FASTEN THE BASE ON THE STAKE ACCESSORY (S2098 TO BE ORDERED SEPARATELY) USING THE (2) NUTS (INCLUDED).
- D- USE A RUBBER Mallet TO INSERT THE STAKE INTO THE SOIL. THE STOPPER SURFACE SHOULD BE RESTING ON THE SOIL.
- E- PASS THE WIRE IN THE RECESSED PIPE TO A REMOTE JUNCTION BOX. MAKE ALL NECESSARY CONNECTIONS.
SNAP THE FIXTURE BACK ON THE BASE AND LOCK IT USING AN ALLEN KEY.

