

IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.


THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

⚠ DISCONNECT THE MAIN LINE BEFORE WIRING SECONDARY CONNECTORS.


INSTALLATION IN CONCRETE WITH BACKBOX - TO REMOTE DRIVER (24V)

- A- APPLY ADHESIVE TEMPLATE (**INCLUDED**) TO THE OUTSIDE OF THE PLYWOOD FORMWORK. ALLOW AT LEAST 2" (50mm) OF COMPLETE WALL EITHER END OF THE CONCRETE VOID.
- B- USING A Ø¼" (6.5mm) DRILL BIT, DRILL HOLES INTO PLYWOOD AT THE MARKED SPOTS (**ADHESIVE TEMPLATE**) OR HOLES (**DRILLING JIG**).
- C- FASTEN THE THREADED RODS (**INCLUDED**) TO THE HOUSING.
- D- INSERT THE THREADED RODS THROUGH HOLES IN THE PLYWOOD FORMWORK.
- *IT IS RECOMMENDED TO APPLY RELEASING AGENT (**BY OTHERS**) ON THE HOUSING ONLY.
- E- USE THUMBNUITS (**INCLUDED**) TO SECURE HOUSING TO THE PLYWOOD FORMWORK.


A + B

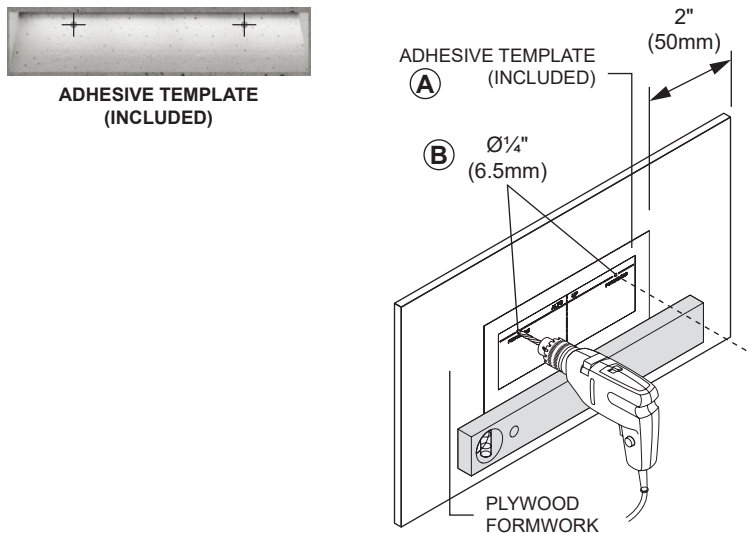


C

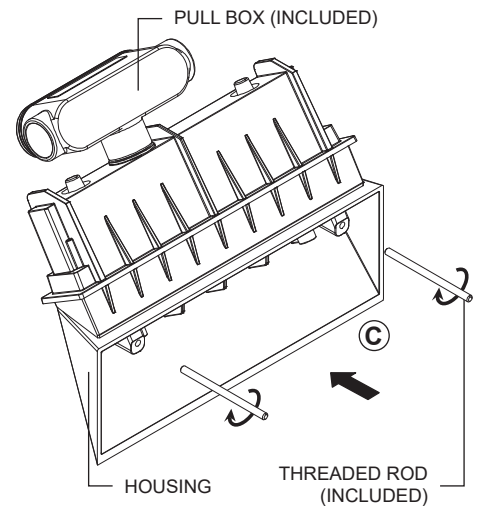

D

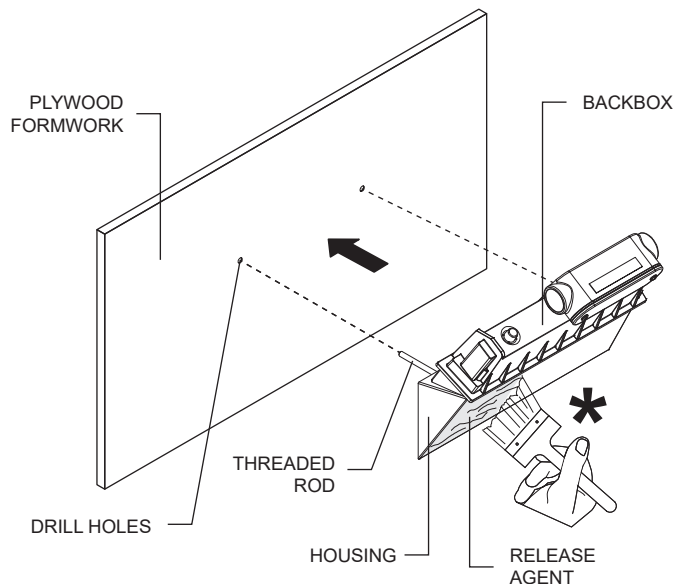

E

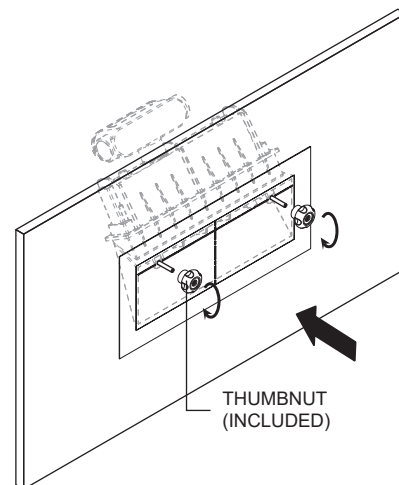

F- CONNECT WIRE CONDUIT (**NOT INCLUDED**) TO THE PULL BOX AND SECURE WITH ADEQUATE ADHESIVE (**NOT INCLUDED**).

G- UNSCREW PULL BOX COVER PLATE.

H- FEED WIRES THROUGH WIRE CONDUIT . (**IT IS RECOMMENDED TO INSERT AT LEAST 12" OF WIRE INSIDE THE BACKBOX.**)


ONCE THE WIRES ARE FED THROUGH, SEAL REMAINING PULL BOX OPENING WITH CAP AND LOCKNUT (**INCLUDED**).

***FOR DAISY CHAIN SETUP, ONLY SEAL THE LAST PULL BOX OF THE LINE.**


I- POUR CONCRET INTO STRUCTURE.

J- ONCE CONCRETE IS SET, UNSCREW THUMBNUTS AND THREADED RODS THEN REMOVE THE PLYWOOD FROM THE CONCRETE.


F + G

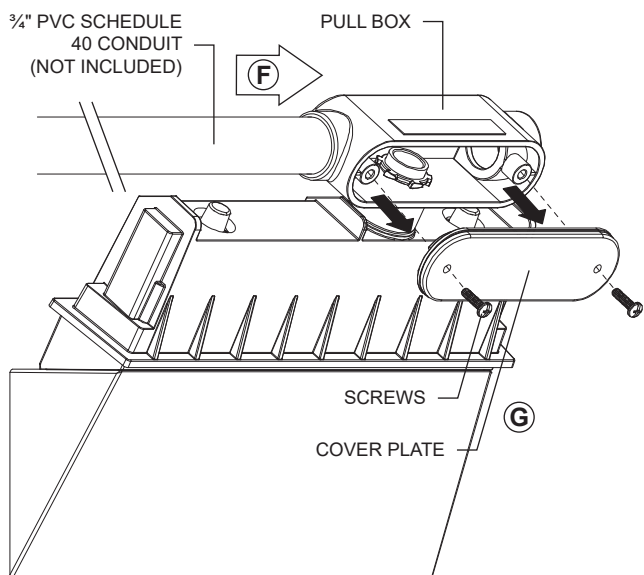


H

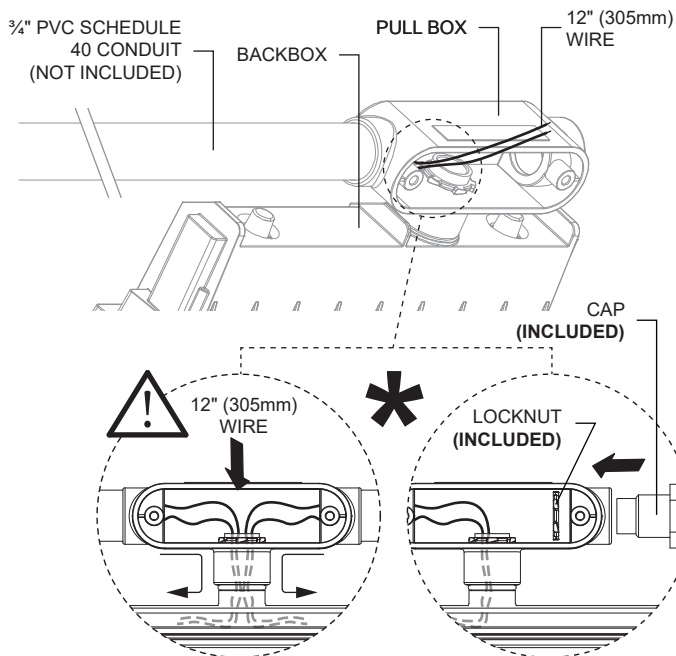

I

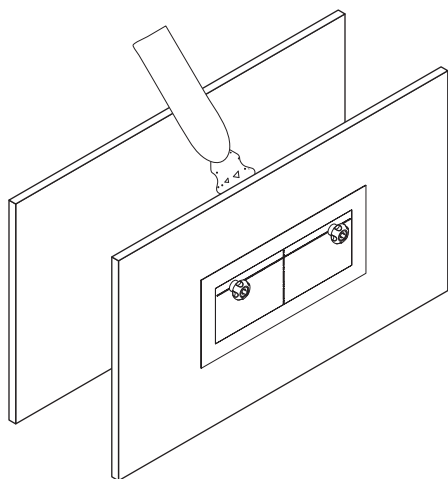

J

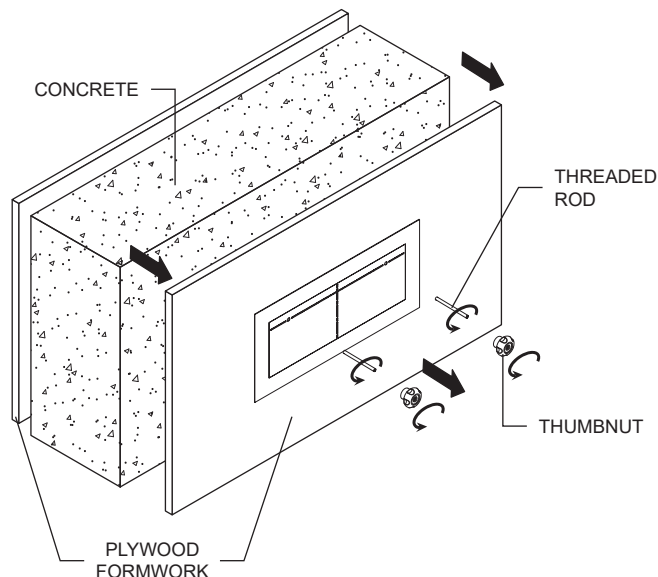


K- LOOSEN THE HOUSING ANCHOR SCREWS WITH A DRILL.

L- HOLD AN ANCHOR SCREW WITH PLIERS AND HIT IT WITH A HAMMER TO REMOVE HOUSING FROM CONCRETE.


M- CONNECT LIGHTING FIXTURE TO THE BACKBOX WIRES USING THE WATERTIGHT CONNECTORS (**INCLUDED**). (**SEE WIRING DIAGRAM BELOW**)

N- INSERT FIXTURE INTO THE BACKBOX AND SCREW THE SOCKET HEAD SCREWS WITH ALLEN KEY (**INCLUDED**). BE CAREFUL NOT TO SQUEEZE ANY WIRES TO PREVENT MALFUNCTIONS.


K

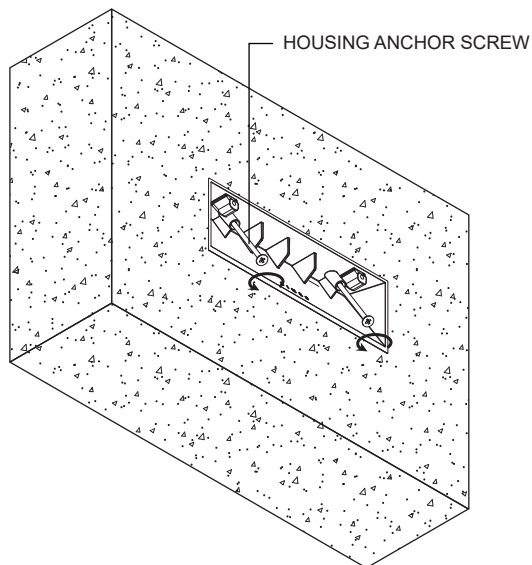


L

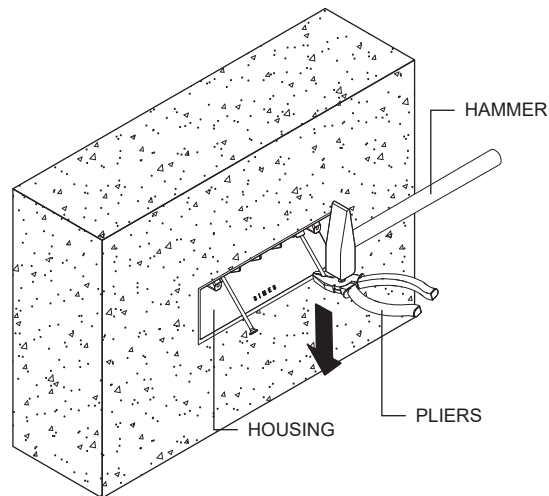

M

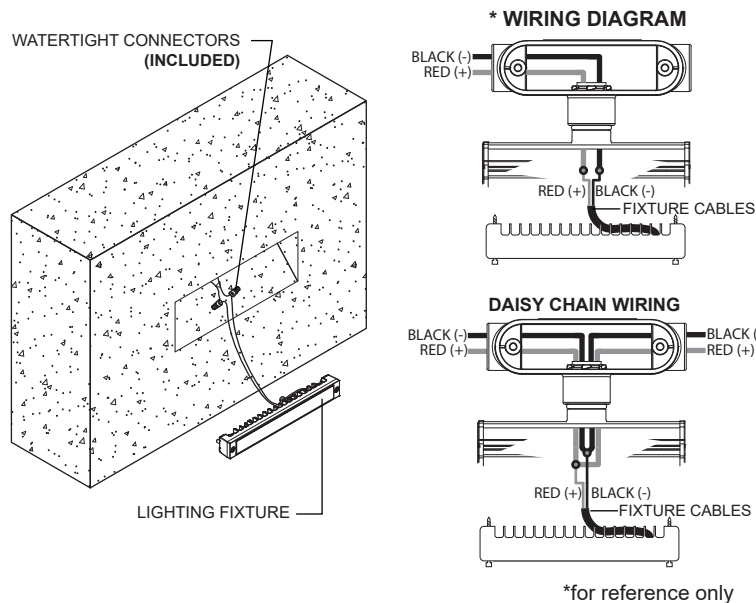

N

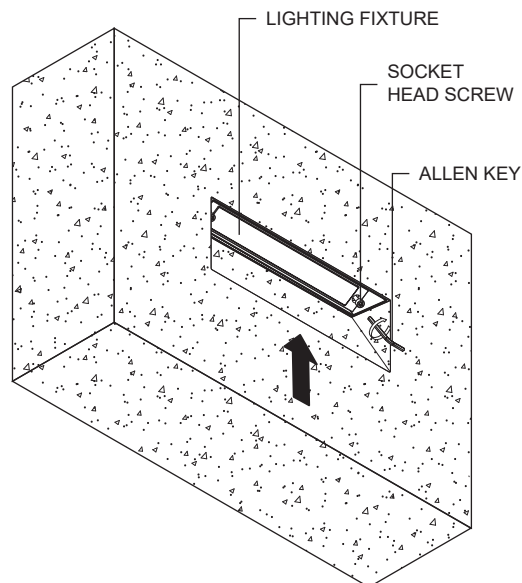

MAINTENANCE

O- TO REMOVE THE LIGHTING FIXTURE, LOOSEN THE SOCKET HEAD SCREWS WITH ALLEN KEY (**INCLUDED**).

