
IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

INSTALLING PROJECTOR WITH CANOPY (120-277V)

FOR USE WITH STANDARD 4" JUNCTION BOX (120-277V)

- A- RAISE PROJECTOR TO CEILING AND MAKE ALL NECESSARY CONNECTIONS.
- B- FASTEN CANOPY PROJECTOR IN JUNCTION BOX USING THE TWO PHILLIPS FLAT HEAD SCREWS PROVIDED.

A + B

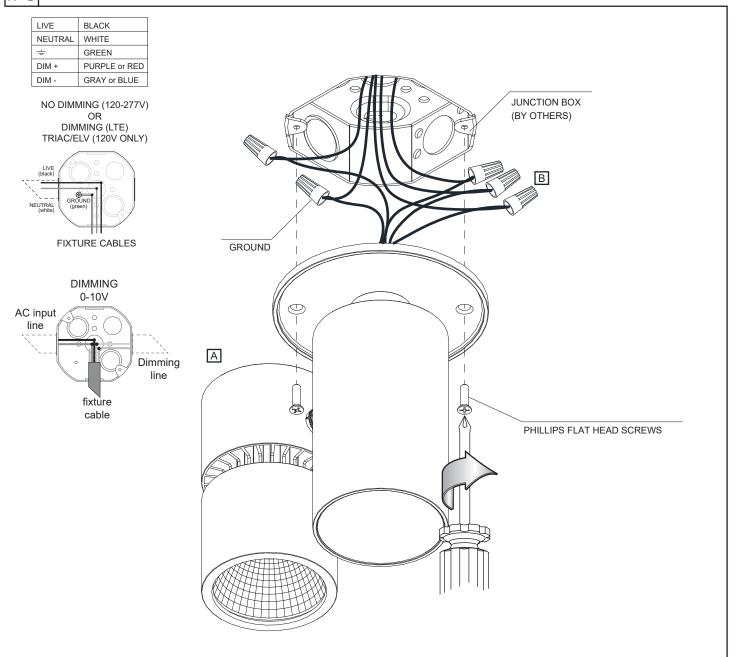


LAST UPDATE: APRIL 12, 2021

FARETTO LARGE MODELS: 1690C


PAN ANGLE POSITION (1690C)

A- SET THE DESIRED PAN POSITION (MAXIMUM OF 330° AXIAL ROTATION). B-LOCK THE POSITION WITH THE PAN ADJUSTMENT LOCKING SCREW

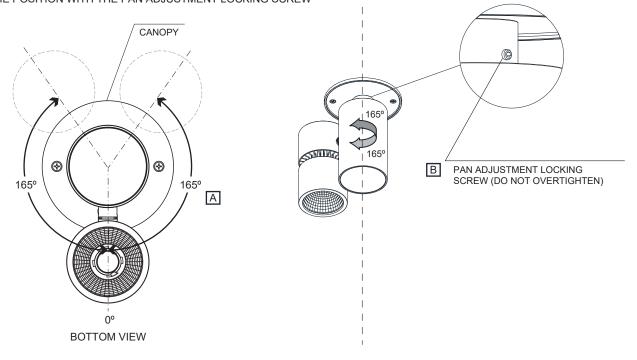

TILT ANGLE POSITION (1690C)


A- SET THE DESIRED TILT POSITION (MAXIMUM OF 90° AXIAL ROTATION) AND LOCK THE POSITION WITH THE B- TILT ADJUSTMENT LOCKING SCREW, USING THE 5/64 ALLEN KEY PROVIDED.

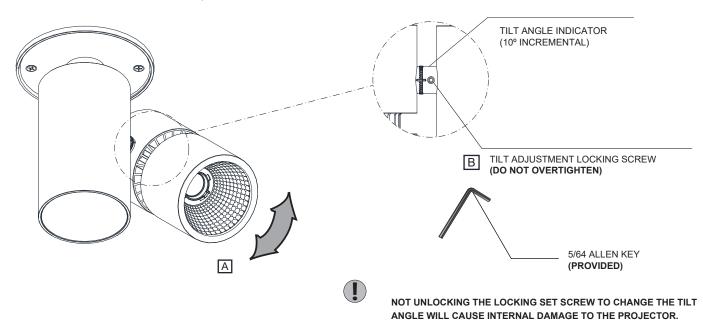

LAST UPDATE: APRIL 12, 2021

CL - R11


REPLACING OPTIC FOR REFLECTOR MODELS

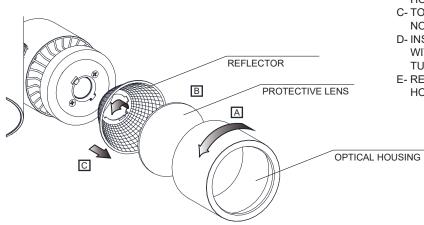

- A- REMOVE OPTICAL HOUSING BY ROTATING COUNTERCLOCKWISE.
- B- LEAVE THE PROTECTIVE LENS IN THE OPTICAL HOUSING.
- C- TO REMOVE THE REFLECTOR ROTATE TO ALIGN NOTCHES AND MOUNTING FINGERS AND PULL.
- D-INSTALL NEW REFLECTOR BY ALIGNING NOTCHES WITH MOUNTING FINGERS AND ROTATE A QUARTER TURN CLOCKWISE.
- E- RE-INSTALL THE PROTECTIVE LENS AND OPTICAL HOUSING TOGETHER BY ROTATING CLOCKWISE.

ACCESSORIES

- A- TO REPLACE OR ADD AN ACCESSORY, REMOVE OPTICAL HOUSING BY ROTATING IT COUNTERCLOCKWISE.
- B- INSERT ONE OR MORE ACCESSORIES INTO THE OPTIC HOUSING.
- C- RE-INSTALL THE ACCESSORIES AND OPTICAL HOUSING TOGETHER BY ROTATING CLOCKWISE. (A MAXIMUM OF 3 ACCESSORIES IN COMBINATION)

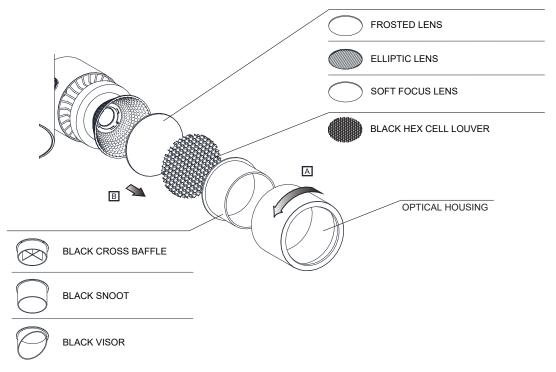

LAST UPDATE: APRIL 12, 2021

CL - R11