


MOVIT SURFACE MOUNT

MODEL : S.3000 / S.3005 / S.3050 / S.3055 / S.3070 / S.3075
FOR Ø4" POLE WITH TENON

IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.


⚠ DISCONNECT THE MAIN LINE BEFORE WIRING SECONDARY CONNECTORS.

MOUNTING ACCESSORIES

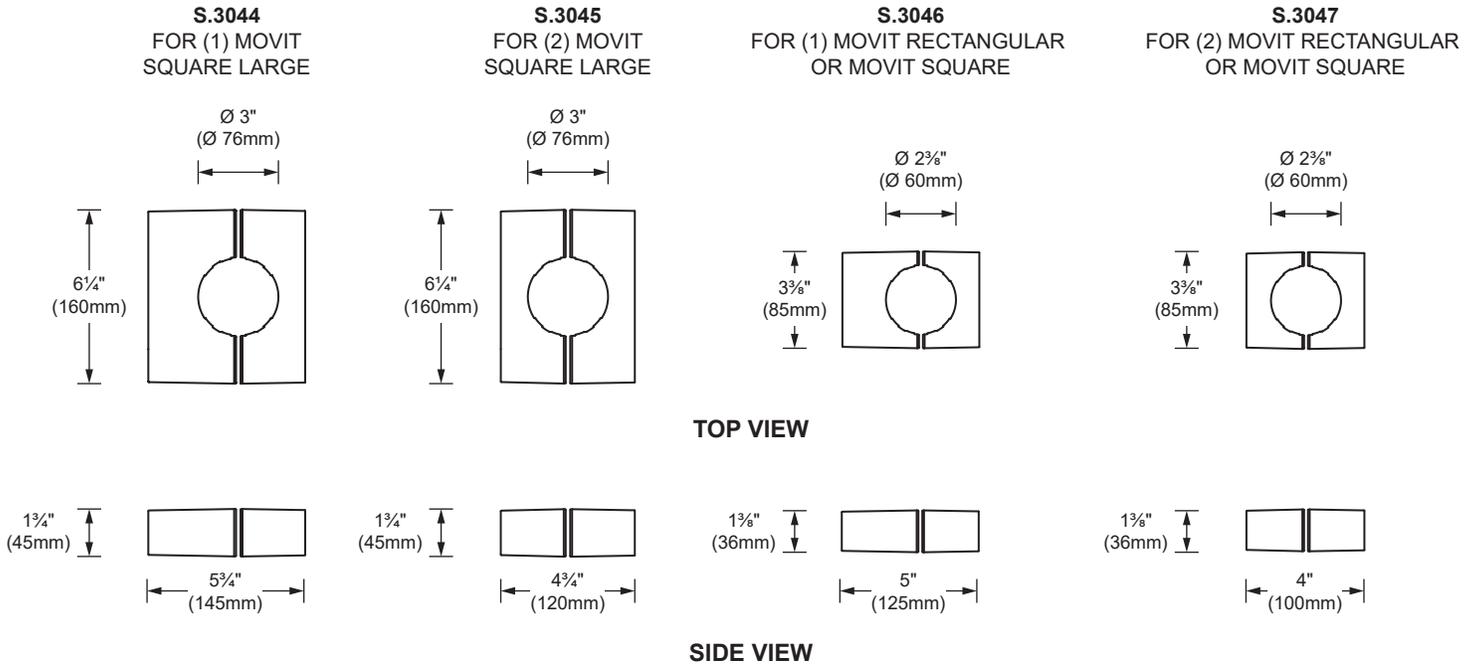

POLE PREPARATION

- A - PRE DRILL A HOLE (Ø 7/8") FOR THE POWER CABLE INTO THE TENON.
- B - PASS CABLE THROUGH THE HOLE AND INSTALL PARTS WHILE INSURING THE 2 HOLES ARE ALIGNED.

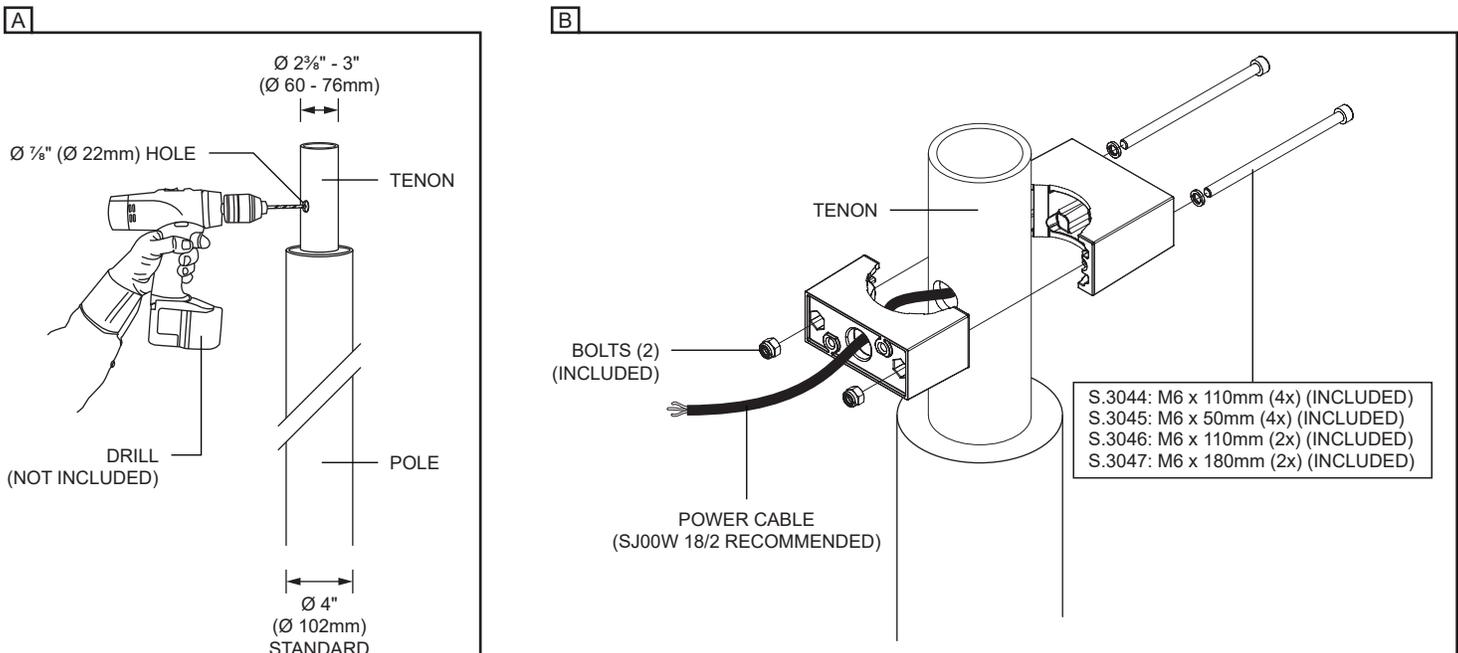

MOVIT SURFACE MOUNT


MODEL : S.3000 / S.3005 / S.3050 / S.3055 / S.3070 / S.3075
FOR Ø4" POLE WITH TENON

FIXTURE INSTALLATION

C - USE ALLEN KEY TO TIGHTEN THE SCREWS ON THE ADAPTOR.

D - MAKE CONNECTIONS USING WET LOCATION SPLICE KIT INCLUDED WITH THE FIXTURE AND INSTALL MOVIT TO THE ADAPTOR WITH INCLUDED HARDWARE.

C

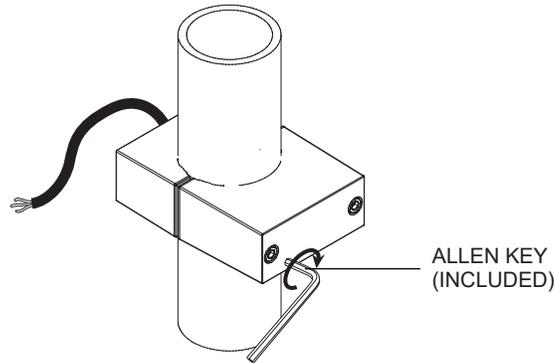

D

MOVIT RECTANGULAR
OR MOVIT SQUARE

MOVIT SQUARE LARGE

