

**IMPORTANT** - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.


THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

## INSTALLING PROJECTOR WITH CANOPY INTEGRAL DRIVER (120V) DIMMING TRIAC/ELV (15%)

FOR USE WITH STANDARD 4" OCTAGONAL JUNCTION BOX (120V).

A- MAKE ALL NECESSARY CONNECTIONS (**FOLLOWING WIRING DIAGRAM**) INSIDE THE JUNCTION BOX USING TWIST CONNECTORS (**NOT INCLUDED**).  
B- FASTEN THE CANOPY TO THE JUNCTION BOX USING THE (2) PHILLIPS HEAD SCREWS (**INCLUDED**).


A + B

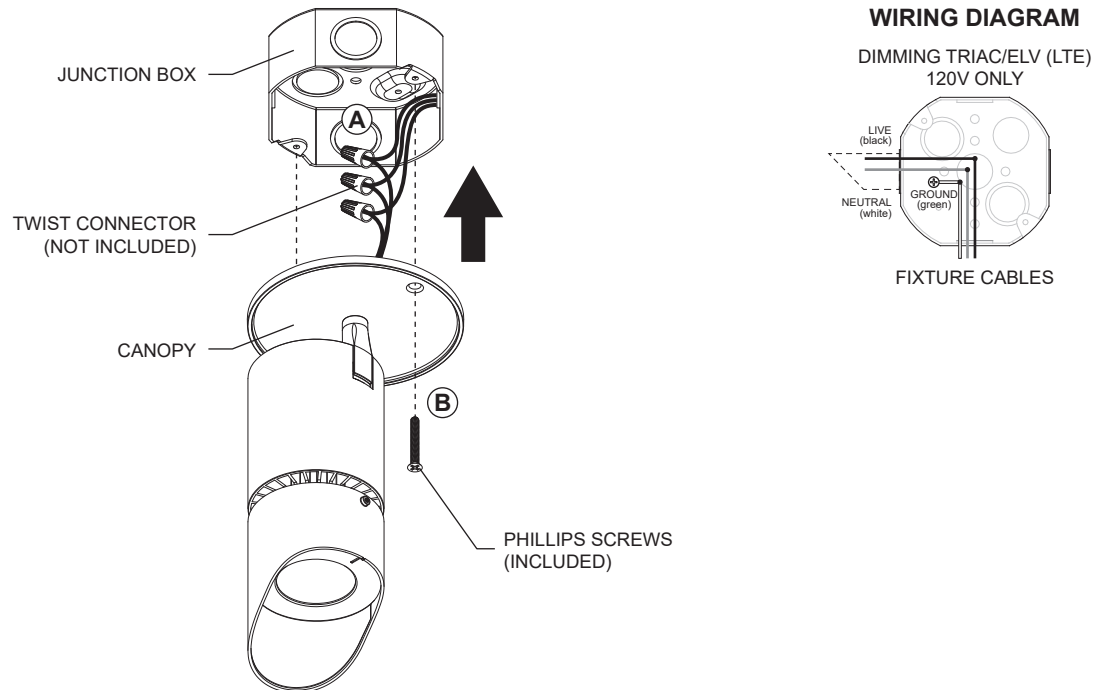

## PAN ANGLE POSITION (1770C)

A- ROTATE THE FIXTURE TO DESIRED PAN POSITION.  
(MAXIMUM OF 330° AXIAL ROTATION)


A

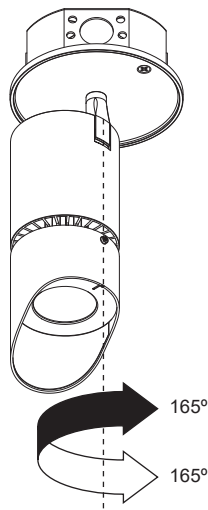

## TILT ANGLE POSITION (1770C)

A- ROTATE THE FIXTURE TO DESIRED TILT POSITION.  
(MAXIMUM OF 90° AXIAL ROTATION)

A

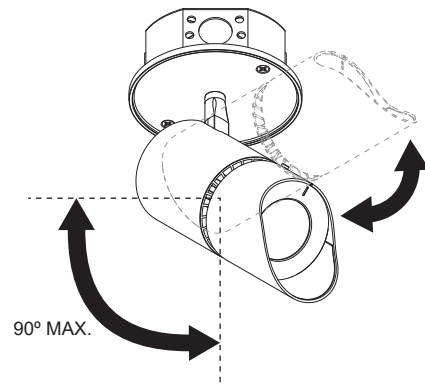

## REPLACING OPTIC

- A- UNFASTEN THE VISOR SET SCREW USING AN ALLEN KEY (**INCLUDED**) AND REMOVE THE VISOR. **DO NOT REMOVE THE SET SCREW.**
- B- UNSCREW THE OPTIC HOLDER FROM THE FIXTURE.
- C- REPLACE THE LENS AND SET THE LENS INTO THE OPTIC HOLDER PINS. **\*THE LENS GLOSSY SIDE MUST BE FACING OUTWARD.**
- D- SCREW THE OPTIC HOLDER BACK ON THE FIXTURE.
- E- UNFASTEN THE OPTIC HOLDER (2) SET SCREWS. **DO NOT COMPLETELY REMOVE THE SET SCREW.**
- F- ROTATE THE OPTIC HOLDER'S FRONT RING UNTIL THE NOTCH IS ALIGNED AND CENTERED WITH THE FIXTURE ARM.  
DO NOT ROTATE THE OPTIC HOLDER.
- G- FASTEN THE OPTIC HOLDER (2) SET SCREWS.
- H- SLIDE THE VISOR BACK ON THE FIXTURE HOLDER AND FASTEN THE SET SCREW.  
**\*MAKE SURE THE VISOR ALIGNMENT DETAIL IS ALIGNED WITH THE OPTIC HOLDER NOTCH BEFORE TIGHTENING.**

